

# halo

## TIRE INFLATOR

### **TAMPER-RESISTANT FASTENER KIT** **FA-100TR** INSTALLATION INSTRUCTIONS



# TAMPER-RESISTANT FASTENER KIT

## INSTALLATION INSTRUCTIONS

### PARTS

**16 x Security  
Screws**  
(4 per Halo)



 
+

**16 x Washers**  
(4 per Halo)



+

**Security Tool  
TK-100TR**  
(1 per vehicle)



### REQUIRED TOOLS

- Security Tool (packed separately in TK-100TR kit)
- Socket Wrench with 3/8" Drive

#### CAUTION


Installing a Halo with the Tamper Resistant Fastener Kit increases the difficulty of roadside removal.

### DESCRIPTION

The Tamper-Resistant Fastener Kit is designed and engineered to deter theft attempts. The security tool is shipped separately in a labeled bag and should be stored in the vehicle after installation. Each Tamper-Resistant Fastener Kit contains two stickers with roadside instructions - one for each side of the vehicle.

### INSTRUCTIONS

1. Use security tool and socket wrench to install Halo with security screws.
2. Place security tool in original bag and place bag in an easily accessible storage location in tractor cabin.
3. Place one sticker on each side of the vehicle in location easily seen by roadside technician. Prepare sticker location by making sure surface is clean and dry before applying.
4. Alert driver about location of the security tool and the stickers.

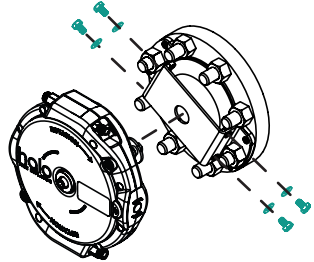

**Torque to 20 ft-lb ± 2**



Security Fasteners should not be mixed with normal fasteners. Ensure that each Halo is installed with all four (4) security fasteners.