


Fujitsu Large Wall Mounted Disassembly instruction



Once the front cover is removed the three front screws can be accessed. Remove the three screws located in the front of the unit.

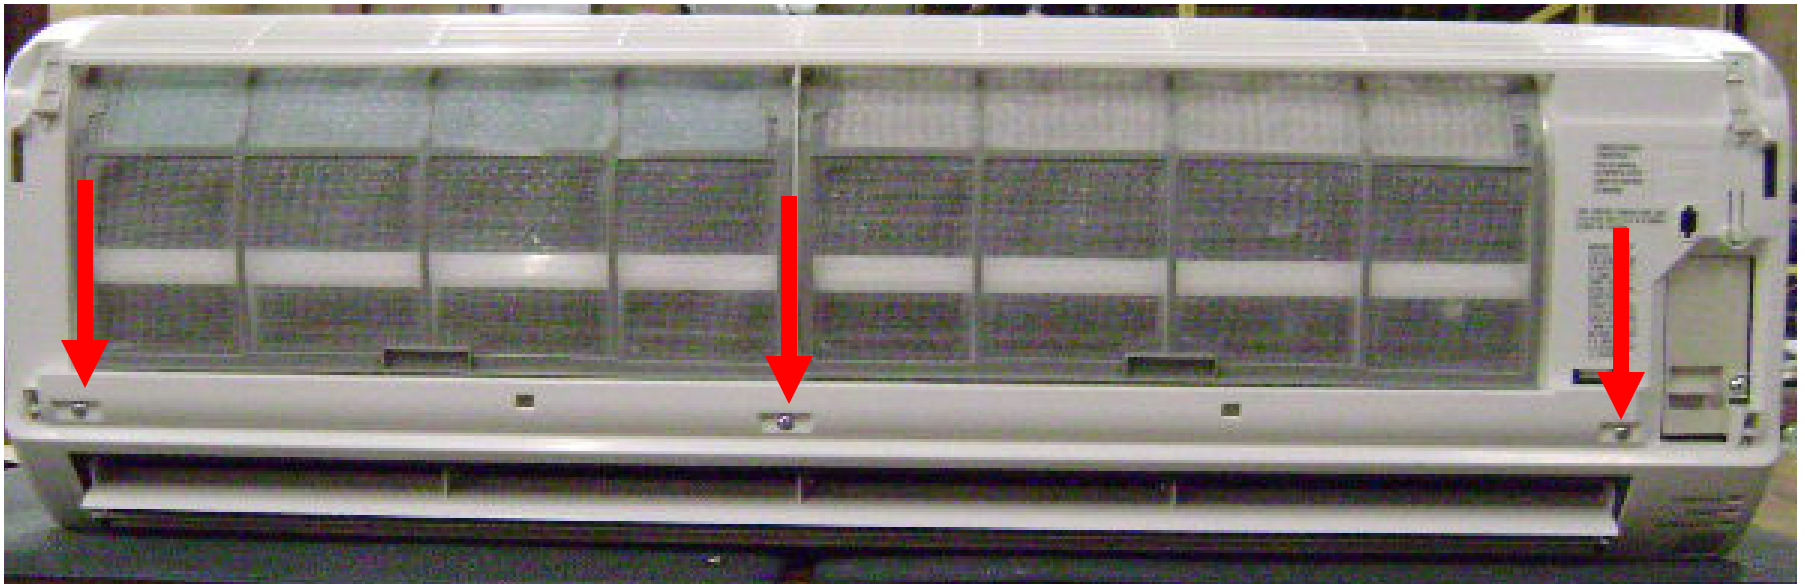


FRONT



Remove the plastic screw covers, then remove the three screws located at the bottom of the unit.




After removing the cover, remove the three screws as indicated.

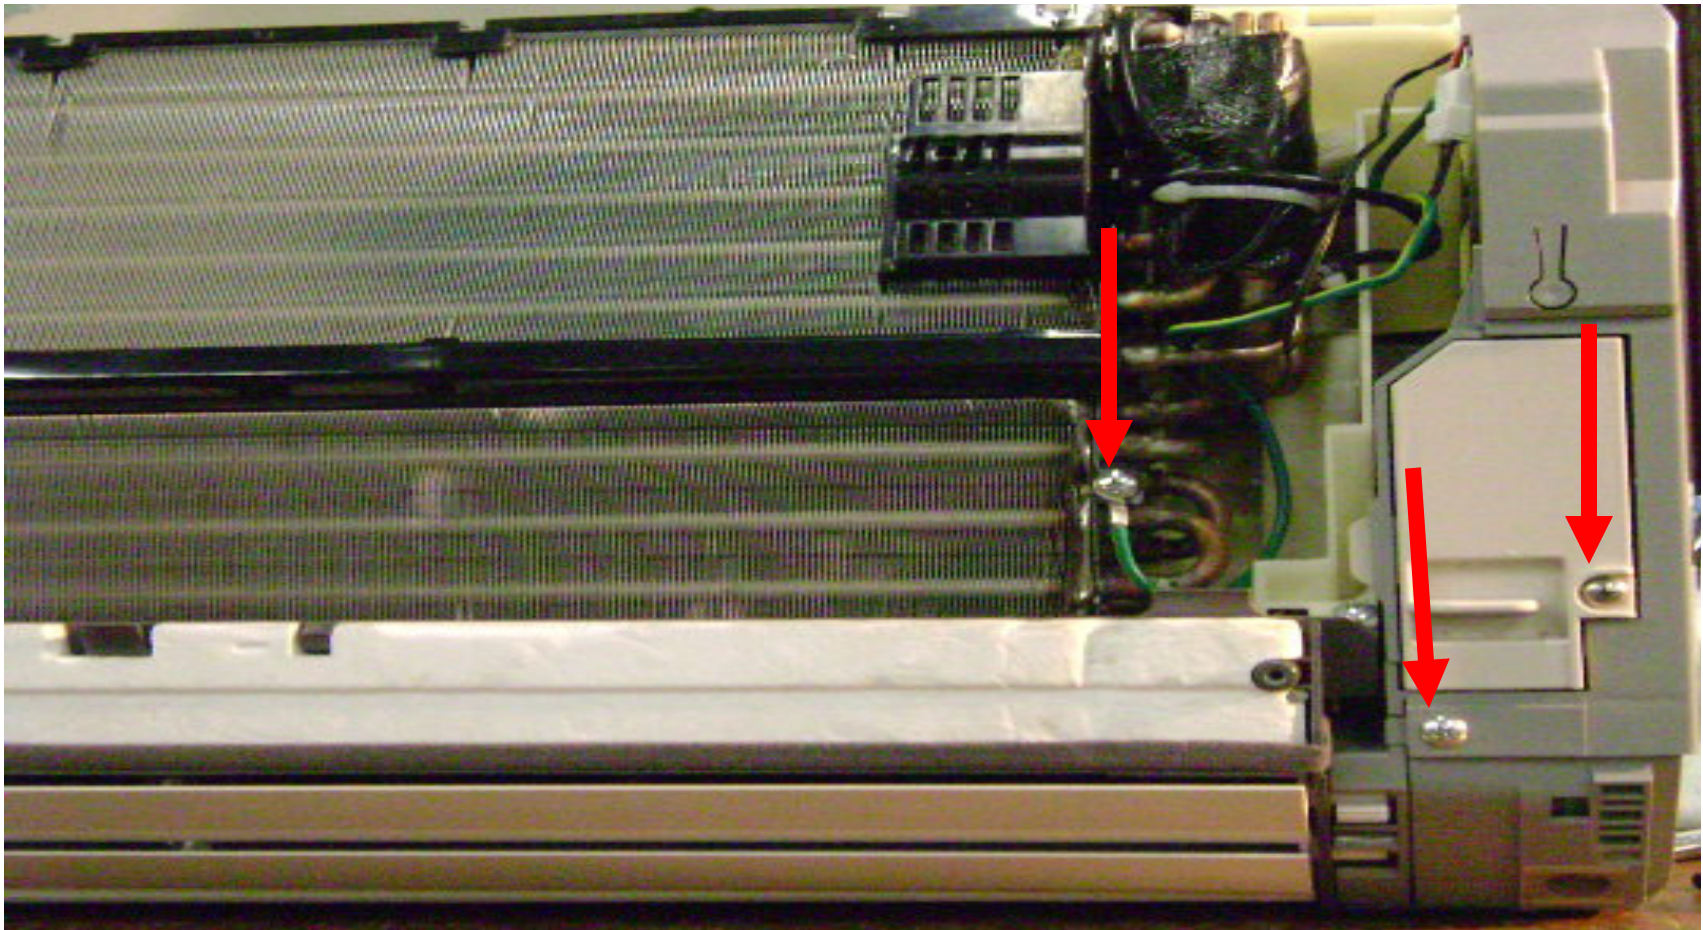


Remove these screws from the top right of the unit and also lower right of the unit.

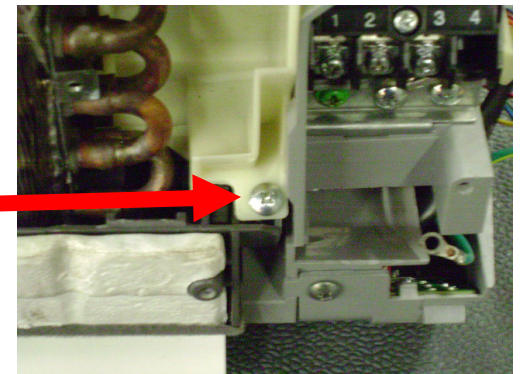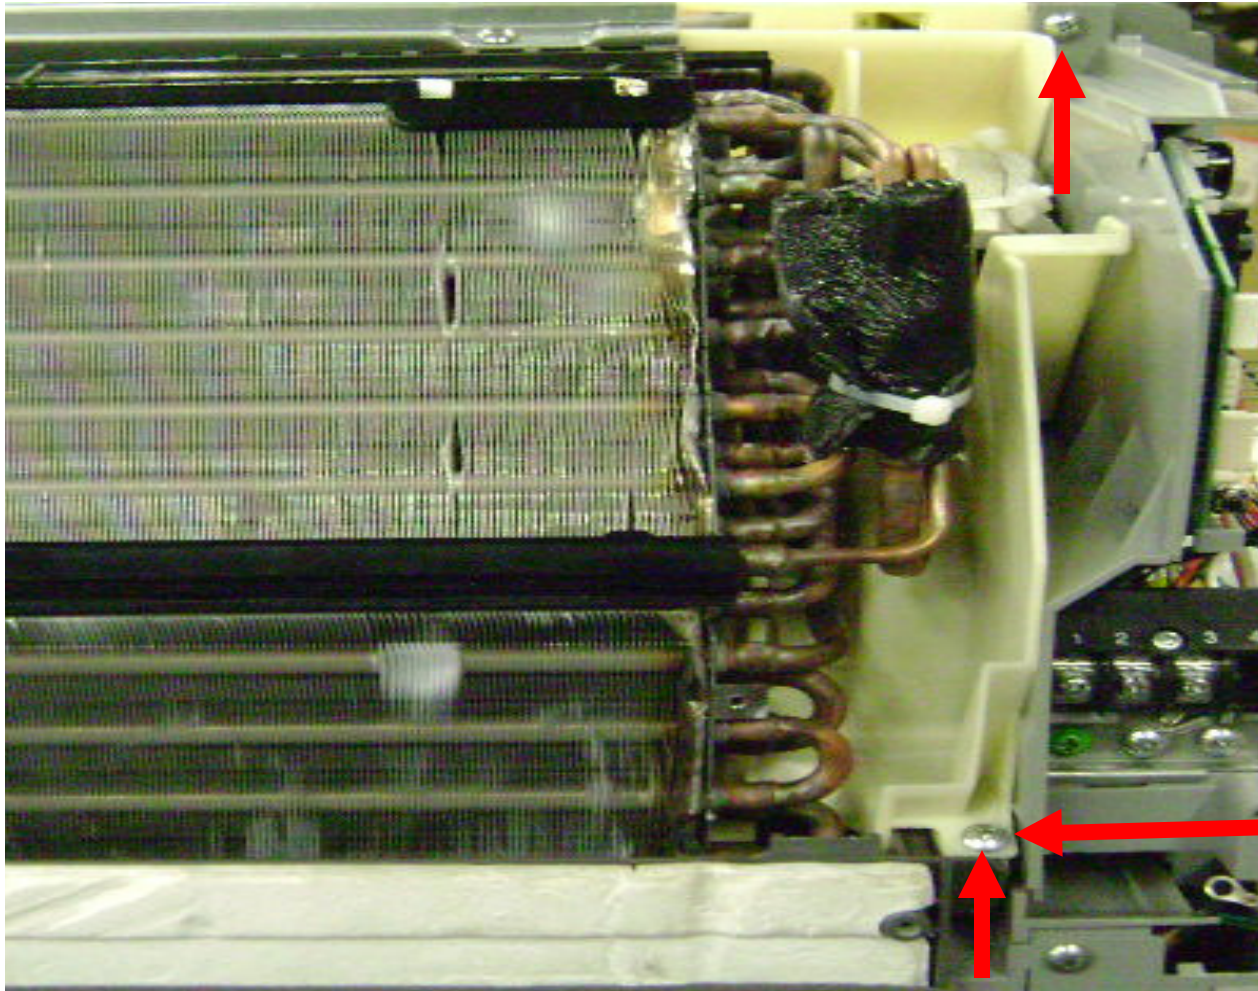


Remove these two screws on the left side of the unit. After removing these two screws the coil and the drip pan assembly will separate.

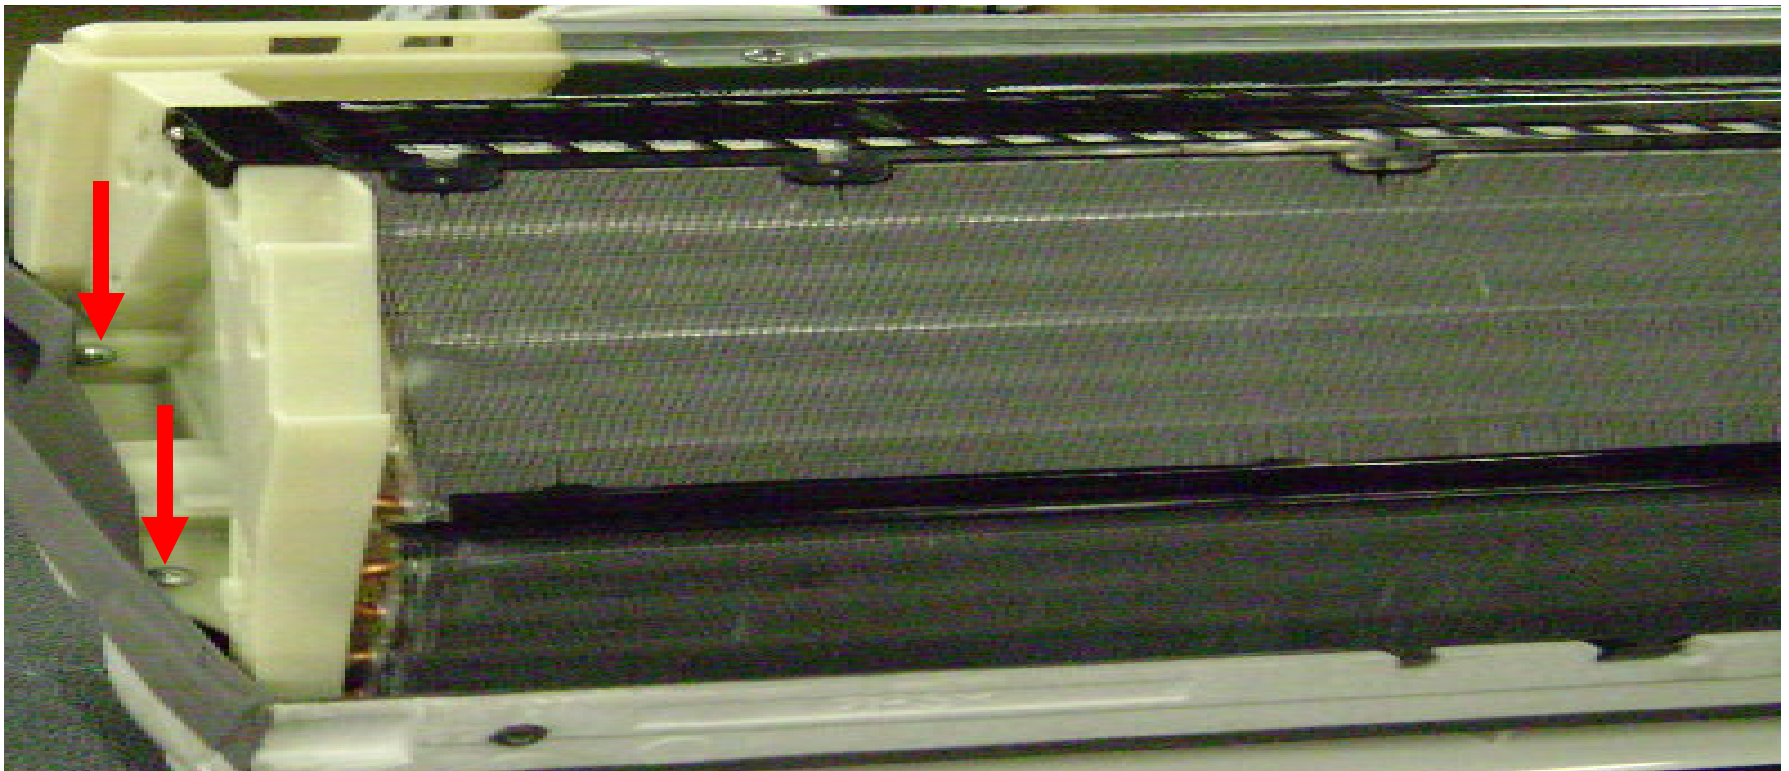


Make sure that the units bottom rear mounting clips are detached from its wall bracket.

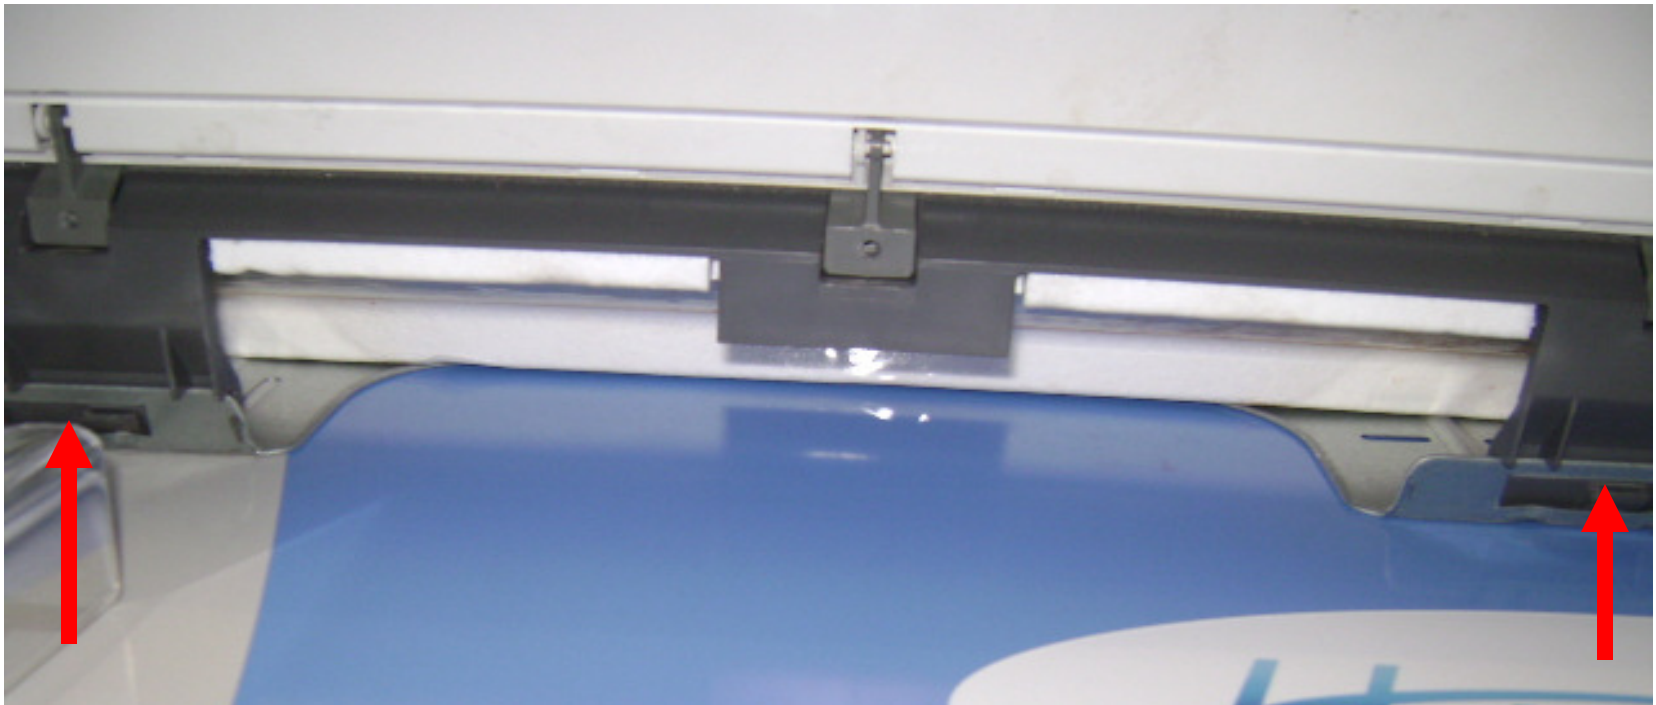


Separate the coil from the drain pan assembly.

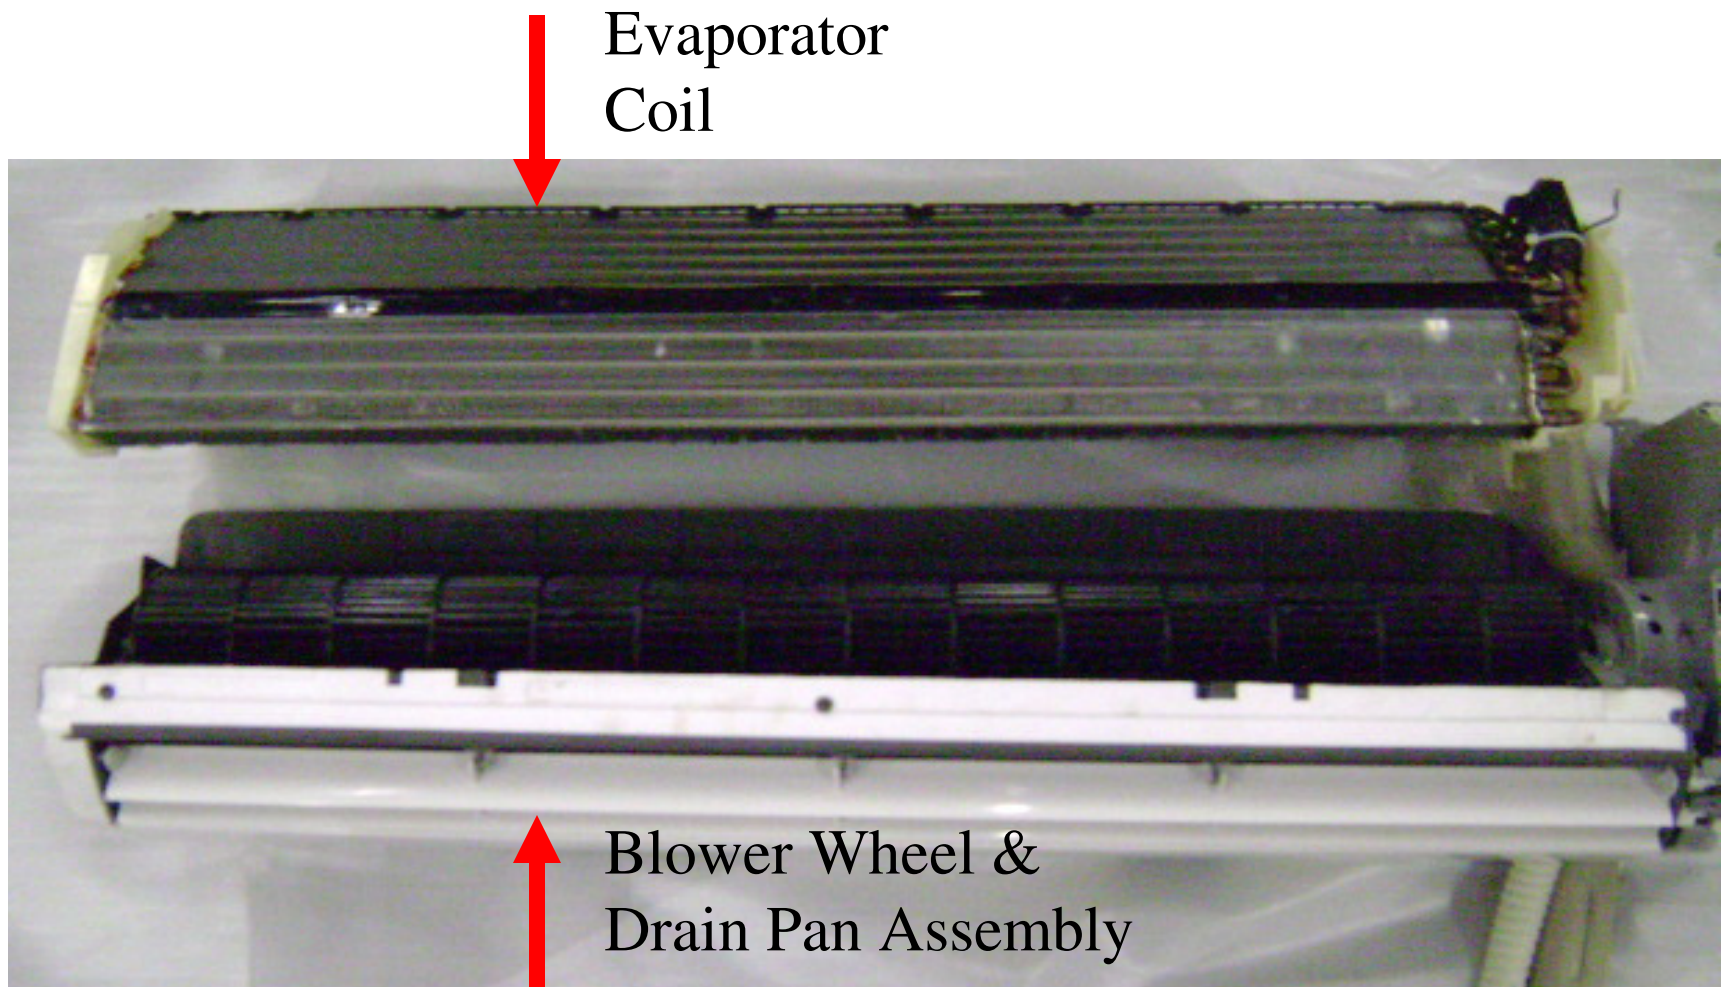

Remove these four screws on the fan motor housing , then remove the housing.

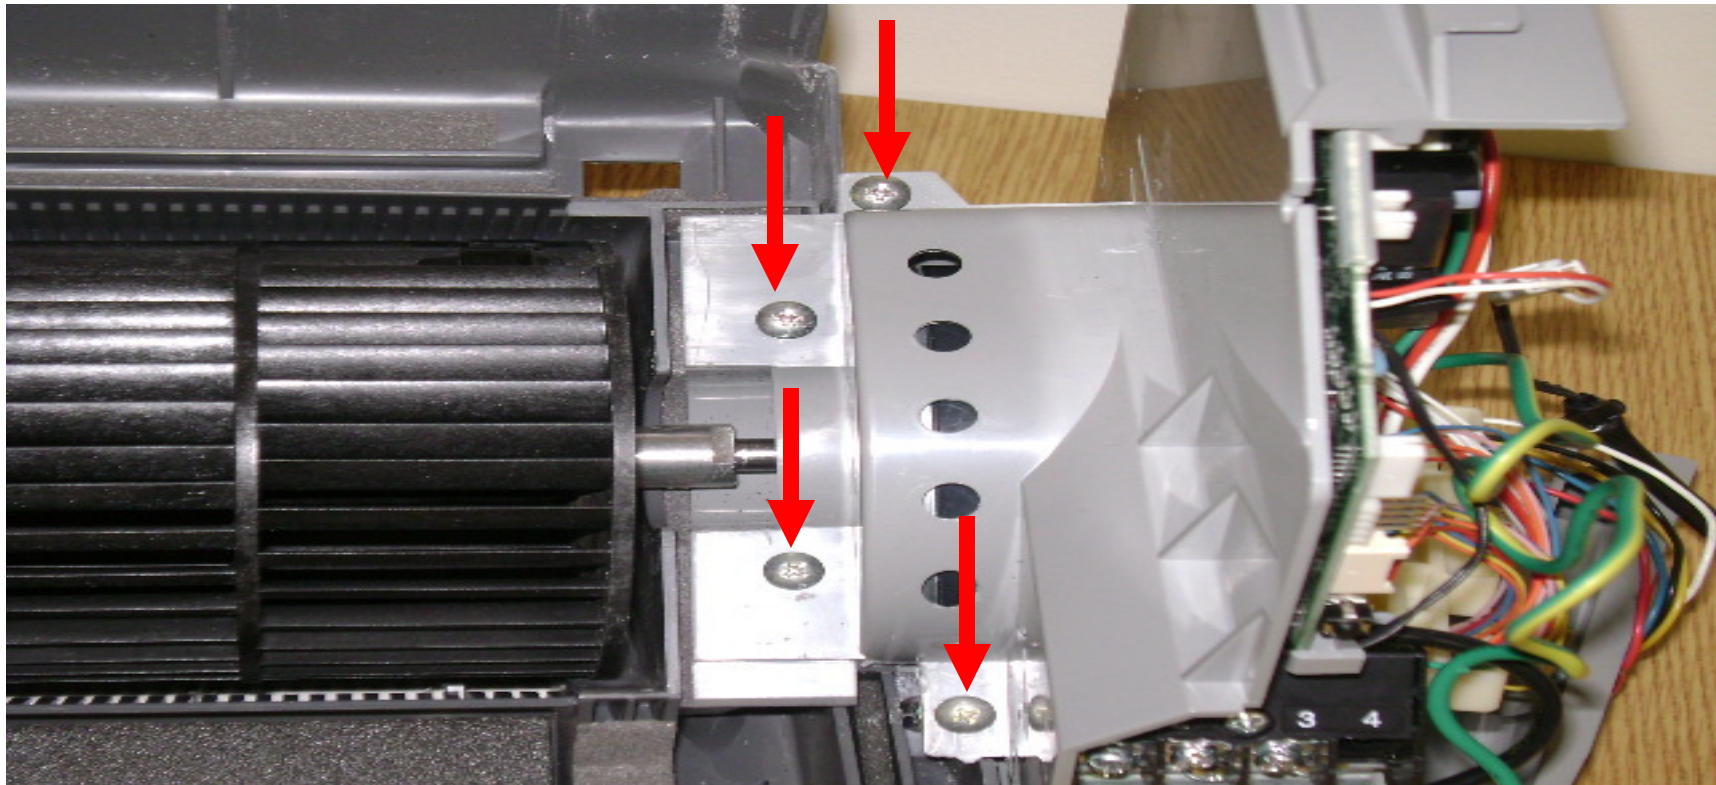

Remove set screw, then blower wheel and fan assembly should separate.

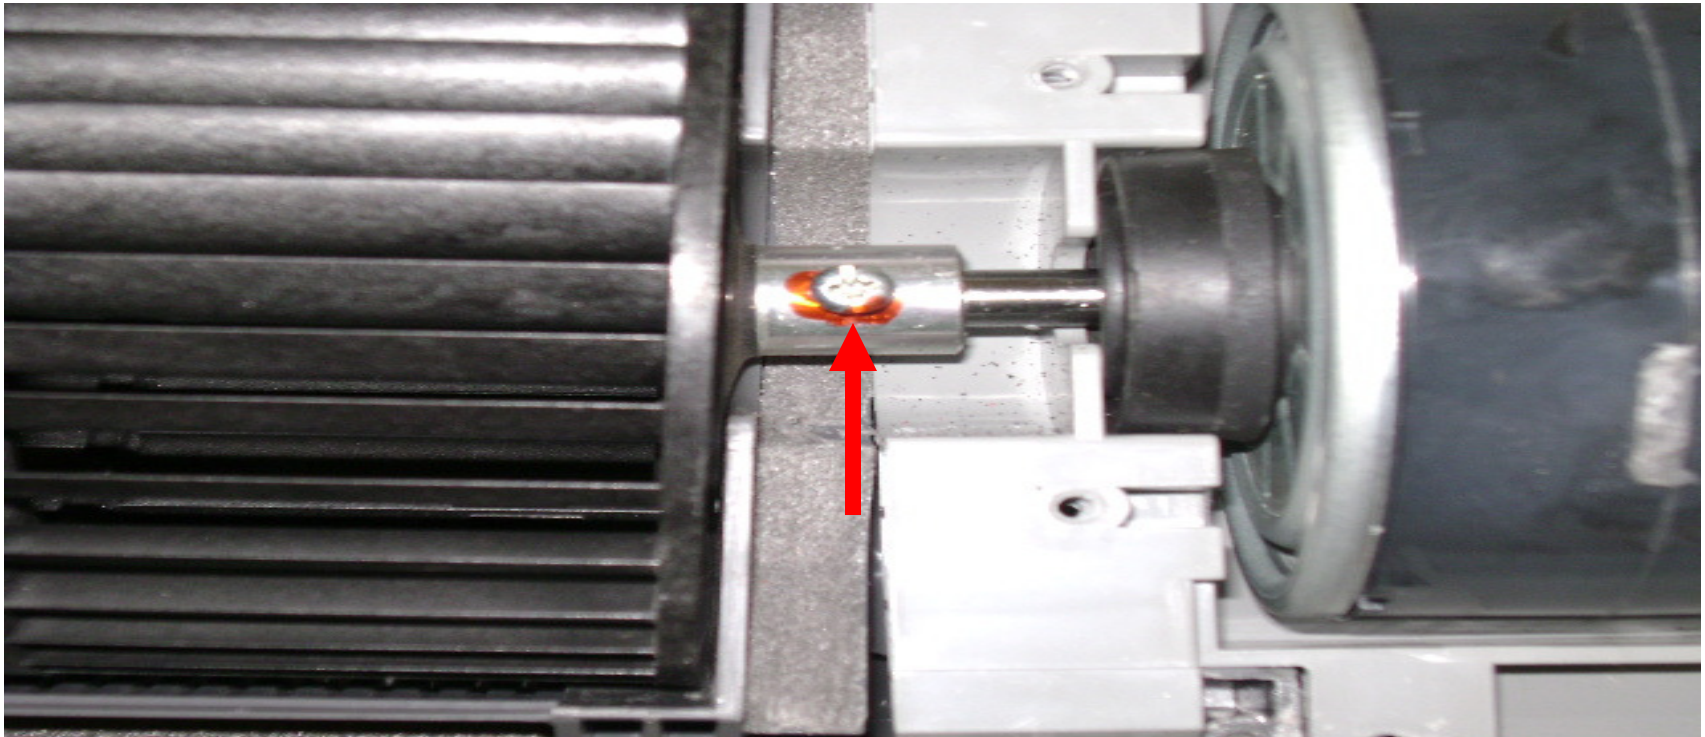

Separate and remove blower wheel and fan motor.

