





Rudder Mount/Steering Handle Pin Replacement

1. Remove the old pin assembly and install the new parts per the diagram shown here.

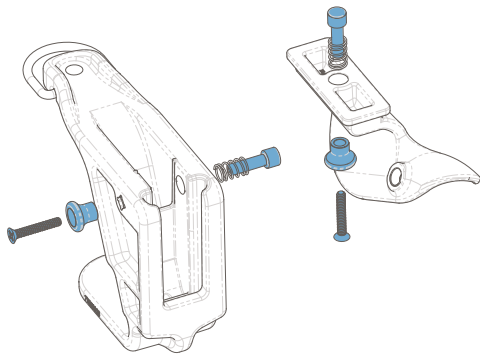

2. Grip the pin end with a pair of pliers and tighten down the screw to complete the assembly.

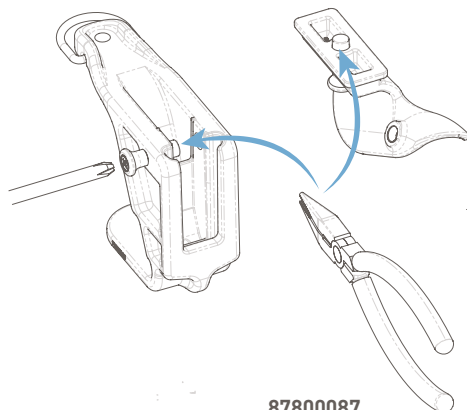


87800087




Rudder Mount/Steering Handle Pin Replacement

1. Remove the old pin assembly and install the new parts per the diagram shown here.

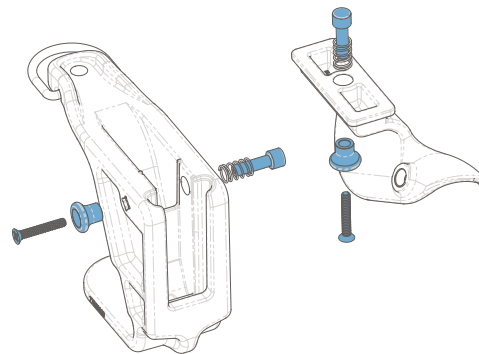

2. Grip the pin end with a pair of pliers and tighten down the screw to complete the assembly.

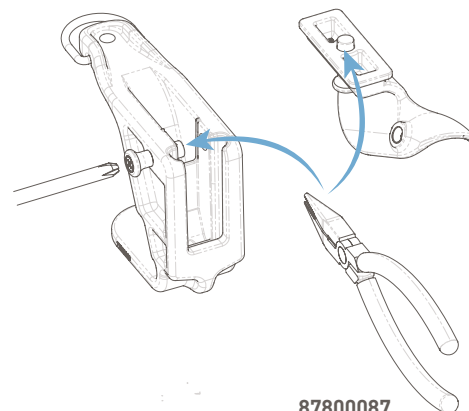


87800087




Rudder Mount/Steering Handle Pin Replacement

1. Remove the old pin assembly and install the new parts per the diagram shown here.

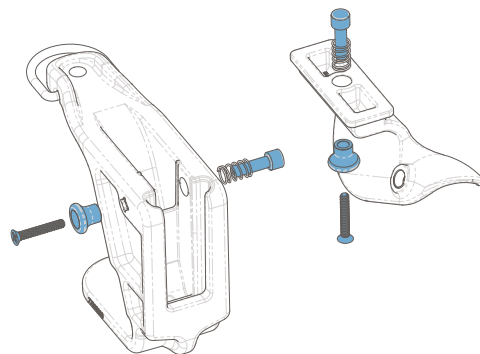

2. Grip the pin end with a pair of pliers and tighten down the screw to complete the assembly.

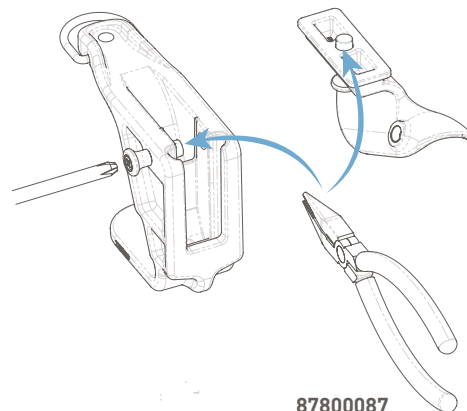


87800087




Rudder Mount/Steering Handle Pin Replacement

1. Remove the old pin assembly and install the new parts per the diagram shown here.

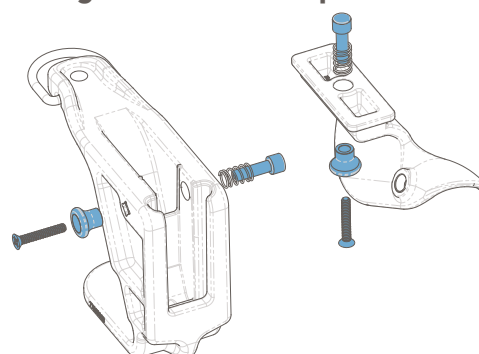

2. Grip the pin end with a pair of pliers and tighten down the screw to complete the assembly.

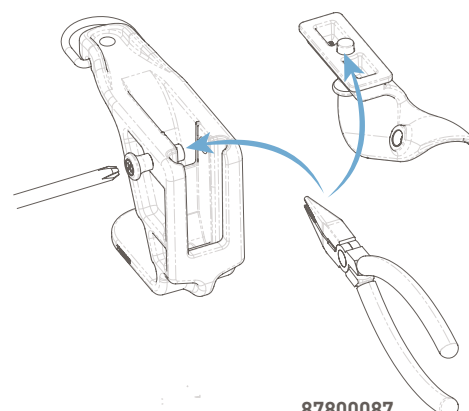

87800087