

Parts:

- 1. Rudder Assembly
- 2. Seat Padeye



Visit our YouTube channel for a video walkthrough




Removing Standard Rudder

 


Loosen the steering rod attachment knob and pull the steering rod out of the plastic pivot.



Squeeze the bottom of the rudder pin and pull it up to remove. Take the rudder assembly off of the hull.

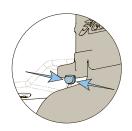





XL Rudder Installation



 
Remove the locking ring and rudder pin from the assembly. Place the XL Rudder on the rudder gudgeon and install the rudder pin. Make sure that the up/down line doesn't get twisted.







Install the locking ring through the small hole at the bottom of the rudder pin.





Slide the steering rod into the steering pivot on the rudder. Position the rod so the rudder and steering handle are straight, then tighten the knob.




Pick a location to attach the snap hook at the end of the up/down rudder line. A recommended attachment point is where the paddle holder padeye/hook is located next to the seat.

If you prefer to attach the up/down rudder line to the seat, install the tube mounted padeye to your seat frame and clamp in place using a screwdriver and the provided hardware.



Your up/down line length can be customized by removing the cap on the hook and trimming the line per your preferences. You can also adjust the location of the pull handle by loosening the placement knots and sliding the handle to a new location.

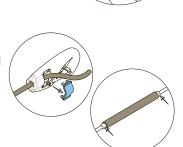

Rudder Operation



To lower the rudder, grab the black handle and give a quick pull **upward**, allowing the rudder to swing over and into the down position.



To raise the rudder, give the black grab handle a quick pull **upward**, allowing the rudder to swing over and onto the deck.







Corporate Headquarters Oceanside, CA USA

www.hobie.com