

**SPLIT TYPE  
ROOM AIR CONDITIONER**  
Compact Wall Mounted  
Wall Mounted / Floor  
Compact Cassette / Slim Duct  
**INVERTER MULTI**

# **SERVICE INSTRUCTION**

## **Models**

## **Indoor unit**

## **Outdoor unit**

ASU7RLF1  
ASU9RLF1  
ASU12RLF1  
ASU15RLF1

AOU36RLXFZ1

ASUH07LPAS  
ASUH09LPAS  
ASUH12LPAS  
ASUH15LPAS

ASUH18LPAS  
ASUH24LPAS

ADUH07LUAS1  
ADUH09LUAS1  
ADUH12LUAS1

ADUH18LUAS1

ADUH24LUAS1

ACUH07LUAS1  
ACUH09LUAS1  
ACUH12LUAS1  
ACUH18LUAS1  
UTG-CCGFGA

AGU9RLF  
AGU12RLF  
AGU15RLF

*Refrigerant*  
**R410A**

**FUJITSU GENERAL LIMITED**

# CONTENTS

## 1. DESCRIPTION OF EACH CONTROL OPERATION

1. CAPACITY CONTROL.....	01-01
2. AUTO CHANGEOVER OPERATION.....	01-01
3. INDOOR FAN CONTROL.....	01-03
4. LOUVER CONTROL.....	01-12
5. OUTDOOR FAN CONTROL.....	01-17
6. TIMER OPERATION CONTROL.....	01-18
7. COMPRESSOR CONTROL.....	01-21
8. ELECTRONIC EXPANSION VALVE CONTROL.....	01-22
9. TEST OPERATION CONTROL.....	01-22
10. PREVENT TO RESTART FOR 3 MINUTES ( 3 MINUTES ST ).....	01-22
11. 4-WAY VALVE EXTENSION SELECT.....	01-22
12. AUTO RESTART.....	01-23
13. MANUAL AUTO OPERATION.....	01-23
14. COMPRESSOR PREHEATING.....	01-24
15. POWERFUL OPERATION.....	01-24
16. MINIMUM HEAT OPERATION.....	01-24
17. ECONOMY OPERATION.....	01-24
18. HEAT INSULATION CONDITION ( BUILDING INSULATION ).....	01-25
19. THERMO CONTROL ( FOR INDOOR UNIT SENSOR ).....	01-25
20. THERMO CONTROL ( FOR WIREDE REMOTE SENSOR ).....	01-25
21. FRESH AIR CONTROL.....	01-26
22. EXTERNAL ELECTRICAL HEATER CONTROL.....	01-26
23. DRAIN PUMP OPERATION.....	01-27
24. DEFROST OPERATION CONTROL.....	01-28
25. VARIOUS PROTECTIONS.....	01-30

## 2. TROUBLE SHOOTING

2-1 ERROR DISPLAY.....	02-01
2-1-1 INDOOR UNIT DISPLAY.....	02-01
2-1-2 WIRED REMOTE CONTROLLER DISPLAY.....	02-02
2-1-3 OUTDOOR UNIT DISPLAY.....	02-03
2-2 TROUBLE SHOOTING WITH ERROR CODE.....	02-04
2-3 TROUBLE SHOOTING WITH NO ERROR CODE.....	02-40
2-4 SERVICE PARTS INFORMATION.....	02-49

# ***Slim Duct / Compact Cassette Compact Wall Mounted / Wall Mounted / Floor type***

## ***INVERTER (MULTI)***

### **1 . DESCRIPTION OF EACH CONTROL OPERATION**

## 1. CAPACITY CONTROL

Compressor frequency decides by capacity of an indoor unit, operation number of an indoor unit, set temperature, room temperature and outside temperature.

## 2. AUTO CHANGEOVER OPERATION

When the air conditioner is set to the Auto mode by remote controller, operation starts in the optimum mode from among the Heating, Cooling, Dry and Monitoring mode.  
During operation, the optimum mode is automatically switched in accordance with temperature changes. The temperature can be set between 64°F(18°C) and 86°F(30°C) in 2°F(1°C) steps.

- ① When operation starts, indoor fan and outdoor fan are operated for around 3 minutes.  
Room temperature and outdoor temperature are sensed,  
and the operation mode is selected in accordance with the table below. **<Monitoring mode>**

( Table 1 : Operation mode selection table )


Room temperature (TR)	Operation mode
$TR > Ts + 4^{\circ}\text{F}(+2^{\circ}\text{C})$	Cooling (Automatic dry)
$Ts + 4^{\circ}\text{F}(+2^{\circ}\text{C}) \geq TR \geq Ts - 4^{\circ}\text{F}(-2^{\circ}\text{C})$	*Middle zone
$TR < Ts - 4^{\circ}\text{F}(-2^{\circ}\text{C})$	Heating

TR : Room temperature  
Ts : Setting temperature

\*If it's Middle zone, operation mode of indoor unit is selected as below.

- (1). Same operation mode is selected as outdoor unit.  
If outdoor unit is operating in Cooling, Dry, and Heating mode,  
indoor unit will be operated by the same operation mode.
- (2). Selected by the outdoor temperature.  
If outdoor unit is operating in other than Cooling, Dry, and Heating mode,  
indoor unit will be operated according to the outdoor temperature as below.


( Fig. 1 : Outdoor temperature zone selection )

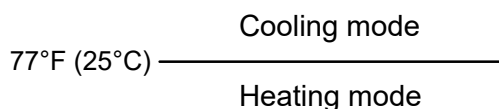

- ② When Heating was selected at ①, the same operation as HEATING OPERATION of page 01-08 is performed.
- ③ When the compressor was stopped for 6 consecutive minutes by the temperature control function after the Cooling(Auto:Dry) or Heating mode was selected at above, operation is switched to Monitoring and the operation mode is selected again.



## ■ AUTO CHANGEOVER operation flow chart

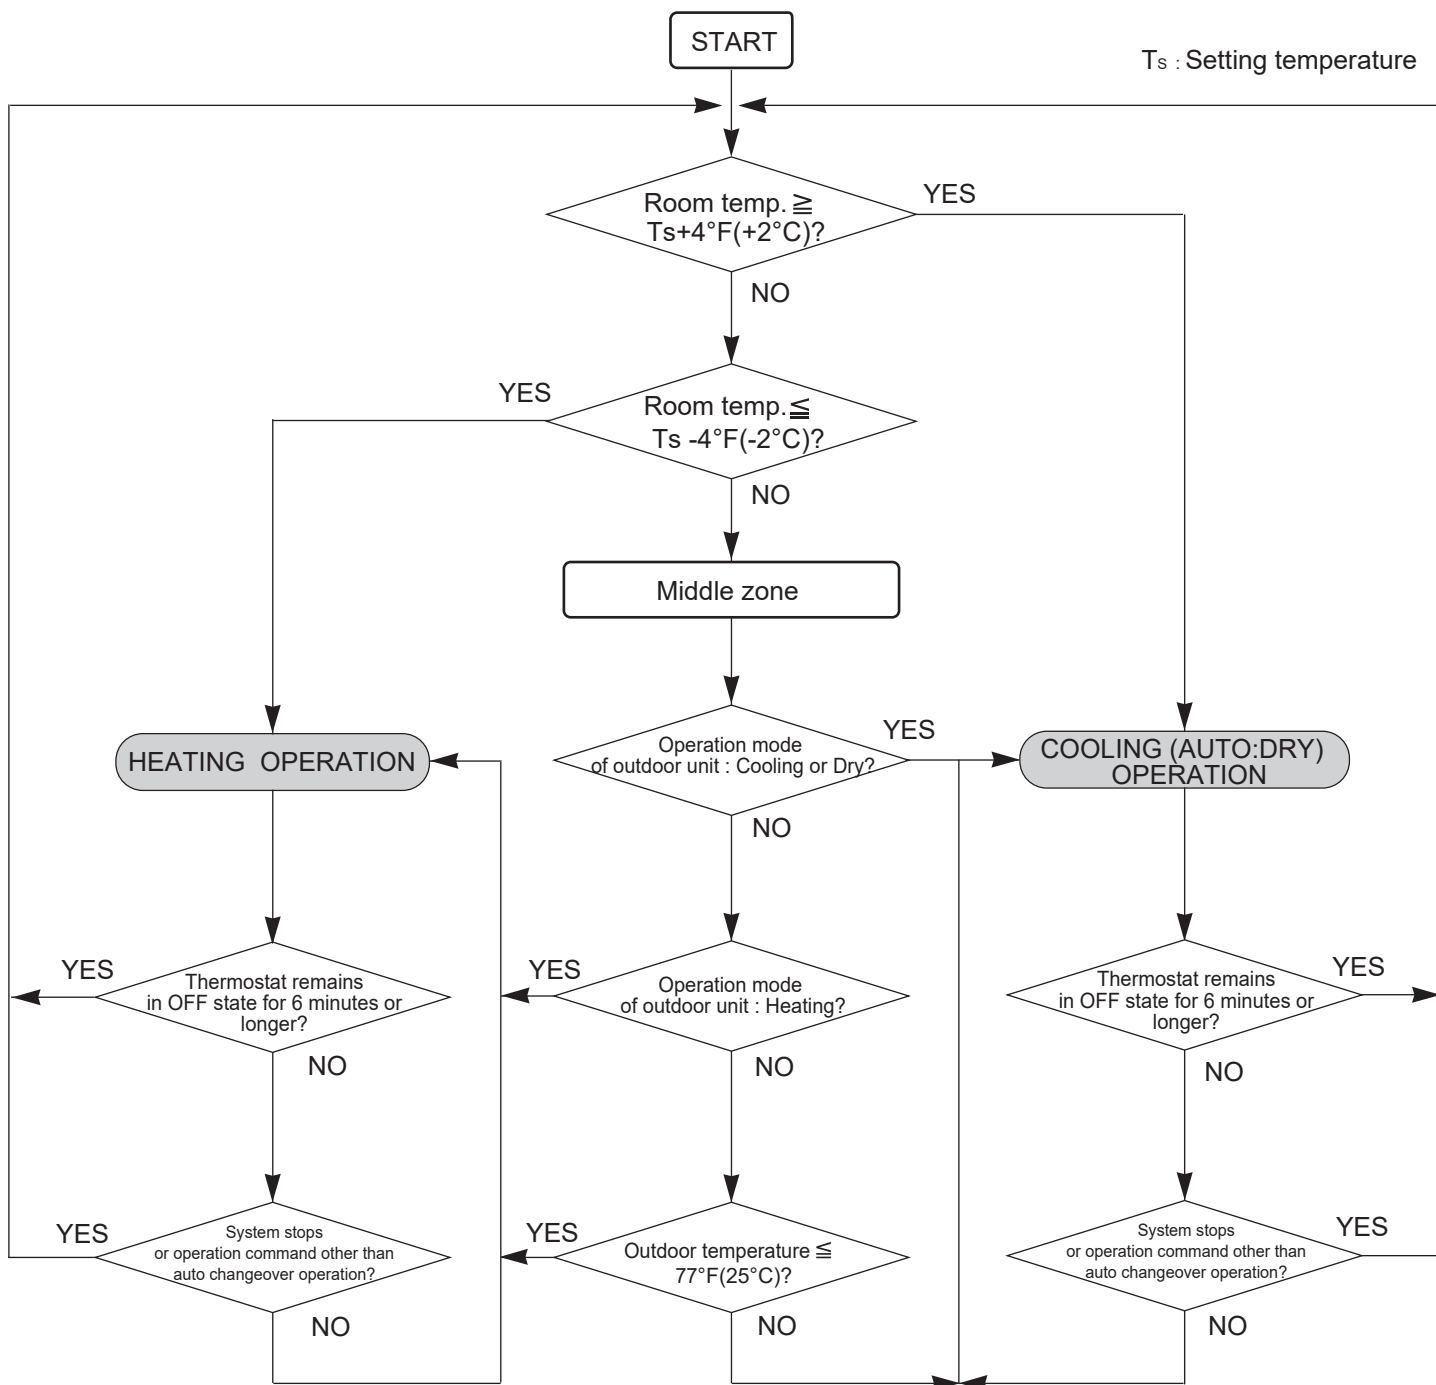

### 3. INDOOR FAN CONTROL

#### 1. Fan speed

( Table2 : Indoor fan speed table )

ASU7RLF1 (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1090
	Hi	1050
	Me+	1000
	Me	950
	Lo	850
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Poweful	1090
	Hi	1050
	Me	950
	Lo	850
	Quiet	680
	*Soft Quiet	600
	S-Lo	480
Dry	Auto	X, J zone:680

ASU9RLF1 (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1140
	Hi	1090
	Me+	1040
	Me	980
	Lo	850
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Poweful	1140
	Hi	1090
	Me	980
	Lo	850
	Quiet	680
	*Soft Quiet	600
	S-Lo	480
Dry	Auto	X, J zone:680

ASU12RLF1 (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1240
	Hi	1190
	Me+	1120
	Me	1050
	Lo	910
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Poweful	1240
	Hi	1190
	Me	1050
	Lo	880
	Quiet	680
	*Soft Quiet	600
	S-Lo	480
Dry	Auto	X, J zone:680

ASU15RLF1 (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1320
	Hi	1280
	Me+	1190
	Me	1120
	Lo	1050
	Quiet	770
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Poweful	1320
	Hi	1280
	Me	1090
	Lo	1000
	Quiet	750
	*Soft Quiet	670
	S-Lo	480
Dry	Auto	X, J zone:750

\*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.  
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

ASUH07LPTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1200
	Hi	1130
	Me+	1040
	Me	950
	Lo	790
	Quiet	620
	Cool Air Prevention	550
	S-Lo	400
Cooling / Fan	Poweful	1110
	Hi	1040
	Me	890
	Lo	750
	Quiet	600
	*Soft Quiet	470
	S-Lo	400
Dry	Auto	X, J zone:600

ASUH09LPTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1230
	Hi	1160
	Me+	1070
	Me	980
	Lo	800
	Quiet	620
	Cool Air Prevention	550
	S-Lo	400
Cooling / Fan	Poweful	1170
	Hi	1100
	Me	920
	Lo	750
	Quiet	600
	*Soft Quiet	470
	S-Lo	400
Dry	Auto	X, J zone:600

ASUH12LPTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1290
	Hi	1220
	Me+	1140
	Me	1060
	Lo	900
	Quiet	630
	Cool Air Prevention	550
	S-Lo	470
Cooling / Fan	Poweful	1200
	Hi	1130
	Me	950
	Lo	790
	Quiet	630
	*Soft Quiet	490
	S-Lo	470
Dry	Auto	X, J zone:630

ASUH15LPTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1330
	Hi	1260
	Me+	1160
	Me	1080
	Lo	900
	Quiet	670
	Cool Air Prevention	590
	S-Lo	470
Cooling / Fan	Poweful	1290
	Hi	1200
	Me	1000
	Lo	810
	Quiet	630
	*Soft Quiet	490
	S-Lo	470
Dry	Auto	X, J zone:630

\*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.  
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

ASUH18LPTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1310
	Hi	1210
	Me+	1130
	Me	1020
	Lo	860
	Quiet	700
	Cool Air Prevention	580
	S-Lo	540
Cooling / Fan	Poweful	1360
	Hi	1260
	Me	1140
	Lo	960
	Quiet	680
	*Soft Quiet	580
	S-Lo	540
Dry	Auto	X, J zone:680

ASUH24LPTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Poweful	1490
	Hi	1390
	Me+	1320
	Me	1210
	Lo	960
	Quiet	810
	Cool Air Prevention	680
	S-Lo	680
Cooling / Fan	Poweful	1590
	Hi	1490
	Me	1260
	Lo	1140
	Quiet	810
	*Soft Quiet	680
	S-Lo	540
Dry	Auto	X, J zone:810

\*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.  
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

## AGU9RLF (rpm)

Operation mode	Air flow mode		Speed	
			Upper & Lower air flow mode	Upper air flow mode
Heating	Powerful	(Upper/ Lower)	1230/ 1040	1300
	Hi		1120/ 950	1230
	Me		1000/ 850	1090
	Lo		860/ 730	940
	Quiet		660/ 560	750
	Cool air prevention		660/ 560	680
	S-Lo		660/ 560	680
Cooling/ Fan	Powerful	(Upper/ Lower)	1230/ 1040	1300
	Hi		1120/ 950	1230
	Me		960/ 820	1070
	Lo		820/ 700	910
	Quiet		660/ 560	750
	*Soft Quiet		570/ 480	680
	S-Lo		660/ 560	680
Dry	Auto	(Upper/ Lower)	---- / ----	X, J zone : 750

## AGU12RLF (rpm)

Operation mode	Air flow mode		Speed	
			Upper & Lower air flow mode	Upper air flow mode
Heating	Powerful	(Upper/ Lower)	1350/ 1150	1370
	Hi		1240/ 1040	1300
	Me		1080/ 920	1140
	Lo		910/ 770	980
	Quiet		660/ 560	750
	Cool air prevention		660/ 560	680
	S-Lo		660/ 560	680
Cooling/ Fan	Powerful	(Upper/ Lower)	1350/ 1150	1370
	Hi		1240/ 1040	1300
	Me		1050/ 890	1120
	Lo		860/ 730	930
	Quiet		660/ 560	750
	*Soft Quiet		570/ 480	680
	S-Lo		660/ 560	680
Dry	Auto	(Upper/ Lower)	---- / ----	X, J zone : 750

## AGU15RLF (rpm)

Operation mode	Air flow mode		Speed	
			Upper & Lower air flow mode	Upper air flow mode
Heating	Powerful	(Upper/ Lower)	1440/ 1230	1440
	Hi		1330/ 1120	1370
	Me		1140/ 970	1180
	Lo		940/ 800	1020
	Quiet		660/ 560	750
	Cool air prevention		660/ 560	680
	S-Lo		660/ 560	680
Cooling/ Fan	Powerful	(Upper/ Lower)	1440/ 1230	1440
	Hi		1330/ 1120	1370
	Me		1100/ 930	1160
	Lo		890/ 750	960
	Quiet		660/ 560	750
	*Soft Quiet		570/ 480	680
	S-Lo		660/ 560	680
Dry	Auto	(Upper/ Lower)	---- / ----	X, J zone : 750

\*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.  
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

ACUH07LUAS1

(rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	590
	Me+	570
	Me	540
	Lo	490
	Quiet	440
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	590
	Me	540
	Lo	490
	Quiet	440
	*Soft Quiet	400
	S-Lo	300
Dry	Auto	X, J zone : 440

ACUH09LUAS1

(rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	590
	Me+	570
	Me	540
	Lo	490
	Quiet	440
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	590
	Me	540
	Lo	490
	Quiet	440
	*Soft Quiet	400
	S-Lo	300
Dry	Auto	X, J zone : 440

ACUH12LUAS1

(rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	650
	Me+	620
	Me	580
	Lo	520
	Quiet	460
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	660
	Me	580
	Lo	520
	Quiet	460
	*Soft Quiet	400
	S-Lo	300
Dry	Auto	X, J zone : 460

ACUH18LUAS1

(rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	840
	Me+	800
	Me	750
	Lo	650
	Quiet	500
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	790
	Me	660
	Lo	570
	Quiet	460
	*Soft Quiet	400
	S-Lo	300
Dry	Auto	X, J zone : 460

\*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.  
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

ADUH07LUAS1 (Static pressure:12Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1160
	Me+	1000
	Me	1000
	Lo	940
	Quiet	880
	S-Lo	500
Cooling / Fan	Hi	1160
	Me	1000
	Lo	940
	Quiet	880
	*Soft Quiet	500
	S-Lo	500
Dry	Auto	X, J zone : 880

ADUH09LUAS1 (Static pressure:12Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1260
	Me+	1260
	Me	1160
	Lo	1060
	Quiet	960
	S-Lo	500
Cooling / Fan	Hi	1260
	Me	1160
	Lo	1060
	Quiet	960
	*Soft Quiet	500
	S-Lo	500
Dry	Auto	X, J zone : 960

ADUH12LUAS1 (Static pressure:12Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1340
	Me+	1340
	Me	1240
	Lo	1140
	Quiet	1030
	S-Lo	500
Cooling / Fan	Hi	1340
	Me	1240
	Lo	1140
	Quiet	1030
	*Soft Quiet	500
	S-Lo	500
Dry	Auto	X, J zone :1030

ADUH18LUAS1 (Static pressure:12Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1380
	Me+	1380
	Me	1300
	Lo	1220
	Quiet	1140
	S-Lo	600
Cooling / Fan	Hi	1380
	Me	1300
	Lo	1220
	Quiet	1140
	*Soft Quiet	600
	S-Lo	600
Dry	Auto	X, J zone :1140

ADUH24LUAS1 (Static pressure:12Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1460
	Me+	1460
	Me	1360
	Lo	1260
	Quiet	1180
	S-Lo	600
Cooling / Fan	Hi	1460
	Me	1360
	Lo	1260
	Quiet	1180
	*Soft Quiet	600
	S-Lo	600
Dry	Auto	X, J zone :1180

\*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.  
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

## 2. FAN OPERATION

The airflow can be switched in 5 steps such as Auto, Quiet, Lo, Me, Hi, while the indoor fan only runs.


When Fan mode is set at (Auto), it operates on (Me) Fan Speed.< All models >

## 3. COOLING OPERATION (Auto : Cooling)

Switch the airflow [Auto], and the indoor fan will run according to a room temperature, as shown in Fig. 2 .

On the other hand, if switched in [Hi]~[Quiet], the indoor fan will run at a constant airflow of [Cooling] operation modes Quiet, Lo, Me, Hi.

( Fig. 2 : Airflow change - over )

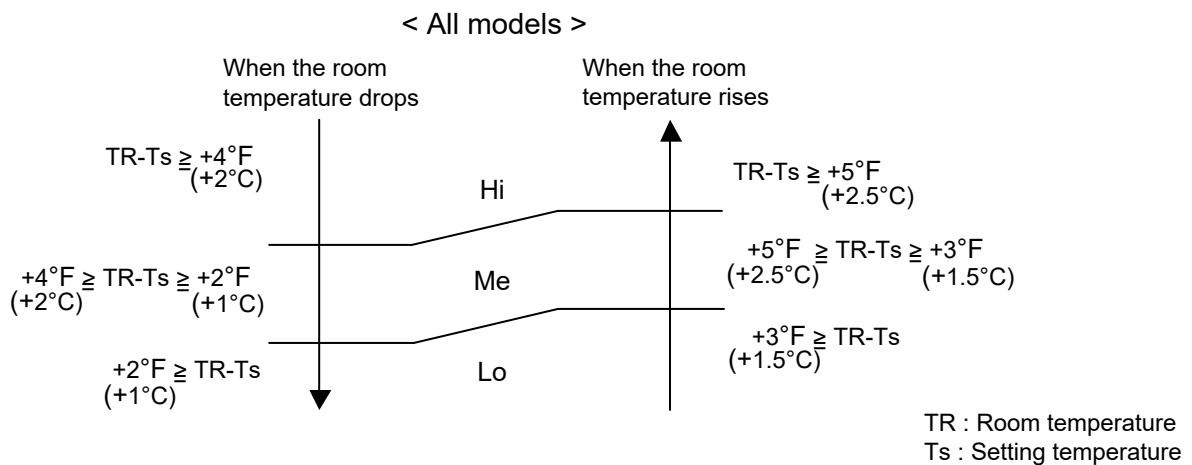


## 4. DRY OPERATION (Auto : Dry)

During the dry operation, the fan speed setting can not be changed, it operates automatically as shown in Fig. 3 .

Room temperature variation which the room temperature sensor of the indoor unit body has detected.

( Fig. 3 : Indoor fan control )

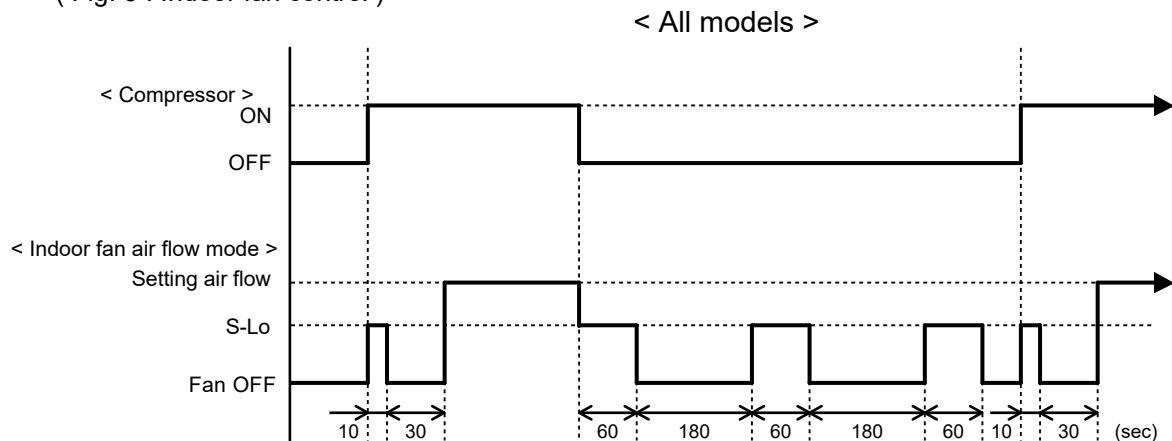




## 5. HEATING OPERATION (Auto : Heating)

Switch the airflow [Auto], and the indoor fan will run according to a room temperature, as shown in Fig. 4 .

On the other hand, if switched in [Hi] ~ [Quiet], the indoor fan will run at a constant airflow of [Heat] operation modes Quiet, Lo, Me, Hi, as shown in Table 2 .

( Fig. 4 : Airflow change - over )

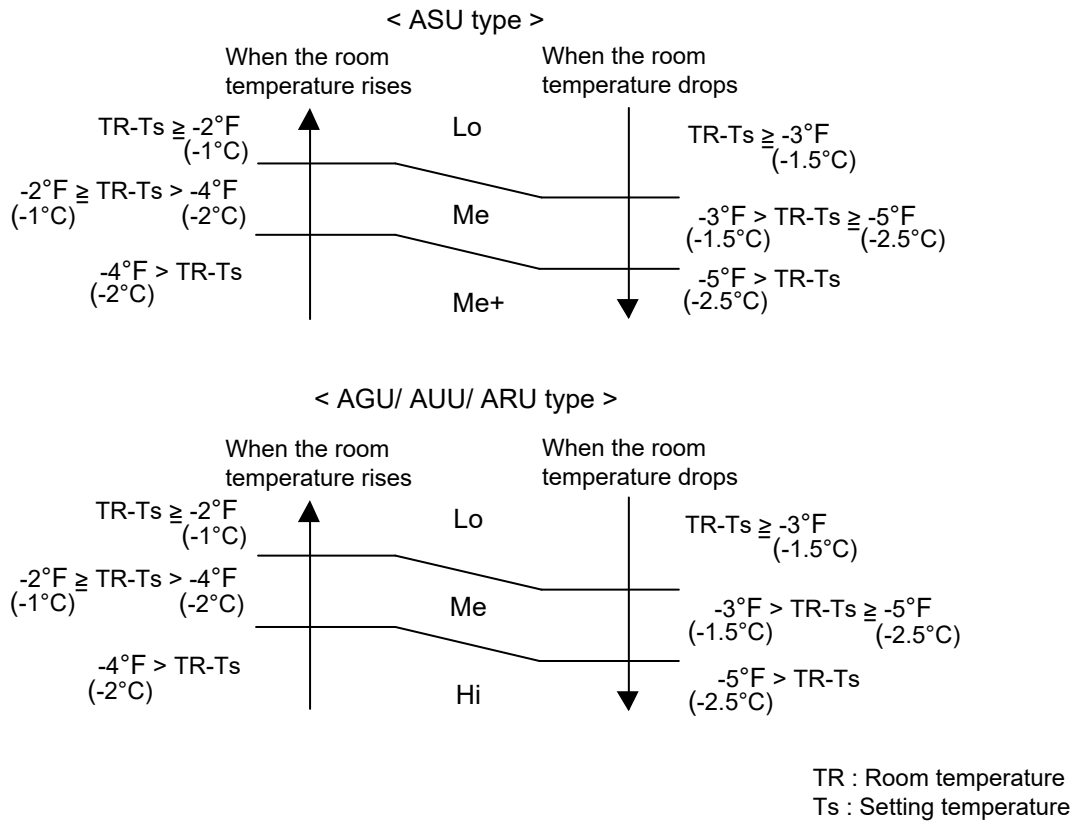


## 6. COOL AIR PREVENTION CONTROL (For Heating and Minimum Heat operation)

The maximum value of the indoor fan speed is set as shown in Fig. 5 , based on the detected temperature by the indoor heat exchanger sensor in heating mode.


Field setting is necessary at AU and AR type as "Cool air prevention : effective"

( Fig. 5 : Airflow change - over for cool air prevention )


### During NORMAL HEATING OPERATION

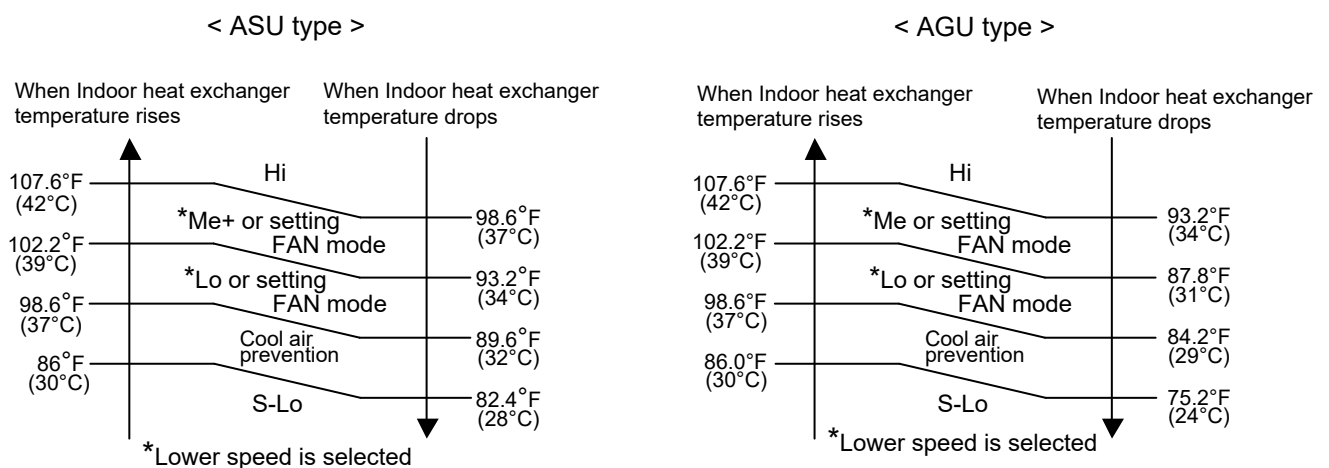

### < AUU type >

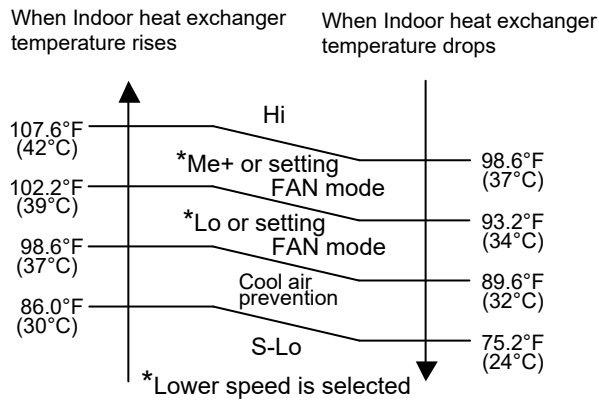


### < ARU type >

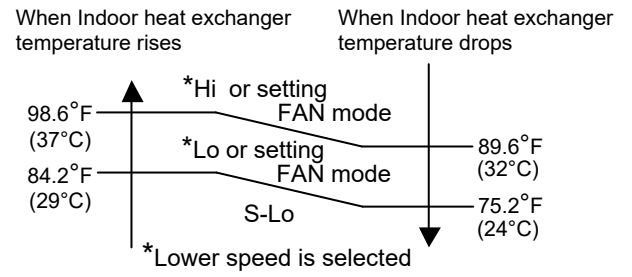


## During MINIMUM HEAT OPERATION


### < ASU / AUU type >

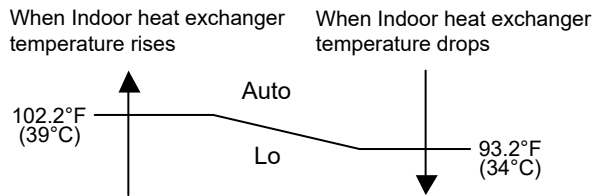

### < AGU type >

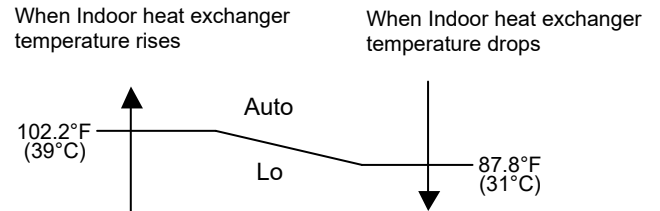

### < ARU type >

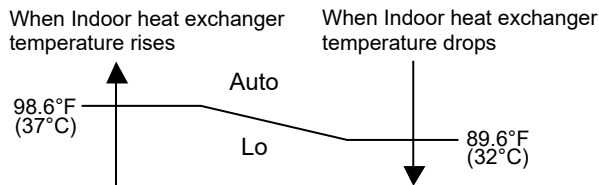

## 4. LOUVER CONTROL

### For Compact Wall Mounted Type < ASU7/ 9/ 12/ 15RLF1 >


#### 1. VERTICAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follow: ( Figure6 : Vertical air direction range )

① ↔ ② ↔ ③ ↔ ④ ↔ ⑤ ↔ ⑥ ↔ ⑦

The Remote Controller's display does not change.

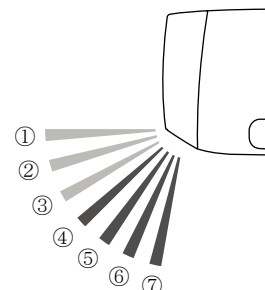

- If you set the angle to position ④~⑦ for more than 30 minutes in COOL or DRY mode, they automatically return to position ③ .  
In COOL or DRY mode, if the angle is set to position ④~⑦ for many hours, condensation may be formed, and the drips may wet your property.
- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.
  - Cooling / Dry mode : Horizontal flow ①
  - Heating mode : Downward flow ⑦
- During AUTO or Heating mode operation, for the first a few minutes after beginning operation, air-flow will be horizontal ① ; the air direction cannot be adjusted during this period.  
The air flow direction setting will temporarily become ① when the temperature of the air -flow is low at the start of the Heating mode.

#### 2. SWING OPERATION

To select Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

( Table3 : Swinging range )

The type of operation	Range
Cooling / Dry mode Fan mode (①~③)	① ↔ ③
Heating mode Fan mode (④~⑦)	④ ↔ ⑦

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

To select Horizontal Airflow Swing Operation

(No function)

## For Compact Wall Mounted Type < ASUH07/ 09/ 12/ 15LPAS >

### 1. VERTICAL LOUVER CONTROL

(Function Range)

( Figure7 : Vertical air direction range )

Each time the button is pressed, the air direction range will change as follow :


① ⇄ ② ⇄ ③ ⇄ ④ ⇄ ⑤ ⇄ ⑥

Cooling / Dry mode : ① ⇄ ④

Heating mode : ③ ⇄ ⑥

\*Fan mode : ① ⇄ ④ or ③ ⇄ ⑥

\*The Swing operation range depends on the airflow direction set before the Swing operation.

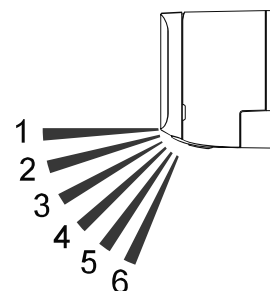

#### NOTES:

- Do not adjust the horizontal louver by hand.
- In the Auto or Heating mode, the airflow direction stay position ① for a while from the start of the operation.
- In the Cooling or Dry mode, position ①~③ is recommended to prevent condensation drips damaging your property. If position ④~⑥ keeps for 30 minutes or more in these modes, the airflow direction changes to position ③ automatically.
- When using the mobile app (optional WLAN adapter is necessary), the up/down airflow can be selected from ④ positions.

### 2. SWING OPERATION

To select Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

( Table4 : Swinging range )

The type of operation	Range
Cooling / Dry mode Fan mode (①~④)	① ⇄ ④
Heating mode Fan mode (③~⑥)	③ ⇄ ⑥

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

To select Horizontal Airflow Swing Operation

(No function)

## For Wall Mounted Type < ASUH18/ 24LPAS >

### 1. VERTICAL LOUVER CONTROL (Up/down airflow direction)

( Figure8 : Vertical air direction range )

(Function Range)

Each time the button is pressed, the air direction range will change as follow :


① → ② → ③ → ④ → ⑤ → ⑥

Cooling / Dry mode : ① ↔ ④

Heating mode : ③ ↔ ⑥

\*Fan mode : ① ↔ ④ or ③ ↔ ⑥

\*The Swing operation range depends on the airflow direction set before the Swing operation.

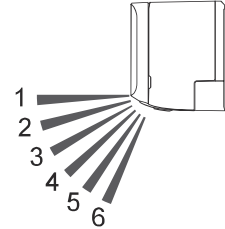

#### NOTES:

- Do not adjust the horizontal louver by hand.
- In the Auto or Heating mode, the airflow direction stay position ① for a while from the start of the operation.
- In the Cooling or Dry mode, position ①~③ is recommended to prevent condensation drips damaging your property. If position ④~⑥ keeps for 30 minutes or more in these modes, the airflow direction changes to position ③ automatically.
- When using the mobile app (optional WLAN adapter is necessary), the up/down airflow can be selected from ④ positions.

### 2. HORIZONTAL LOUVER CONTROL (Left/right airflow direction)

(Function Range)

Each time the button is pressed, the air direction range will change as follow :

① → ② → ③ → ④ → ⑤

( Figure9 : Horizontal air direction range )

#### NOTES:

- In the Auto mode operation, you cannot change the airflow direction for a while from the start of the operation.

### 3. SWING OPERATION

#### Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

( Table5 : Swinging range )

The type of operation	Range
Cooling / Dry / Fan mode ( ①~③ )	① ↔ ④
Heating / Fan mode ( ④~⑦ )	③ ↔ ⑥

- When the indoor fan is S-Lo or Stop mode, the swing operation is interrupted and it stops at either upper end or bottom end.

#### Horizontal Airflow Swing Operation

When the swing signal is received from the remote controller, the horizontal louver starts to swing.

( Table6 : Swinging range )


The type of operation	Range
Cooling / Dry / Heating / Fan mode	① ↔ ⑤

- When the indoor fan is S-Lo or Stop mode, the swing operation is interrupted and it stops at either upper end or bottom end.

#### Vertical and Horizontal Airflow Swing Operation

- When the horizontal swing signal is input from remote control, the combination of the vertical and horizontal swing operation is performed.

※ **Power Diffuser doesn't swing in any swing operation.**

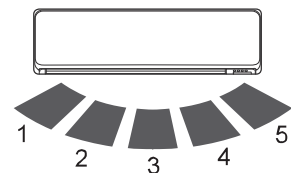

## For Floor Type < AGU9/ 12/ 15RLF >

### 1. VERTICAL LOUVER CONTROL


(Function Range)

Each time the button is pressed, the air direction range will change as follow : ( Figure10 : Air direction range )

① ⇄ ② ⇄ ③ ⇄ ④ ⇄ ⑤

- The Remote Controller's display does not change.
- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry / Fan mode : Horizontal flow ①  
Heating mode : Downward flow ④

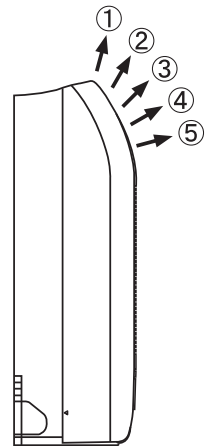


- When the temperature of the air being blown out is low at the start of heating operation or during defrosting, the airflow direction temporarily becomes ① to prevent cold air being blown onto the body.
- During Monitor operation in AUTO CHANGEOVER mode, the airflow direction automatically becomes ①, and it cannot be adjusted.

### 2. ADJUST THE RIGHT-LEFT LOUVERS

- Move the Right-Left louvers to adjust airflow in the direction you prefer.

( Figure11 : Air direction range )

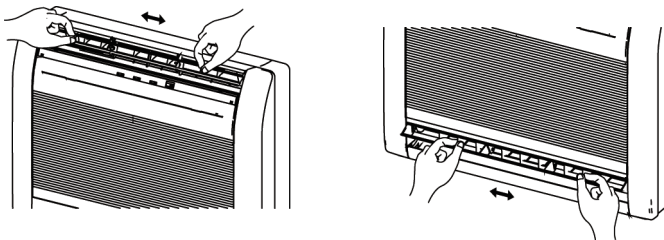

### 3. SWING OPERATION

#### To select Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing .

( Table7 : Swinging range )

The type of operation	Range
Cooling / Dry / Heating / Fan mode	① ⇄ ⑤

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and it stops at either upper end or bottom end.

#### To select Horizontal Airflow Swing Operation

(No function)

## For Compact Cassette Type < ACUH7/ 9/ 12/ 18LUAS1 >


### 1. VERTICAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follow :

① ↔ ② ↔ ③ ↔ ④

( Figure12 : Vertical air direction range )

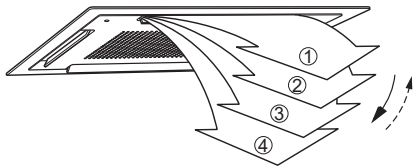

- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry / Fan mode : Horizontal flow ①  
Heating mode : Downward flow ④

- During AUTO mode operation, for the first minute after start-up, air-flow will be horizontal ① ; the air direction cannot be adjusted during this period.

### 2. SWING OPERATION

When the swing signal is received from the remote controller, the vertical louver starts to swing.  
The range of swing depends on the set airflow direction.

( Table8 : Swinging range )

The type of operation	Range
Cooling / Dry / Heating / Fan mode	① ↔ ④

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and the louver stops at the memorized position.  
(Stop mode means Operation stop.)

## 5. OUTDOOR FAN CONTROL

### 1. Outdoor Fan Motor

The Table 9 shows the fan speed of the outdoor unit.

( Table 9 : Fan speed of the outdoor unit )

	Cooling	Heating
AOU36RLXFZ1	850/ 780/ 660/ 400/ 300/ 200 rpm	900/ 780/ 660/ 400/ 300/ 200 rpm

\* It runs at 500rpm for 20 seconds after starting up the outdoor fan.



## 6. TIMER OPEARTION CONTROL

### 6-1 WIRELESS REMOTE CONTROLLER


The Table 10 shows the available timer setting based on the product model.

( Table 10 : Timer setting )


ON TIMER / OFF TIMER	PROGRAM TIMER	SLEEP TIMER
○	○	○

#### 1. ON / OFF TIMER

- OFF timer : When the clock reaches the set time, the air conditioner will be turned off.


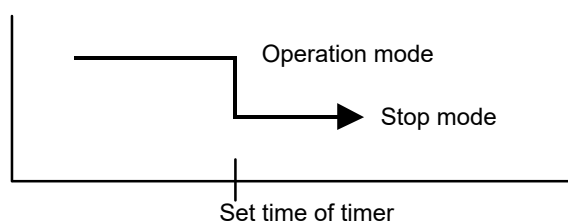


- ON timer : When the clock reaches the set time, the air conditioner will be turned on.

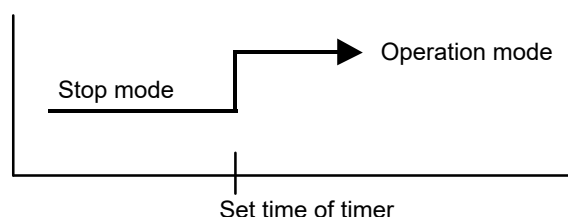

#### 2. PROGRAM TIMER

- The program timer allows the OFF timer and ON timer to be used in combination one time.

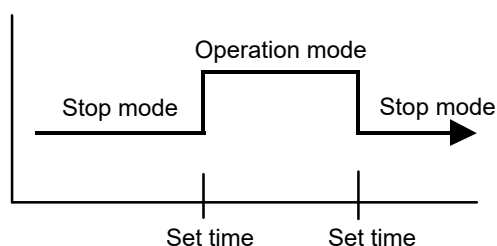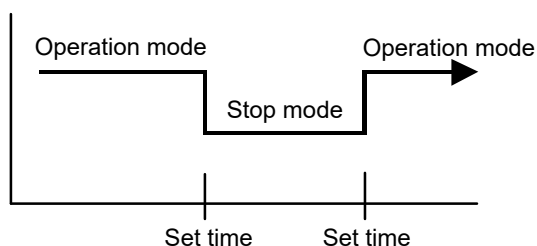


- Operation will start from the timer setting (either OFF timer or ON timer) whichever is closest to the clock's current timer setting.  
The order of operations is indicated by the arrow in the remote control unit's display.
- SLEEP timer operation cannot be combined with ON timer operation.

### 3. SLEEP TIMER

If the sleep is set, the room temperature is monitored and the operation is stopped automatically.  
If the operation mode or the set temperature is change after the sleep timer is set, the operation is continued according to the changed setting of the sleep timer from that time ON.


#### In the cooling operation mode

When the sleep timer is set, the setting temperature is increased 2°F(1°C).  
It increases the setting temperature another 2°F(1°C) after 1 hour.  
After that, the setting temperature is not changed and the operation is stopped at the time of timer setting.

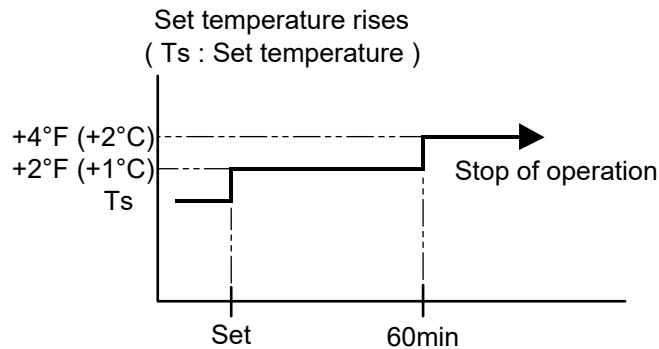

#### In the heating operation mode

When the sleep timer is set, the setting temperature is decreased 2°F(1°C).  
It decreases the setting temperature another 2°F(1°C) every 30 minutes.  
Upon lowering 8°F(4°C), the setting temperature is not changed and the operation stops at the time of timer setting.

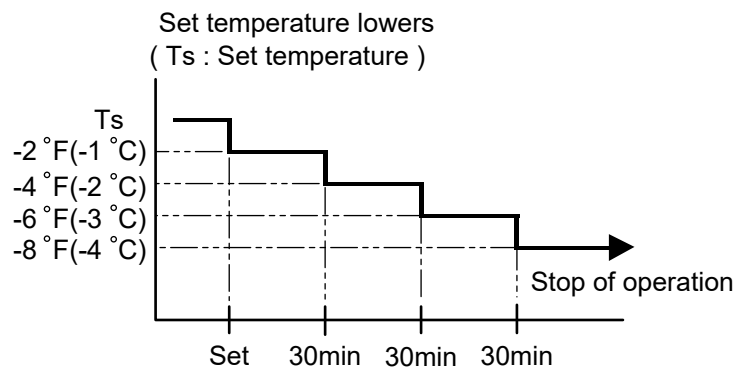

## 6-2 WIRED REMOTE CONTROLLER

The Table 11 shows the available timer setting based on the product model.

( Table 11 : Timer setting )

ON TIMER / OFF TIMER	WEEKLY TIMER	TEMPERATURE SET BACK TIMER
○	○	○


### 1. ON TIMER / OFF TIMER

Same to 6-1 **ON / OFF TIMER** and shown in those.

### 2. WEEKLY TIMER


This timer function can set operation times of the each day of the week.

All days can be set together, the weekly timer can be used to repeat the timer setting for all of the days.

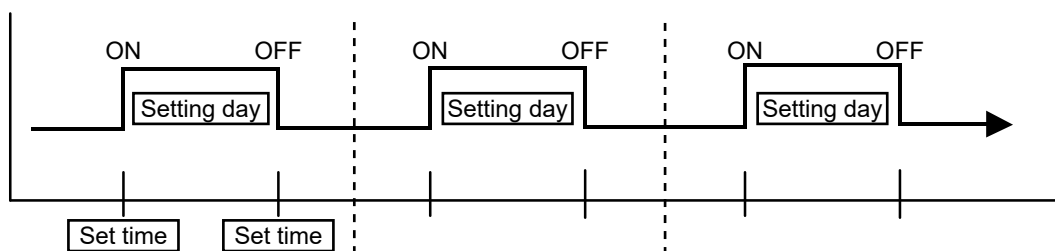

### 3. TEMPERATURE SET BACK TIMER

This timer function can change setting temperature of setting operation times of the each day of the week. This can be together with other timer setting.

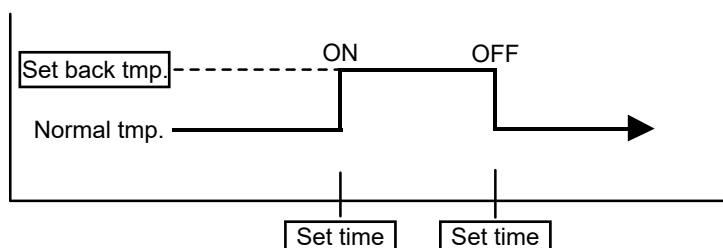

## 7. COMPRESSOR CONTROL

### 1. OPERATION FREQUENCY RANGE

The operation frequency of the compressor is different based on the operation mode as shown in the Table 12 .


( Table 12 : Compressor operation frequency range )

	Cooling		Heating	
	Min	Max	Min	Max
AOU36RLXFZ1	16	72	16	93

### 2. OPERATION FREQUENCY CONTROL AT START UP

The compressor frequency soon after the start-up is controlled as shown in the Fig. 13 .

( Fig. 13 : Compressor control at Start-up )

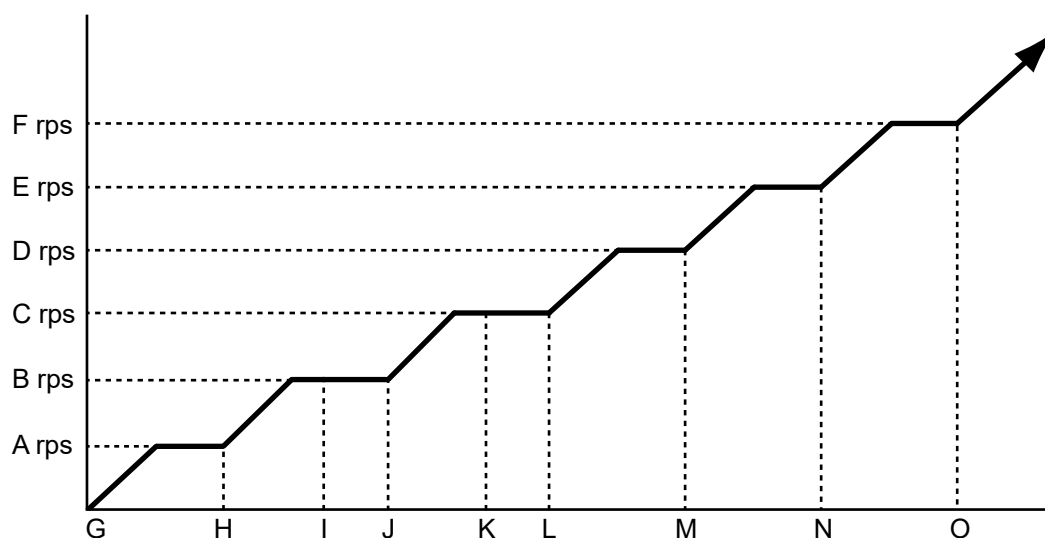

[ Frequency ]

	A rps	B rps	C rps	D rps	E rps	F rps
AOU36RLXFZ1	30	30	47	60	80	80

[ Time ]

	G ~ H	H ~ I	I ~ J	J ~ K	K ~ L	L ~ M	M ~ N	N ~ O
AOU36RLXFZ1	60sec	120sec	600sec	180sec	120sec	60sec	60sec	60sec

## 8. ELECTRONIC EXPANSION VALVE CONTROL

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the Table 9 .

The compressor frequency, the temperatures detected by the discharge temperature sensor and the outdoor temperature sensor.

( Table 13 : The pulse range of the electronic expansion valve control )

	Operation mode	Pulse range
AOU36RLXFZ1	Cooling /Dry mode	50 ~ 480
	Heating mode	30 ~ 480

\* At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (1000 pulses are input to the closing direction).

## 9. TEST OPERATION CONTROL

### ▪ With Wireless Remote Controller ( with TEST RUN button )

Under the condition where the air conditioner runs, press the TEST RUN button, and the test operation control mode will appear.

During test running, the operation lamp and timer lamp of the air conditioner body twinkle simultaneously. Set the test operation mode, and the compressor will continue to run regardless of whether the room temperature sensor detects.

The test operation mode is released if 60 minutes have passed after setting up the test operation.

### ▪ With Wireless Remote Controller ( without TEST RUN button )

Under the condition where the air conditioner runs, press the MANUAL AUTO button of the indoor unit for more than 10 seconds.

During test running, the operation lamp and timer lamp of the air conditioner body twinkle simultaneously. Set the test operation mode, and the compressor will continue to run regardless of whether the room temperature sensor detects.

The test operation mode is released, if 60 minutes have passed after setting up the test operation or pressing the MANUAL AUTO button of the indoor unit for more than 3 seconds.

### ▪ With Wired Remote Controller ( without TEST RUN button )

Under the condition where the air conditioner stops, press the MASTER CONTROL button and the FAN CONTROL button simultaneously for 5 seconds or more, and the test operation control mode will appear.

During test running, "  " will display on the remote controller display.

Set the test operation mode, and the compressor will continue to run regardless of whatever the room temperature sensor detects.

The test operation mode is released if 60 minutes have passed after setting up the test operation.

## 10. PREVENT TO RESTART FOR 3 MINUTES ( 3 MINUTES ST )

The compressor won't enter operation status for 3 minutes after the compressor is stopped, even if any operation is given.

## 11. 4-WAY VALVE EXTENSION SELECT

At the time when the air conditioner is switched from the Cooling mode to Heating mode, the compressor is stopped, and the 4-way valve is switched in 3 minutes later after the compressor stopped.

## 12. AUTO RESTART

When the power was interrupted by a power failure, etc. during operation, the operation contents at that time are memorized and when power is recovered, operation is automatically resumed with the memorized operation contents.

( Table 14 : Operation contents memorized when the power is interrupted )

	Wireless remote controller	Wired remote controller (When Memory Backup : Disable)	Wired remote controller (When Memory Backup : Enable)	
Operation mode	○	○	○	
Set temperature	○	○	○	
Set air flow	○	○	○	
Thermistor detected position	—	×	○	
Timer mode	○	×	OFF Timer	×
			ON Timer	×
			WEEKLY Timer	○
			TEMPERRATURE SET BACK Timer	○

○ : Memorize

× : Not memorize

\*It is necessary to set on the DIP-SW1-No,6 of the wired remote controller, to enable the memory backup.  
Refer to the installation manual of wired remote controller for details.

## 13. MANUAL AUTO OPERATION

If MANUAL / AUTO Button is pushed continuous from 3 seconds to 10 seconds, manual auto operation will starts.

If the remote control is lost or battery power dissipated, this function will work without the remote control.

( Table 15 : Manual auto operation control )

Functions	All models
OPERATION MODE	Auto changeover
SETTING TEMP.	75.2°F(24°C)
FAN MODE	Auto
VERTICAL LOUVER	NORMAL
HORIZONTAL LOUVER	NORMAL
TIMER MODE	Continuous (No timer setting available)
SWING OPERATION	OFF
ECONOMY	OFF

## 14. COMPRESSOR PREHEATING

When the outdoor heat exchanger temperature is lower than Operation temperature (Refer to Table 16) and the heating operation has been stopped for 30 minutes, power is applied to the compressor and the compressor is heated.

(By heating the compressor, warm air is quickly discharged when operation is started.)

When operation was started, and when the outdoor temperature rises to Release temperature or greater, preheating is over.

( Table 16 : Preheating operation / Release temperature )

Operation temperature	Release temperature
32°F(0°C)	35.6°F(2°C)

## 15. POWERFUL OPERATION ( For ASU\*RLF1/ AGU\*RLF type )

The POWERFUL OPERATION functions by pressing POWERFUL button on the remote controller.

The indoor unit & outdoor unit will operate at maximum power as shown in Table 17 .

( Table 17 : Powerful operation )

	Powerful operation
COMPRESSOR FREQUENCY	Maximum
FAN CONT. MODE	Powerful
SETTING LOUVER	Cooling/ Dry : 3, Heating : 6 for ASU*RLF1
	Cooling/ Dry : 4, Heating : 5 for AGU*RLF

Release Condition is as follows.

[Cooling / Dry]

- Room temperature  $\leq$  Setting temperature -1.0°F(- 0.5°C) or Operation time has passed 20 minutes.

[Heating]

- Room temperature  $\geq$  Setting temperature +1.0°F(+0.5°C) or Operation time has passed 20 minutes.

## 16. MINIMUM HEAT OPERATION

MINIMUM HEAT operation performs as below when pressing MIN. HEAT button or Weekly timer setting on the remote controller.

( Table 18 : Minimum heat operation )

Mode	Heating
Setting temperature	50°F (10°C)
Fan mode	Auto
LED display	Economy
Defrost operation	Operate as normal

## 17. ECONOMY OPERATION

The ECONOMY operation functions by pressing ECONOMY button on the remote controller.

At the maximum output, ECONOMY Operation is approximately 70% of normal air conditioner operation for cooling and heating.

The ECONOMY operation is almost the same operation as below settings.

( Table 19 : Economy operation )

Mode	Cooling/ Dry	Heating
Target temperature	Setting temp.+2°F(+1°C)	Setting temp.-2°F(-1°C)

## 18. HEAT INSULATION CONDITION ( BUILDING INSULATION )

This setting can make the room temperature control more suitable for homes or buildings with high insulation (Function Number 95).


When the thermo sensor is turned ON it controls the compressor frequency at initial start to prevent overshoot in heating or cooling.

## 19. THERMO CONTROL ( FOR INDOOR UNIT SENSOR )


When room temperature is controlled by the Indoor unit sensor, compressor operation is as shown in Fig. 14 and 15.

But, adjustment is possible by the room temperature correction function setting. (Function Number 30 or 31)

( Fig. 14 : For Cooling operation )

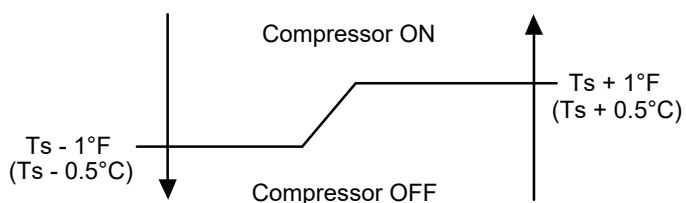

( Fig. 15 : For Heating operation )

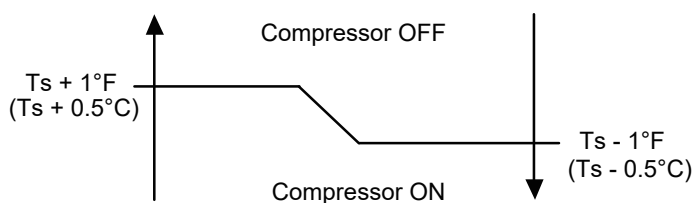


▪  $T_s$  : Setting temperature

## 20. THERMO CONTROL ( FOR WIRED REMOTE SENSOR )


When room temperature is controlled by the Wired remote sensor, compressor operation is as shown in Fig. 16 and 17.

But, adjustment is possible by the room temperature correction function setting. (Function Number 92 or 93)

( Fig. 16 : For Cooling operation )

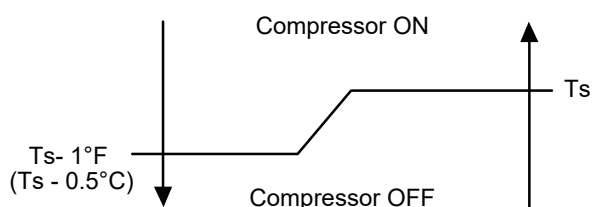

( Fig. 17 : For Heating operation )

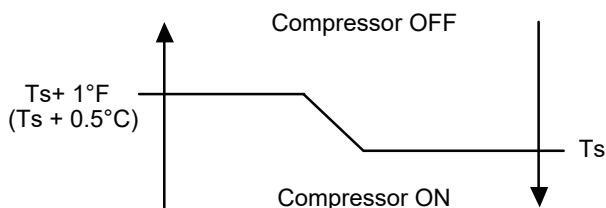


▪  $T_s$  : Setting temperature



## 21. FRESH AIR CONTROL ( For AU type )

The fan motor for Fresh Air is operated in synchronization with the indoor fan operation as shown in Fig. 18 .

( Fig. 18 : Fresh air control )

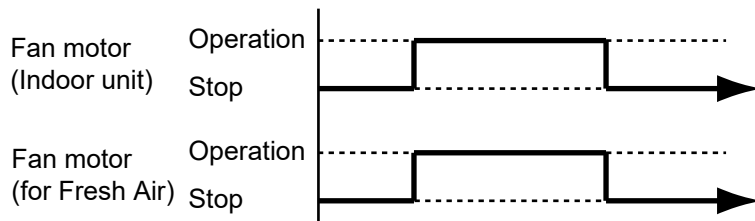

\*It needs the external relay and power supply.

## 22. EXTERNAL ELECTRICAL HEATER CONTROL ( For AR type )

The External Electrical Heater is operated as below.

< Heater : ON condition >


When all of the following conditions are met, external electrical heater will operate according to Fig. 19 .

System type	Heatpump
Operation mode	Heating
Compressor	ON
Indoor fan	ON (S-Lo is excluded)

< Heater : OFF condition >

- 1). When one of the ON conditions is not met.
- 2). When Defrost operation or Oil recovery operation starts

( Fig. 19 External electrical heater control )

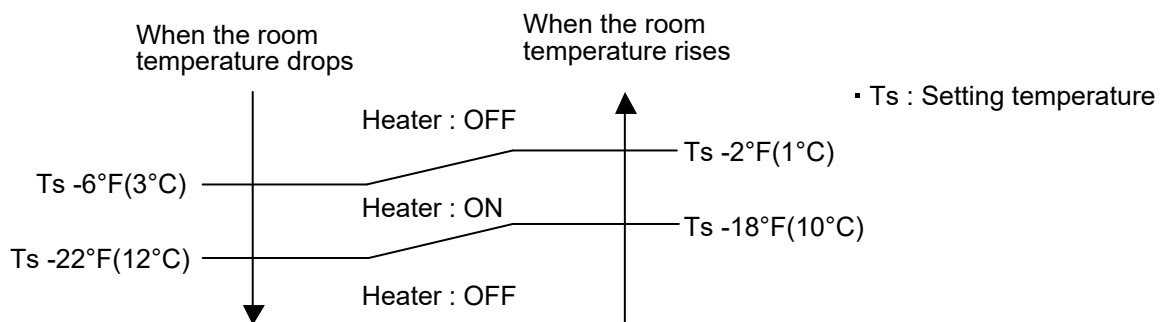


## 23. DRAIN PUMP OPERATION ( For AU / AR type )


### During Cooling / Dry mode

1. When the compressor starts, the drain pump starts simultaneously.
2. The drain pump operates continuously for 3 minutes after the compressor is turned off.
3. When the compressor stops by the "Anti- freezing protection", the drain pump is turned off in 1 hour after the compressor stops.
4. When the water level in the drain pan rises up and then the float switch functions:
  - ① The compressor, indoor and outdoor fan motor operation are stopped.
  - ② Drain pump operates continuously for 3 minutes after the float switch is turned off.
  - (Almost condensing water may be drained)
  - ③ The indoor unit fan motor operates after the float switch is turned off.
5. When the float switch turns ON continuously for 3 minutes, "FAILURE INDICATION" operates.  
(It is necessary to turn off power for release it. )
6. When the float switch turns OFF less than 3 minutes, the unit starts Cooling operation.

( Fig. 20 : Detail of drain pump operation in Cooling / Dry )

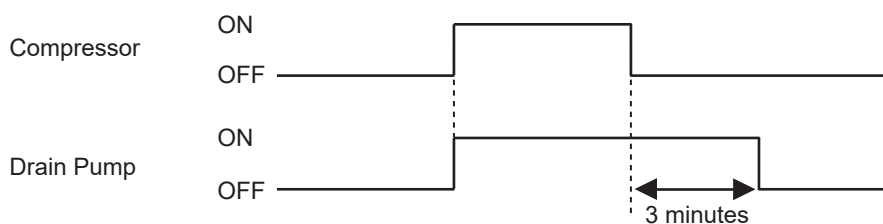


### <Float Switch turns OFF less than 3 minutes>

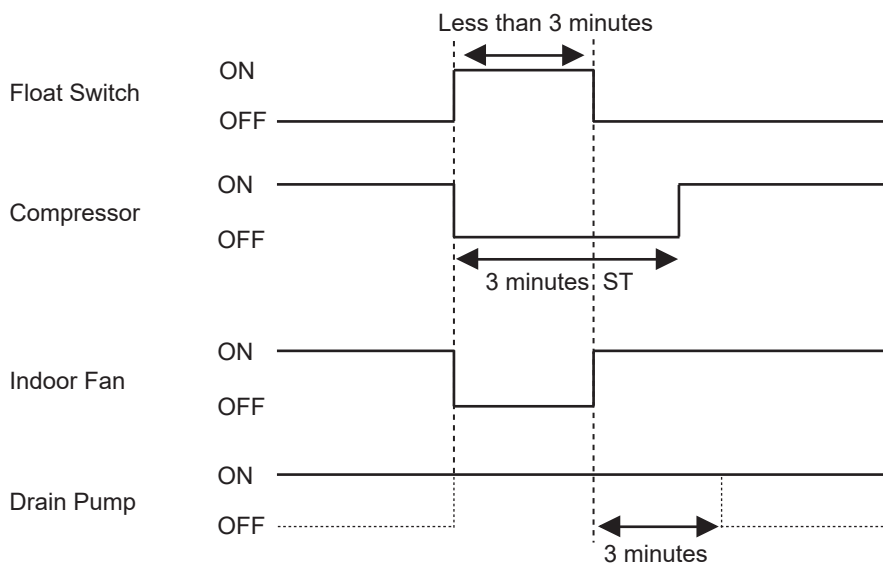

### During HEATING / FAN mode / Stop operation

1. When the water level in the drain pan rises up and then the float switch functions:  
Drain pump operates continuously for 3 minutes after the float switch is turned off.  
(Almost condensing water may be drained)
2. When the float switch turns ON continuously for 3 minutes, "FAILURE INDICATION" operates.  
Thereafter, even if the float switch turns OFF, the "FAILURE INDICATION" is not released.  
(It is necessary to turn off power for release it. )

( Fig. 19 : Detail of drain pump operation in Heating )

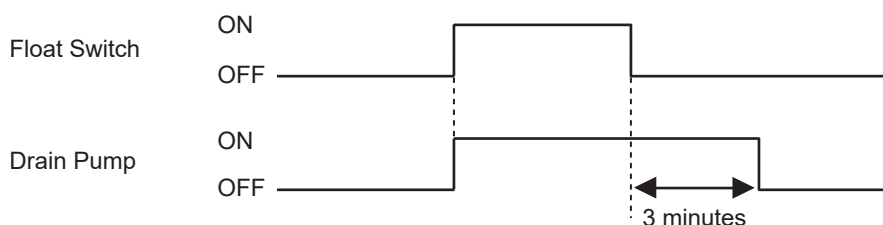

## 24. DEFROST OPERATION CONTROL

### 1. CONDITION OF STARTING THE DEFROST OPERATION

The defrost operation starts when the outdoor heat exchanger temperature sensor detects the temperature lower than the values shown in Table 20, 21 .

#### 1-1 NORMAL DEFROST

( Table 20 : Condition of starting defrost operation )

Normal defrost	Compressor integrating operation time	
	Less than 35 minutes	More than 35minutes
Does not operate		Outdoor heat exchanger temp. $\leq 1.4^{\circ}\text{F}(-17^{\circ}\text{C})$ (at outside air temp. $\geq 14^{\circ}\text{F}(-10^{\circ}\text{C})$ )
		Outdoor heat exchanger temp. $\leq$ Outside air temp. $-(30.6^{\circ}\text{F}(17^{\circ}\text{C}))$ or Outdoor heat exchanger temp. $\leq -13^{\circ}\text{F}(-25^{\circ}\text{C})$ (at $4^{\circ}\text{F}(-20^{\circ}\text{C}) \leq$ outside air temp. $< 14^{\circ}\text{F}(-10^{\circ}\text{C})$ )
		Outdoor heat exchanger temp. $\leq$ Outside air temp. $-(30.6^{\circ}\text{F}(17^{\circ}\text{C}))$ or Outdoor heat exchanger temp. $\leq -22^{\circ}\text{F}(-30^{\circ}\text{C})$ (at outside air temp. $< 4^{\circ}\text{F}(-20^{\circ}\text{C})$ )
		$T_n - T_{n10} < -41^{\circ}\text{F}(5^{\circ}\text{C})$ but $T_n \leq 42.8^{\circ}\text{F}(-6^{\circ}\text{C})$ (Outdoor heat exchanger temp. detected for every 5 minutes )
		$T_n - T_{nA} < -35.6^{\circ}\text{F}(2^{\circ}\text{C})$ but $T_n \leq 42.8^{\circ}\text{F}(-6^{\circ}\text{C})$ (Outdoor heat exchanger temp. detected for every 5 minutes )

$T_n$  : Outdoor heat exchanger temp.

$T_{n10}$  : Temperature of continuous operation at 10 minutes.

$T_{nA}$  : Back 5 minutes temperature.

#### 1-2. INTEGRATING DEFROST

( Table 21 : Condition of starting defrost operation )

Integrating defrost	Compressor integrating operation time	
	More than 210 minutes ( For continuous operation )	Less than 10 minutes * ( For intermittent operation )
	When the compressor is stopped, If detected outside air temp. at $35.6^{\circ}\text{F}(2^{\circ}\text{C})$	OFF count of the compressor 40 times ( at outside air temp. $< 35.6^{\circ}\text{F}(2^{\circ}\text{C})$ )

\*If the compressor continuous operation time is less than 10 minutes, the OFF number of the compressor is counted.

If any defrost operated, the compressor OFF count is cleared.

### 2. CONDITION OF THE DEFROST OPERATION COMPLETION


Defrost operation is released when the conditions become as shown in Table 22 .

( Table 22 : Defrost release condition )

Release Condition
Outdoor heat exchanger temperature sensor value is higher than $60.8^{\circ}\text{F}(16^{\circ}\text{C})$ or Compressor operation time has passed 15 minutes.

### 3. Defrost Flow Chart

The defrosting shall proceed by the integrating operation time, outdoor temperature and outdoor heat exchanger temperature as follows.

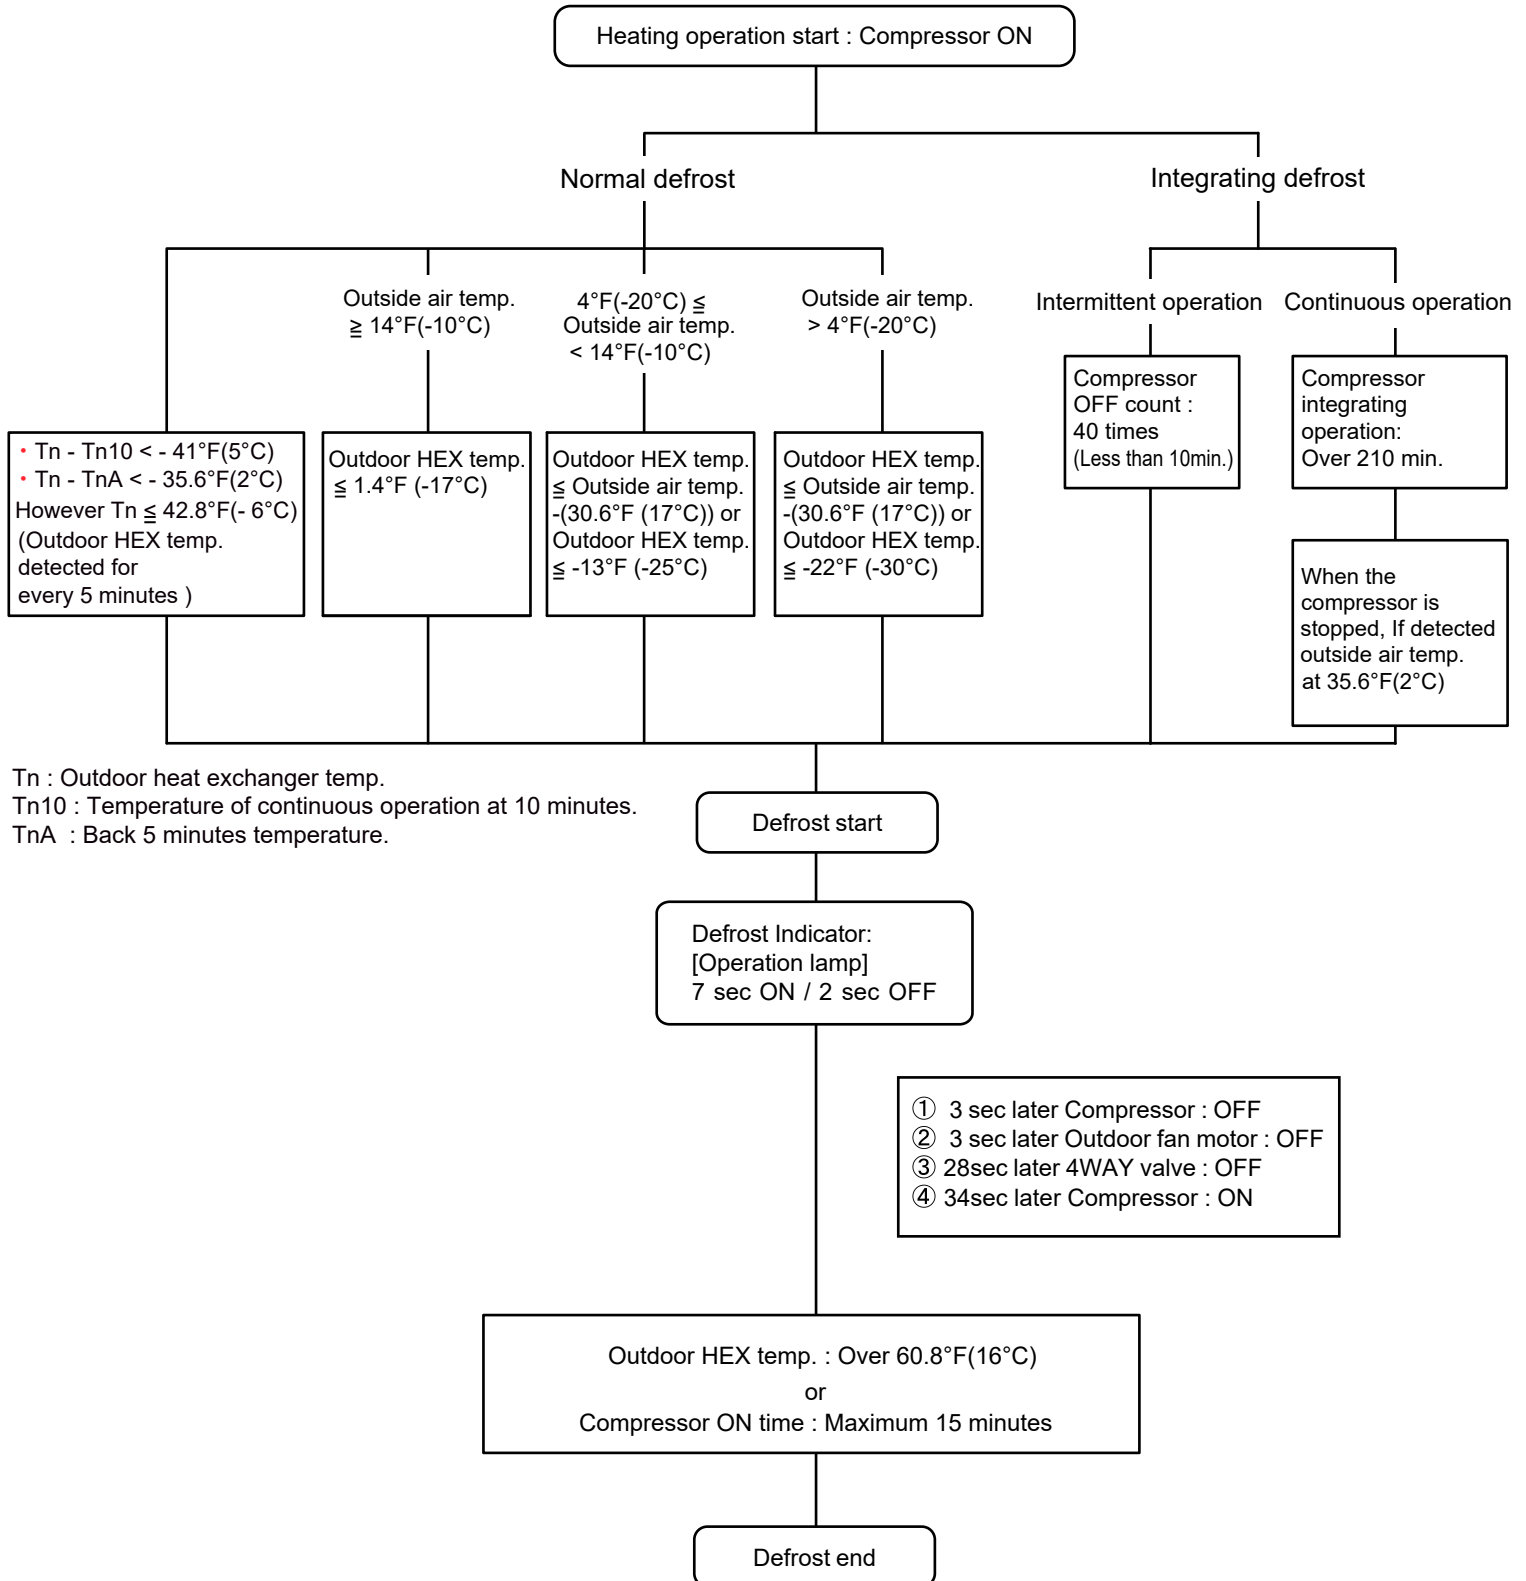

$T_n$  : Outdoor heat exchanger temp.  
 $T_{n10}$  : Temperature of continuous operation at 10 minutes.  
 $T_{nA}$  : Back 5 minutes temperature.

## 25. VARIOUS PROTECTIONS

### 1. DISCHARGE GAS TEMPERATURE OVER RISE PREVENTION CONTROL

The discharge gas thermosensor (discharge thermistor : Outdoor side) will detect discharge gas temperature.

When the discharge temperature becomes higher than Temperature I , the compressor frequency is decreased 10rps, and it continues to decrease the frequency for 10rps every 120 seconds until the temperature becomes lower than Temperature II.

When the discharge temperature becomes lower than Temperature II ,the control of the compressor frequency is released.

When the discharge temperature becomes higher than Temperature III ,the compressor stops.

( Table 23 : Discharge temperature over rise prevention control / Release temperature )

	Temperature I	Temperature II	Temperature III
AOU36RLXFZ1	219°F (104°C)	214°F (101°C)	230°F (110°C)

### 2. CURRENT RELEASE CONTROL

The compressor frequency is controlled so that the outdoor unit input current does not exceeds the current limit value that was set up with the outdoor temperature.

The compressor frequency returns to the designated frequency of the indoor unit at the time when the frequency becomes lower than the release value.

### 3. ANTI-FREEZING CONTROL (Cooling / Dry mode)

When the indoor unit heat exchanger and 2-way valve temperature becomes lower than Temperature I , the compressor frequency is decreased 10rps, and it continues to decrease the frequency for 10rps every 120 seconds until the temperature becomes higher than Temperature II . This operation is not released until both the temperature of the indoor unit heat exchanger and 2-way valve temperature exceed the release temperature.

( Table 24 : Anti-freezing protection operation / Release temperature )

Outside air Temperature	Temperature I		Temperature II	
	Indoor Heat Ex. Temperature	2-way valve Temperature	Indoor Heat Ex. Temperature	2-way valve Temperature
≥ 53.6°F(12°C)	37.4°F(3°C)	35.6°F(2°C)	42.8°F(6°C)	41.0°F(5°C)
< 53.6°F(12°C)	37.4°F(3°C)	35.6°F(2°C)	55.4°F(13°C)	53.6°F(12°C)


### 4. COOLING PRESSURE OVER RISE PROTECTION

When the outdoor unit heat exchange sensor temperature rises to 154.4 °F (68 °C) or greater, the compressor is stopped and error display is indicated.

## 5. HIGH TEMPERATURE RELEASE CONTROL ( Heating mode )

On heating mode, the compressor frequency is controlled as following based on the detection value of the indoor heat exchanger temperature sensor.

( Fig. 25 : Heating overload protection control )

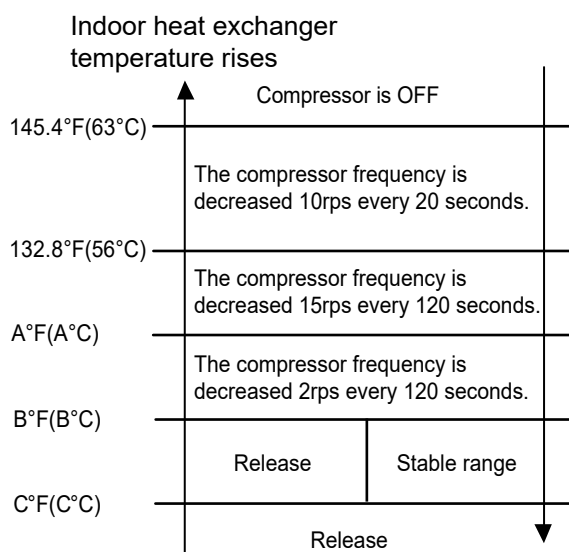

Outdoor heat exchange temperature	In one operation of the indoor unit : Qu air than			All indoor unit opeate, : Qu air		
	A°F (A°C)	B°F (B°C)	C°F (C°C)	A°F (A°C)	B°F (B°C)	C°F (C°C)
12.2°F(-11°C) ≤ Th	125.6°F (54°C)	125.6°F (52°C)	122.0°F (50°C)	118.4°F (50°C)	114.8°F (48°C)	114.8°F (46°C)
8.6°F(-13°C) ≤ Th < 12.2°F(-11°C)	129.2°F (54°C)	125.6°F (52°C)	118.4°F (48°C)	122.0°F (50°C)	118.4°F (48°C)	114.8°F (46°C)
5°F(-15°C) ≤ Th < 8.6°F(-13°C)	125.6°F (52°C)	122.0°F (50°C)	114.8°F (46°C)	122.0°F (50°C)	118.4°F (48°C)	114.8°F (46°C)
-13°F(-25°C) ≤ Th < 5°F(-15°C)	122.0°F (50°C)	118.4°F (48°C)	111.2°F (44°C)	114.8°F (46°C)	111.2°F (44°C)	104.0°F (40°C)
-20.2°F(-29°C) ≤ Th < -13°F(-25°C)	113.0°F (45°C)	109.4°F (43°C)	102.2°F (39°C)	113.0°F (45°C)	109.4°F (43°C)	102.2°F (39°C)
Th < -20.2°F(-29°C)	104.0°F (40°C)	100.4°F (38°C)	93.2°F (34°C)	104.0°F (40°C)	100.4°F (38°C)	93.2°F (34°C)

## 6. HIGH PRESSURE PROTECTION

- When the pressure switch becomes OFF (Open : higher than 609.2 psi / 4.2 MPa), the compressor is stopped.  
It is released when the pressure switch becomes ON (Close : lower than 464.1 psi / 3.2 MPa) after 3 minutes of compressor stop.
- When the pressure switch is opened for 10 seconds from power on, all of outdoor unit operation is stopped.  
The outdoor unit will start up if the pressure switch is returned to ON after 10 seconds has passed.  
When 10 minutes (Cooling) or 3 minutes (Heating) has passed from the compressor stop and pressure switch becomes ON, protection is released and the compressor will restart.

## 7. COMPRESSOR TEMPERATURE PROTECTION

Compressor temperature sensor is monitoring the compressor temperature. I  
When the compressor temperature sensor detects higher than Temperature I , the compressor is stopped.  
When 3 minutes has passed from the compressor stop and the compressor temperature sensor detects lower than Temperature II, protection is released and the compressor will restart.

	Temperature I	Temperature II
AOU36RLXFZ1	226°F (108°C)	176°F (80°C)

***Slim Duct / Compact Cassette  
Compact Wall Mounted /  
Wall Mounted / Floor type***

***INVERTER (MULTI)***

**2 . TROUBLE SHOOTING**

## 2-1 ERROR DISPLAY

### 2-1-1 INDOOR UNIT AND WIRED REMOTE CONTROLLER DISPLAY

Please refer the flashing pattern as follows.

The Operation, Timer, Economy lamps operate as follows according to the error contents.


Error Contents	Indoor Unit Display			Wired Remote Controller Display	Trouble shooting
	Operation (Green)	Timer (Orange)	Economy (Green)		
Serial Communication Error	1 times	1 times	Continuous	11	1,2
Wired Remote Controller Communication Error	1 times	2 times	Continuous	12	3
Unit number or Refrigerant circuit address setting error	2 times	1 times	Continuous	21	4
Indoor Unit Capacity Error	2 times	2 times	Continuous	22	5
Connecting Nuber of Indoor Unit Error	2 times	4 times	Continuous	24	6
Address Setting Error Dual Address Number is Existing	2 times	6 times	Continuous	26	7
Indoor Unit Model Information Error EEPROM Access Abnormal	3 times	2 times	Continuous	32	8
Manual Auto Switch Error	3 times	5 times	Continuous	35	9
Indoor Room Thermistor Error	4 times	1 times	Continuous	41	10
Indoor Heat Ex. Thermistor Error	4 times	2 times	Continuous	42	11
Indoor Unit Fan Motor Error	5 times	1 times	Continuous	51	12
Drain Pump Error	5 times	3 times	Continuous	53	13
Damper Error	5 times	7 times	Continuous	57	14,15
Outdoor Unit Model Information Error EEPROM Error	6 times	2 times	Continuous	62	16
Active Filter Error	6 times	4 times	Continuous	64	17
IPM Error	6 times	5 times	Continuous	65	18
Discharge Thermistor Error	7 times	1 times	Continuous	71	19
Compressor Thermistor Error	7 times	2 times	Continuous	72	20
Heat Ex. Thermistor Error (OUT)	7 times	3 times	Continuous	73	21
Heat Ex. Thermistor Error (MID.)	7 times	3 times	Continuous	73	22
Outdoor Thermistor Error	7 times	4 times	Continuous	74	23
2-Way Valve Thermistor Error	7 times	6 times	Continuous	76	24
3-Way Valve Thermistor Error	7 times	6 times	Continuous	76	25
Heatsink Thermistor Error	7 times	7 times	Continuous	77	26
CT Error	8 times	4 times	Continuous	84	27
Discharge Pressure Sensor Error	8 times	6 times	Continuous	86	28
Over Current Error	9 times	4 times	Continuous	94	29
Compressor Control Error	9 times	5 times	Continuous	95	30
Outdoor Unit Fan Motor Error	9 times	7 times	Continuous	97	31
4-Way Valve Error	9 times	9 times	Continuous	99	32
Discharge Temp. Error	10 times	1 times	Continuous	A1	33
Compressure Temp. Error	10 times	3 times	Continuous	A3	34
Poor Refrigerant Circulation	10 times	8 times	Continuous	A8	35



## 2-1-2 WIRED REMOTE CONTROLLER DISPLAY

### 1. SELF - DIAGNOSIS

When "Er" in Temperature Display is displayed, inspection of the air conditioning system is necessary. Please consult authorized service personnel.

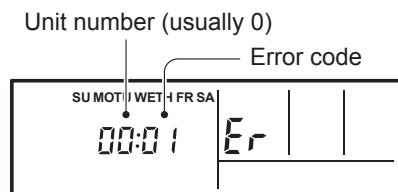





ex. Self-diagnosis check

### 2. ERROR CODE HISTORY DISPLAY


Up to 16 memorized error codes may be displayed for the indoor unit connected to the remote controller.

1. Stop the air conditioner operation.

2. Press the SET TEMPERATURE buttons ,  simultaneously for 3 seconds or more to start the self-diagnosis.

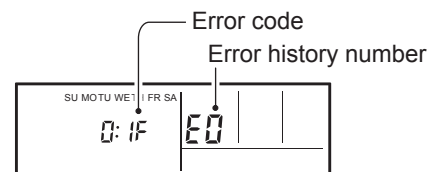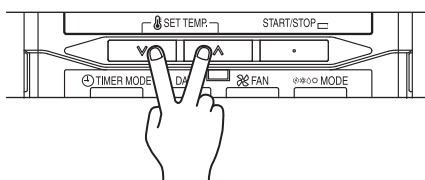

3. Press the SET TEMPERATURE button to select the error history number.

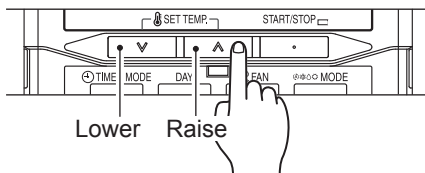

0 ↔ 1 ↔ 2 ↔ 3 ↔ 4 ↔ 5 ↔ 6 ↔ 7  
F ↔ E ↔ d ↔ c ↔ b ↔ A ↔ 9 ↔ 8

4. Press the SET TEMPERATURE buttons ,  simultaneously for 3 seconds or more or there is no key input for 60 seconds to stop the display.

## 2-1-3 OUTDOOR UNIT DISPLAY


### 1. ERROR DISPLAY

Error Contents	LED1	LED2	LED3	LED4	Trouble shooting
Discharge Thermistor Error	● 2 times	OFF	OFF	OFF	19
Heat Ex. Thermistor Error	● 3 times	OFF	OFF	OFF	21
Outdoor Thermistor Error	● 4 times	OFF	OFF	OFF	23
2-way Valve Thermistor Error (for Indoor unit A)	● 5 times	OFF	OFF	OFF	24
2-Way Valve Thermistor Error (for Indoor unit B)	OFF	● 5 times	OFF	OFF	
2-Way Valve Thermistor Error (for Indoor unit C)	OFF	OFF	● 5 times	OFF	
2-Way Valve Thermistor Error (for Indoor unit D)	OFF	OFF	OFF	● 5 times	
3-Way Valve Thermistor Error (for Indoor unit A)	● 6 times	OFF	OFF	OFF	25
3-Way Valve Thermistor Error (for Indoor unit B)	OFF	● 6 times	OFF	OFF	
3-Way Valve Thermistor Error (for Indoor unit C)	OFF	OFF	● 6 times	OFF	
3-Way Valve Thermistor Error (for Indoor unit D)	OFF	OFF	OFF	● 6 times	
Compressor Thermistor Error	● 7 times	OFF	OFF	OFF	20
Heat Sink Thermistor Error	● 8 times	OFF	OFF	OFF	26
High Pressure Switch Error	● 9 times	OFF	OFF	OFF	28
Indoor Unit Capacity Error	● 11 times	OFF	OFF	OFF	5
Over Current Error	● 12 times	OFF	OFF	OFF	29
Compressor Control Error	● 13 times	OFF	OFF	OFF	30
IPM Error	● 14 times	OFF	OFF	OFF	18
Outdoor Unit Fan Motor Error	● 15 times	OFF	OFF	OFF	31
Heat Ex. MID Thermistor Error	● 16 times	OFF	OFF	OFF	22
Outdoor Unit PCB Microcomputer Communication Error	● 17 times	OFF	OFF	OFF	16
Discharge Temp. Error	● 18 times	OFF	OFF	OFF	33
Compressor Temp. Error	● 19 times	OFF	OFF	OFF	34
4-Way Valve Error	● 20 times	OFF	OFF	OFF	32
Outdoor Unit PCB Model Information Error	● 21 times	OFF	OFF	OFF	16
Active Filter Error	● 22 times	OFF	OFF	OFF	17
CT Error	● 23 times	OFF	OFF	OFF	27

● : Flashing

### 2. ERROR DISPLAY METHOD

Outdoor LED Blink (1 to 22 times) 0.5sec ON / 0.5sec OFF blinking

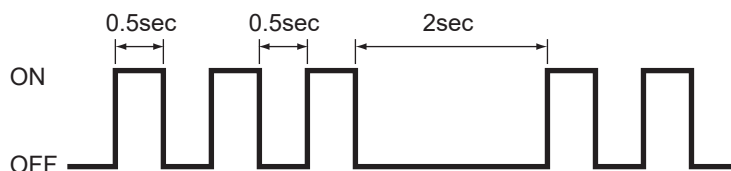

## 2-2 TROUBLESHOOTING WITH ERROR CODE

**Troubleshooting 1**  
**OUTDOOR UNIT Error Method:**  
**Serial Communication Error**  
**(Serial Reverse Transfer Error)**

**Indicate or Display:**

Outdoor Unit : No indication  
 Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 1 time Flash  
 Economy lamp: Continuous flash.  
**ERROR CODE : [E : 11]**

**Detective Actuators:**

Outdoor unit Main PCB  
 Outdoor unit Fan motor

**Detective details:**

When the indoor unit cannot receive the serial signal from Outdoor unit more than 2minutes after power ON, or the indoor unit cannot receive the serial signal more than 15seconds during normal operation.

**Forecast of Cause:**

1. Connection failure
2. External cause
3. Main PCB failure
4. Active filter module failure
5. Power supply PCB failure
6. Outdoor unit Fan motor failure

Check Point 1-1 : Reset the power and operate

- Does error indication reappear?

NO

YES

Check Point 2 : Check connection

- Check any loose or removed connection line of between indoor unit and outdoor unit.  
 >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**
- Check connection condition in control unit.  
 (If there is loose connector, open cable or miss-wiring)


Check Point 1-2 : Check external cause such as noise

- Check if the ground connection is proper.
- Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).

OK

Check Point 3 : Check the voltage of power supply

- Check the voltage of power supply  
 >> **Check if AC187V(AC208V-10%) - 253V(AC230V+10%) appears at outdoor unit terminal L1 - L2.**

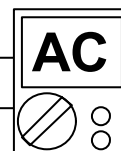


OK

Check Point 4 : Check serial signal (Reverse transfer signal)





- Check serial signal (Reverse transfer signal)  
 >> **Check if indicated value swings between AC90V and AC270V at outdoor unit terminal 1 - 3.**  
 >> **If it is abnormal, Check the parts as follows.**
  - Outdoor unit fan motor (PARTS INFORMATION 5)
  - Active filter module (PARTS INFORMATION 6)
  - Power supply PCB (Check the wire of CN34)
 >> **If Outdoor fan motor is abnormal, replace Outdoor unit fan motor and Main PCB.**  
 >> **If Active filter module is abnormal, replace it.**  
 >> **If the parts are normal, replace Main PCB.**

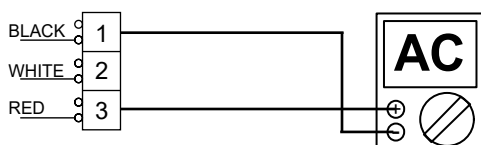


<b>Trouble shooting 2</b> <b>INDOOR UNIT Error Method:</b> <b>Serial Communication Error</b> <b>(Serial Forward Transfer Error)</b>	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 11]</b>
<b>Detective Actuators:</b>  Indoor unit Controller PCB	<b>Detective details:</b>  When the outdoor unit cannot properly receive the serial signal from indoor unit for 15 seconds or more.

<b>Forecast of Cause:</b> 1. Connection failure    2. External cause    3. Controller PCB failure
--

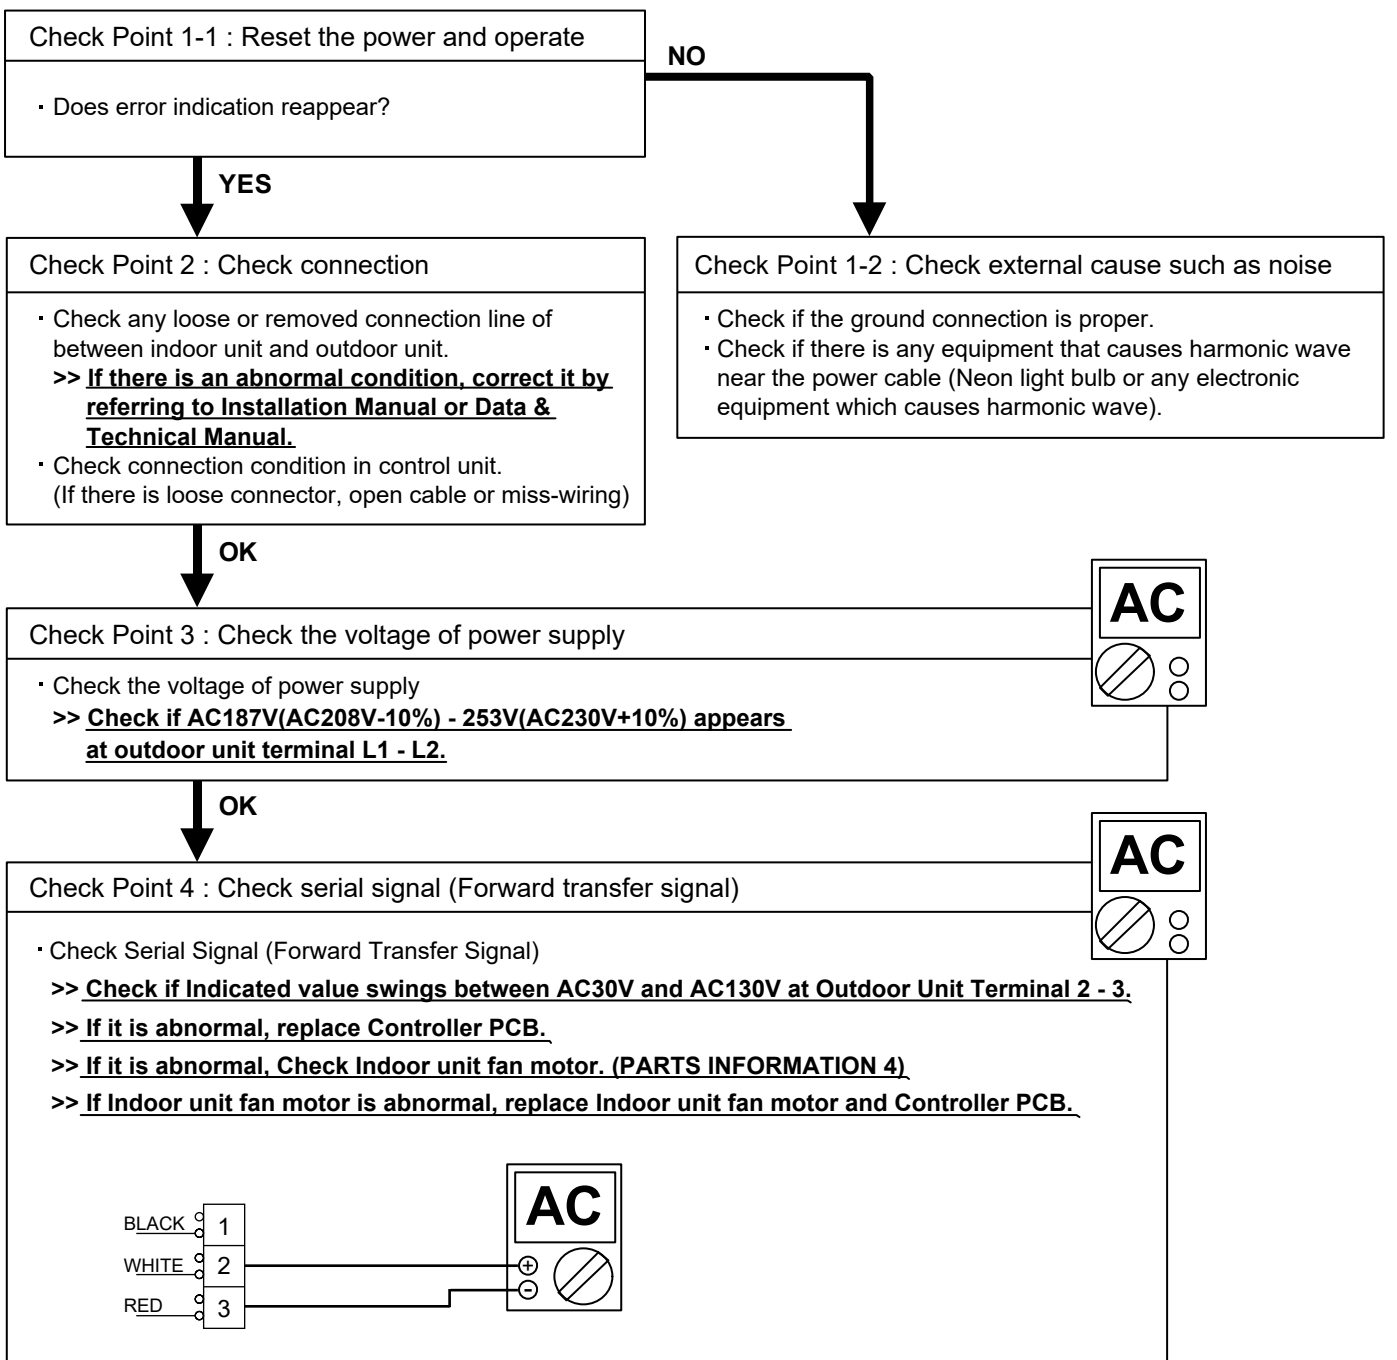

<b>Trouble shooting 3</b> <b><u>INDOOR UNIT Error Method:</u></b> <b>Wired Remote Controller</b> <b>Communication Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 12]</b>
<b><u>Detective Actuators:</u></b> Indoor unit Controller PCB Wired Remote Controller (Option)	<b><u>Detective details:</u></b> When the indoor unit cannot properly receive the signal from Wired Remote Controller for 1 minute or more.
<b><u>Forecast of Cause:</u></b> 1. Connection failure   2. Wired Remote Controller failure   3. Controller PCB failure	
Check Point 1 : Check the connection of terminal	
<u>Check &amp; correct the followings.</u> • Check the connection of terminal between Wired Remote Controller and indoor unit, and check if there is a disconnection of the cable.	
	
Check Point 2 : Check Wired Remote Controller and Controller PCB	
• Check Voltage at terminal 1-3 of Controller PCB or Communication PCB. (Power supply to Remote Controller) Wall Mount Type : CN300 (UTY-TWRXZ2) Cassette Type, Duct Type : CN300 Floor Type : CN6  <b>&gt;&gt; If it is DC12V, Remote Controller is failure. (Controller PCB is normal)                      &gt;&gt; Replace Remote Controller</b> <b>&gt;&gt; If it is DC 0V, Controller PCB is failure. (Check Remote Controller once again) &gt;&gt; Replace Controller PCB</b>	




<b>Trouble shooting 4</b> <b><u>INDOOR UNIT Error Method:</u></b> <b>Unit number or Refrigerant circuit address setting error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 2 time Flash,Timer lamp: 1 time Flash Economy lamp : Continuous flash. <b>ERROR CODE : [E : 21]</b>
<b><u>Detective Actuators:</u></b>  Indoor unit Controller PCB	<b><u>Detective details:</u></b>  When the addresses set in indoor units are not consecutive in the same refrigerant circuit.
<b><u>Forecast of Cause :</u></b> 1. Dip SW incorrect setting    2. Controller PCB failure	
Check Point 1 : Check the DIP-SW of Controller PCB setting	
<ul style="list-style-type: none"> <li>• Check the DIP-SW of controller setting.</li> </ul> <p>&gt;&gt; <b><u>If there is an abnormal condition, correct it by referring to Installation Manual or Data &amp; Technical Manual.</u></b></p> <p>&gt;&gt; <b><u>Upon correcting incorrect setting, reset the power.</u></b></p>	
<div style="text-align: center;">  <b>OK</b> </div>	
Check Point 2 : Replace Controller PCB	
<p>► <b><u>If Check Point 1 do not improve the symptom, replace Controller PCB.</u></b></p>	

<b>Troubleshooting 5</b> <b>INDOOR UNIT Error Method:</b> <b>Indoor Unit Capacity Error</b> Connecting indoor units capacity error Error at Indoor unit connection check	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 2 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 22]</b>
--	--

<b>Detective Actuators:</b> All indoor unit Outdoor unit Main PCB	<b>Detective details:</b> • When error occurs during Indoor unit connection check
---	--


<b>Forecast of Cause :</b>	1. Indoor unit power supply defective 2 Indoor unit over connected 3. Communication line incorrect connection 4. Wrong Indoor unit address setting 5. Noise, momentary open
----------------------------	---

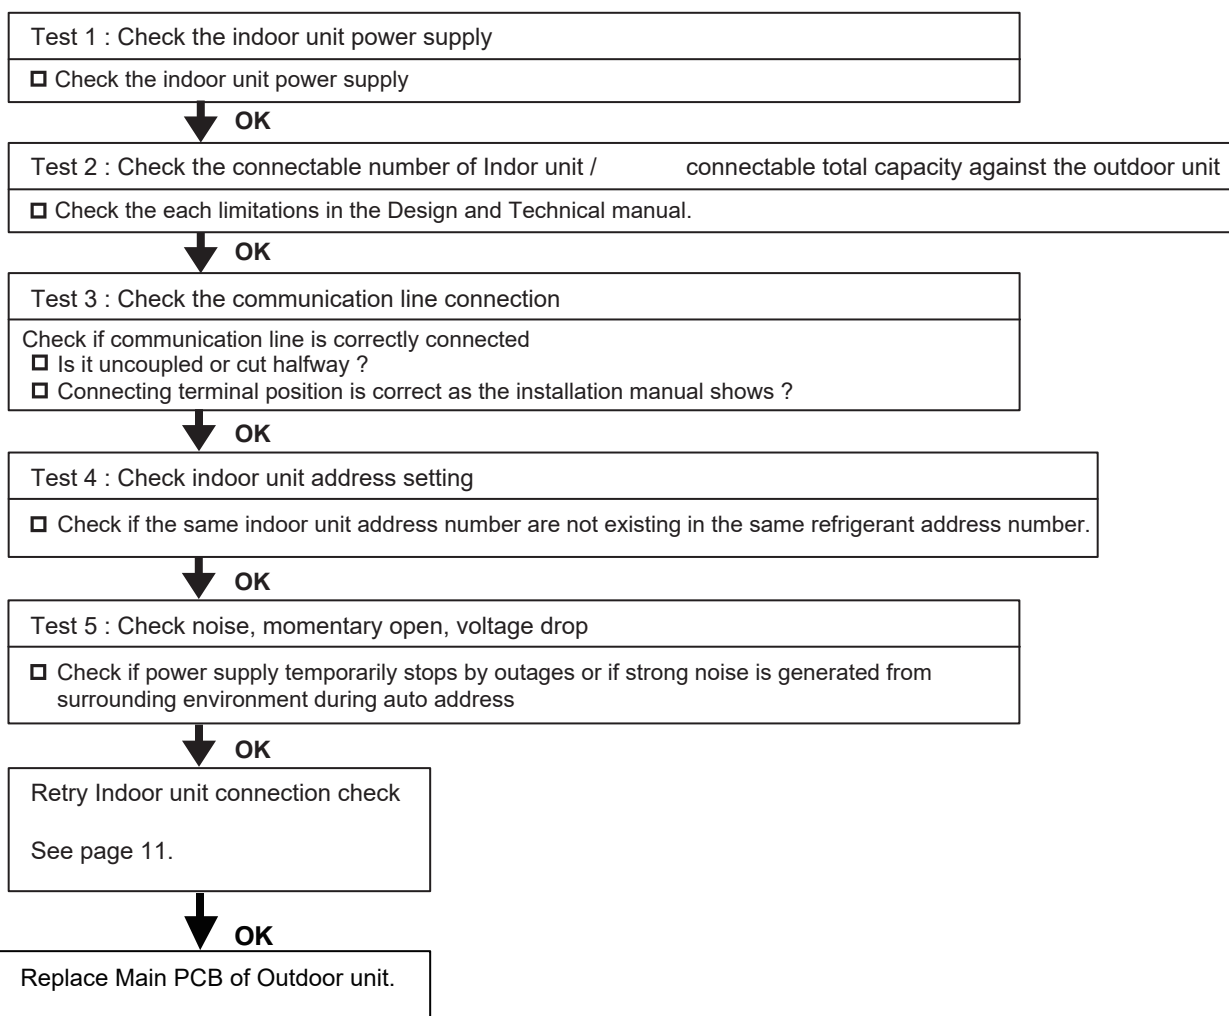

<b>Troubleshooting 6</b> <b><u>INDOOR UNIT Error Method:</u></b> Connecting number of indoor unit error Error at indoor unit connection check	<b><u>Indicate or Display:</u></b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 2 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 24]</b>
--	---

<b><u>Detective Actuators:</u></b> All indoor unit Outdoor unit Main PCB	<b><u>Detective details:</u></b> • When error occurs during Indoor unit connection check
--	---

<b><u>Forecast of Cause :</u></b>	1. Indoor unit power supply defective 3. Communication line incorrect connection 5. Noise, momentary open	2 Indoor unit over connected 4. Wrong Indoor unit address setting
-----------------------------------	---	--

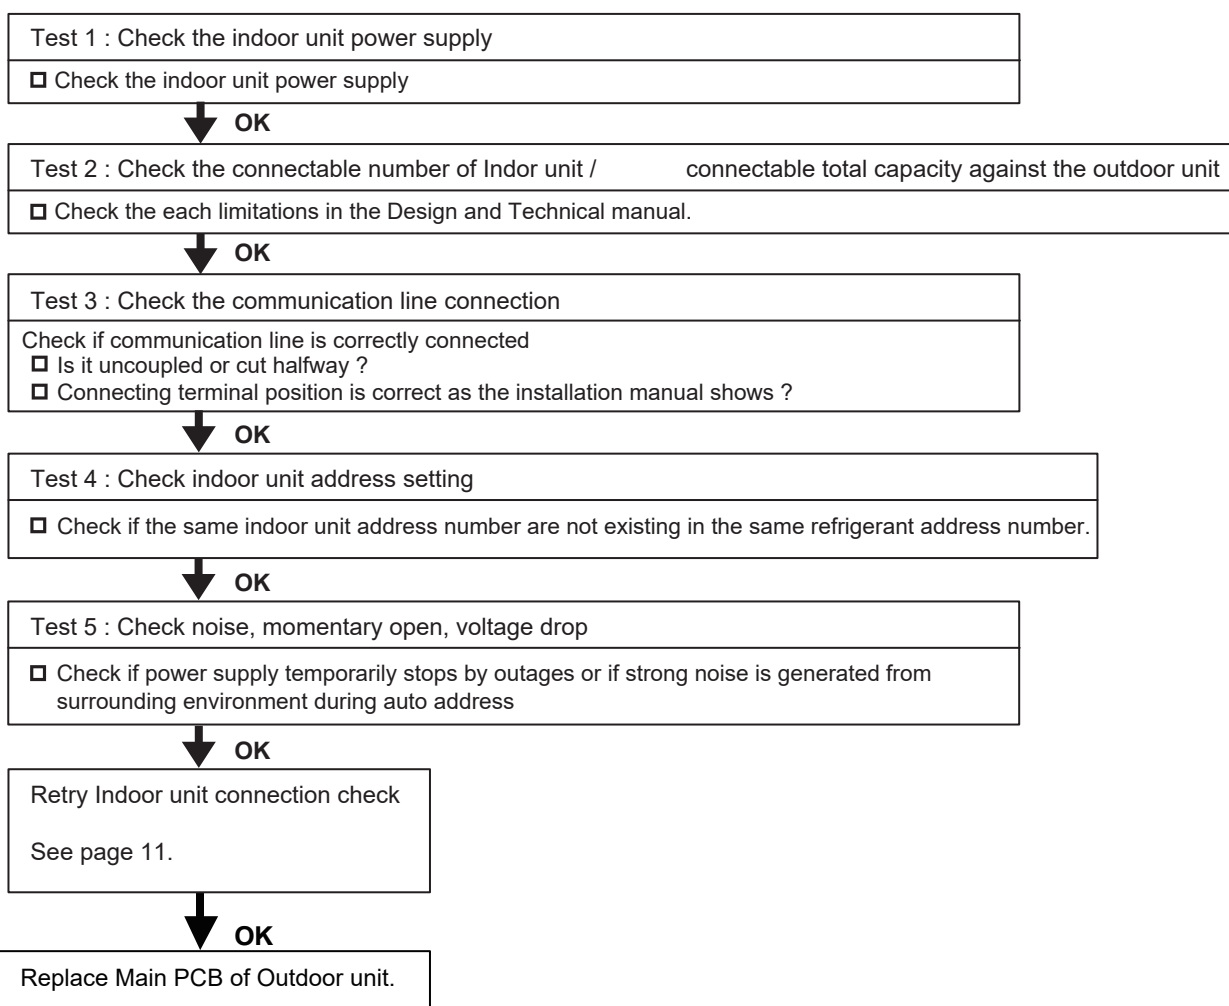



<b>Troubleshooting 7</b> <b>INDOOR UNIT Error Method:</b> Address setting error. Dual address number is existing. Error at indoor unit connection check.	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 2 time Flash, Timer lamp: 6 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 26]</b>
--	--

<b>Detective Actuators:</b> All indoor unit Outdoor unit Main PCB	<b>Detective details:</b> • When error occurs during Indoor unit connection check
---	--

<b>Forecast of Cause :</b>	1. Indoor unit power supply defective 3. Communication line incorrect connection 5. Noise, momentary open	2 Indoor unit over connected 4. Wrong Indoor unit address setting
----------------------------	---	--

Test 1 : Check the indoor unit power supply
<input type="checkbox"/> Check the indoor unit power supply

↓ **OK**

Test 2 : Check the connectable number of Indoor unit / connectable total capacity against the outdoor unit
<input type="checkbox"/> Check the each limitations in the Design and Technical manual.

↓ **OK**

Test 3 : Check the communication line connection
Check if communication line is correctly connected
<input type="checkbox"/> Is it uncoupled or cut halfway ?
<input type="checkbox"/> Connecting terminal position is correct as the installation manual shows ?

↓ **OK**

Test 4 : Check indoor unit address setting
<input type="checkbox"/> Check if the same indoor unit address number are not existing in the same refrigerant address number.

↓ **OK**

Test 5 : Check noise, momentary open, voltage drop
<input type="checkbox"/> Check if power supply temporarily stops by outages or if strong noise is generated from surrounding environment during auto address

↓ **OK**


Retry Indoor unit connection check
See page 11.

↓ **OK**

Replace Main PCB of Outdoor unit.
-----------------------------------


# Indoor unit connection check

## ● SWITCH POSITION

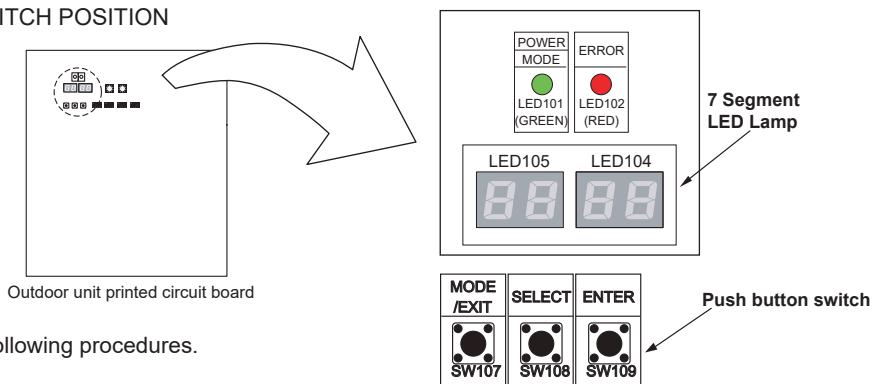

Please perform the indoor unit connection check according to following procedures.

- Turn on the power of indoor unit and outdoor unit.

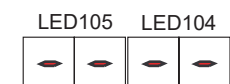

MODE/EXIT



Set to Function mode [F3].

SELECT




SELECT

(When [F4] to [F9] are displayed, continue to press the "SELECT" button until [F3] is displayed.)




ENTER

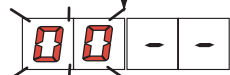

SELECT

Press the "SELECT" button until "12" is displayed.

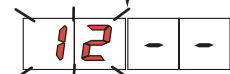

ENTER


- Press the "ENTER" button for more than 3 seconds.



When indoor unit connection check can not be performed



- This will be displayed when the Indoor unit connection check starts.

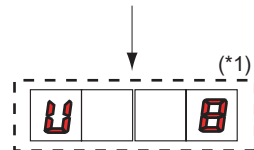

- Confirm the number of connected indoor units and the volume ratio of the indoor units connection.


(\*1) The number of connected indoor units  
Ex.) When 8 units are connected

(\*2) Volume ratio of the indoor units connection  
Ex.) When the ratio is 120%

- Exit indoor unit connection check mode.

ENTER

SELECT

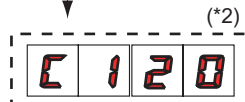

ENTER

When error occurs




ENTER



MODE/EXIT



When it finishes normally, nothing will be displayed on 7 segment display.

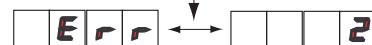


Please refer to the following "Error code" for details

[ Note ] Error code  
22.1: Connecting Indoor units capacity error  
24.2: Connecting number of indoor unit error  
26.1: Dual address number is existing  
Other Error code: Refer to the Trouble shooting

<b>Troubleshooting 8</b> <b>INDOOR UNIT Error Method:</b> <b>Indoor Unit Model Information Error</b> <b>EEPROM Access Abnormal</b>	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 32]</b>
---	--

<b>Detective Actuators:</b> Indoor unit Controller PCB	<b>Detective details:</b> When power is on and there is some below case. ① When model information of EEPROM is incorrect. ② When the access to EEPROM failed.
---	--

<b>Forecast of Cause:</b> 1. External cause    2. Defective connection of electric components    3. Controller PCB failure
---

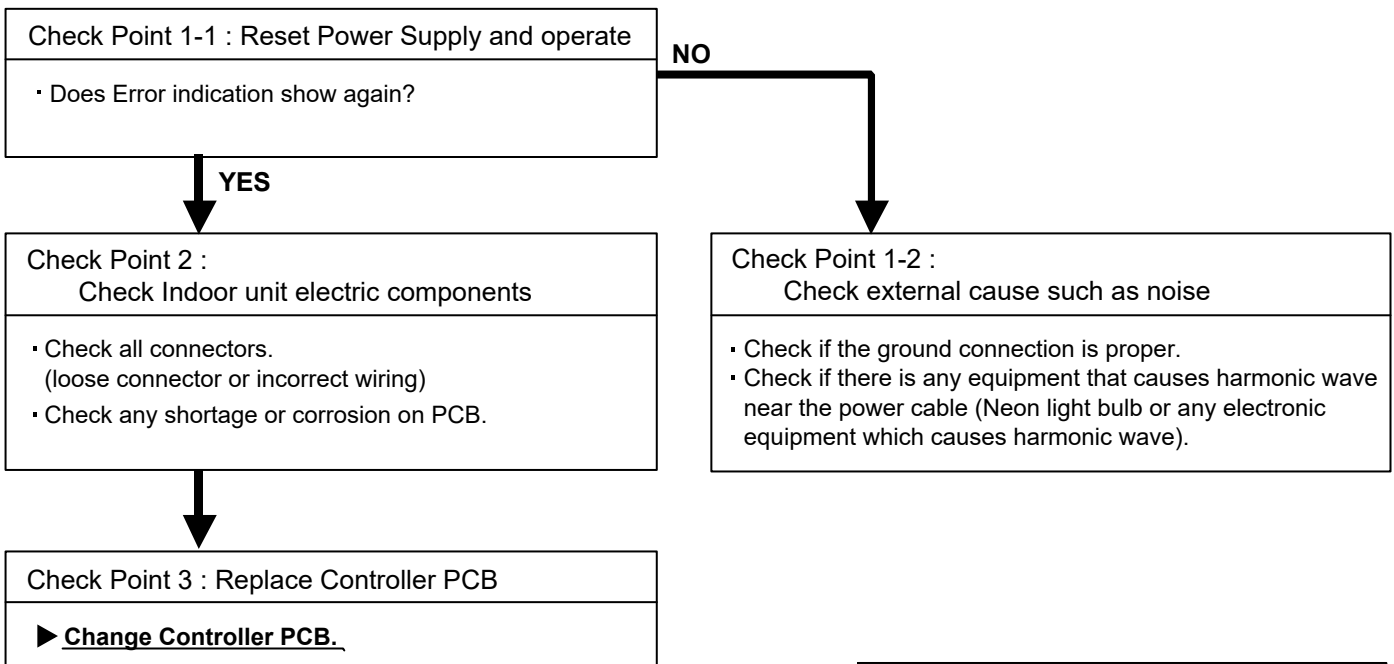


#### **Note : EEPROM**

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

<b>Troubleshooting 9</b> <b>INDOOR UNIT Error Method:</b> <b>Manual Auto Switch Error</b>	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 5 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 35]</b>
---	--

<b>Detective Actuators:</b> Indoor Unit Controller PCB Indicator PCB Manual Auto Switch	<b>Detective details:</b> When the Manual Auto Switch becomes ON for consecutive 60 or more seconds.
--	---

<b>Forecast of Cause :</b> 1. Manual Auto Switch failure    2. Controller PCB and Indicator PCB failure
--

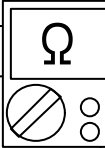Check Point 1 : Check the Manual Auto Switch <ul style="list-style-type: none"> <li>• Check if Manual Auto Switch is kept pressed.</li> <li>• Check ON/OFF switching operation by using a meter.</li> </ul> <b>&gt;&gt; If Manual Auto Switch is disabled (on/off switching), replace it.</b>	
--	---



Check Point 2 : Replace Controller PCB and Indicator PCB <b>► If Check Point 1 do not improve the symptom, replace Controller PCB and Indicator PCB.</b>
---



**Troubleshooting 11**  
**INDOOR UNIT Error Method:**  
**Indoor Heat Ex. Thermistor Error**

**Indicate or Display:**

Outdoor Unit : No indication

Indoor Unit : Operation lamp: 4 time Flash, Timer lamp: 2 time Flash  
 Economy lamp: Continuous flash.

ERROR CODE : [E : 42]

**Detective Actuators:**

Indoor unit controller PCB circuit  
 Heat exchanger thermistor

**Detective details:**

Heat exchanger thermistor is open or short is detected always.

**Forecast of Cause:**

1. Connector failure connection 2. Thermistor failure 3. Controller PCB failure

**Test 1 : Check connection of Connector**

- Check if connector is loose or removed
  - Check erroneous connection
  - Check if thermistor cable is open
- >>Reset Power when reinstalling due to removed connector or incorrect wiring.**



**Test 2 : Remove connector and check Thermistor resistance value**



Thermistor Characteristics (Rough value)

Temperature (°C)	-30	-20	-10	0	10	20	30	40	50
Temperature (°F)	-22	-4	14	32	50	68	86	104	122
Resistance Value (kΩ)	1131.91	579.59	312.27	176.03	103.34	62.91	39.57	25.64	17.06

Temperature (°C)	60	65
Temperature (°F)	140	149
Resistance Value (kΩ)	11.64	9.69

► **If Thermistor is either open or shorted, replace it and reset the power.**





**Test 3 : Check voltage of Controller PCB (DC5.0V)**




Make sure circuit diagram of each indoor unit and check terminal voltage at Thermistor (DC5.0V)

- Compact wall mount circuit diagram(Connector connection)
- Wall mount circuit diagram (Direct soldering to PCB)
- Slim duct circuit diagram (Connector connection)
- Compact cassette circuit diagram (Connector connection)

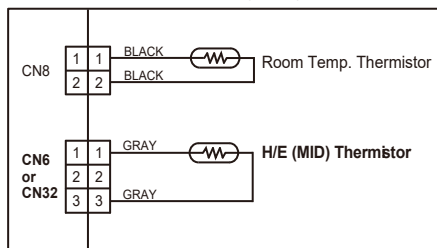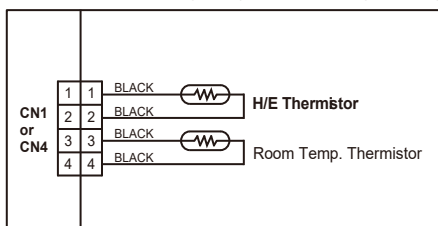

- Floor circuit diagram (Connector connection and Direct soldering to PCB)

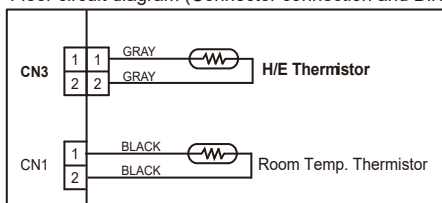

► **If the voltage does not appear, replace Controller PCB and execute the check operation again.**

<b>Troubleshooting 12</b> <b>INDOOR UNIT Error Method:</b> <b>Indoor Unit Fan Motor Error</b>	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 51]</b>
---	--

<b>Detective Actuators:</b> Indoor unit Controller PCB Indoor unit fan motor	<b>Detective details:</b> When the condition that actual frequency of Indoor Fan is below 1/3 of target frequency is continued more than 56 seconds.
--	---

<b>Forecast of Cause:</b> 1. Fan rotation failure    2. Fan motor winding open    3. Motor protection by surrounding temperature rise 4. Control PCB failure    5. Indoor unit fan motor failure
--

Check Point 1 : Check rotation of Fan
<ul style="list-style-type: none"> <li>Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)</li> </ul> <b>&gt;&gt;If Fan or Bearing is abnormal, replace it.</b>



Check Point 2 : Check ambient temp. around motor
<ul style="list-style-type: none"> <li>Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)</li> </ul> <b>&gt;&gt;Upon the temperature coming down, restart operation.</b>




Check Point 3 : Check Indoor unit fan motor
<ul style="list-style-type: none"> <li>Check Indoor unit fan motor. (PARTS INFORMATION 4)</li> </ul> <b>&gt;&gt;If Indoor unit fan motor is abnormal, replace Indoor unit fan motor.</b>



Check Point 4 : Replace Controller PCB
<b>► If Check Point 1- 3 do not improve the symptom, replace Controller PCB.</b>

<b>Troubleshooting 13</b> <b><u>INDOOR UNIT Error Method:</u></b> <b>Drain Pump Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 3 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 53]</b>
<b><u>Detective Actuators:</u></b> Indoor Unit Controller PCB Circuit Float Switch	<b><u>Detective details:</u></b> When Float switch is ON for more than 3 minutes.
<b><u>Forecast of Cause</u></b> : 1. Float switch failure 2. Shorted connector/wire 3. Controller PCB failure 4. Drain pump failure 5. Hose clogging	

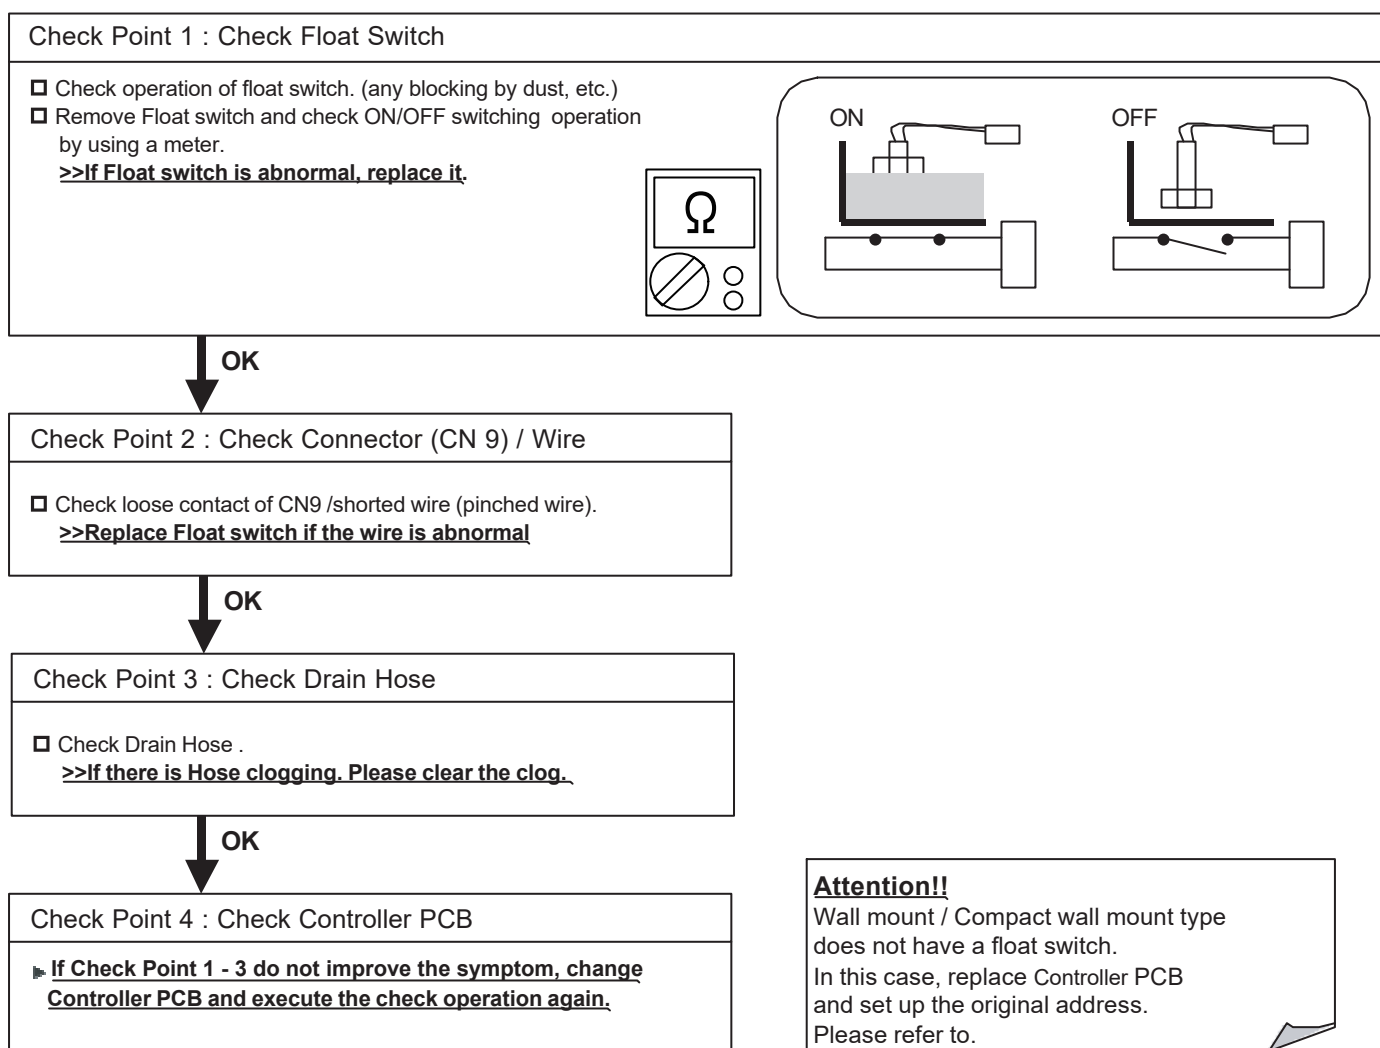




<b>Troubleshooting 14</b> <b>INDOOR UNIT Error Method:</b> <b>Damper(OPEN/CLOSE) Detection</b> <b>Limit Switch Error</b>	<b>Indicate or Display:</b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 7 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 57]</b>
---	--

<b>Detective Actuators:</b> Indoor unit Controller PCB Circuit Limit switch Damper	<b>Detective details:</b> When limit switch were not able to detect the close though the damper close. (Upper air flow) When limit switch were not able to detect the open though the damper open. (Upper & Lower air flow)
---	---


<b>Forecast of Cause :</b> 1. Limit switch failure      2. Shorted connector/ wire      3. Damper faulure 4. Controller PCB failure
---

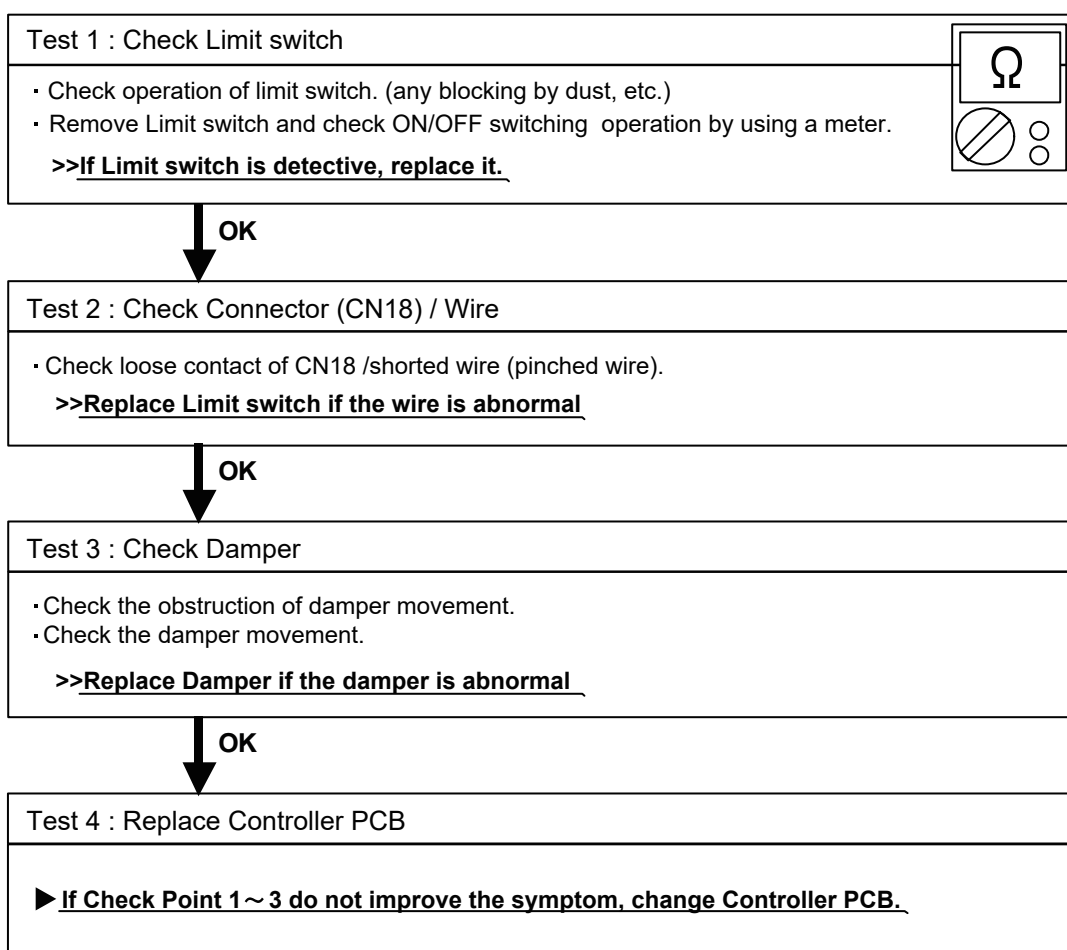

<b>Troubleshooting 15</b> <b><u>INDOOR UNIT Error Method:</u></b> <b>Damper(OPEN/CLOSE) Simultaneous Detection Limit Switch Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 7 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 57]</b>
---	---

<b><u>Detective Actuators:</u></b> Indoor unit Controller PCB Circuit Limit switch	<b><u>Detective details:</u></b> When the limit switch detects open and close at the simultaneous.
--	---

<b><u>Forecast of Cause :</u></b> 1. Limit switch failure      2. Shorted connector/ wire      3. Controller PCB failure
---
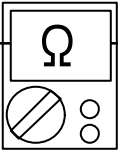
<b>Test 1 : Check Limit switch</b> <ul style="list-style-type: none"> <li>• Check operation of limit switch. (any blocking by dust, etc.)</li> <li>• Remove Limit switch and check ON/OFF switching operation by using a meter.</li> </ul> <b>&gt;&gt;<u>If Limit switch is detective, replace it.</u></b>	
---	---



<b>Test 2 : Check Connector (CN18) / Wire</b> <ul style="list-style-type: none"> <li>• Check loose contact of CN18 / shorted wire (pinched wire).</li> </ul> <b>&gt;&gt;<u>Replace Limit switch if the wire is abnormal</u></b>
--




<b>Test 3 : Replace Controller PCB</b> <b>► <u>If Check Point 1 &amp; 2 do not improve the symptom, change Controller PCB.</u></b>
---

<b>Trouble shooting 16</b> <b>OUTDOOR UNIT Error Method:</b> <b>Outdoor Unit Model Information Error</b>	<b><u>Indicate or Display:</u></b> <b>Outdoor Unit : LED 1 : 17 time Flash or 21 time Flash</b> <b>Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 2 time Flash</b> <b>Economy lamp: Continuous flash.</b> <b>ERROR CODE : [E : 62]</b>
--	---

<b><u>Detective Actuators:</u></b> Outdoor unit Main PCB	<b><u>Detective details:</u></b> When power is on and there is some below case. ① When model information of EEPROM is incorrect. ② When the access to EEPROM failed.
---	---

<b><u>Forecast of Cause:</u></b> 1. External cause    2. Defective connection of electric components    3. Main PCB failure
--

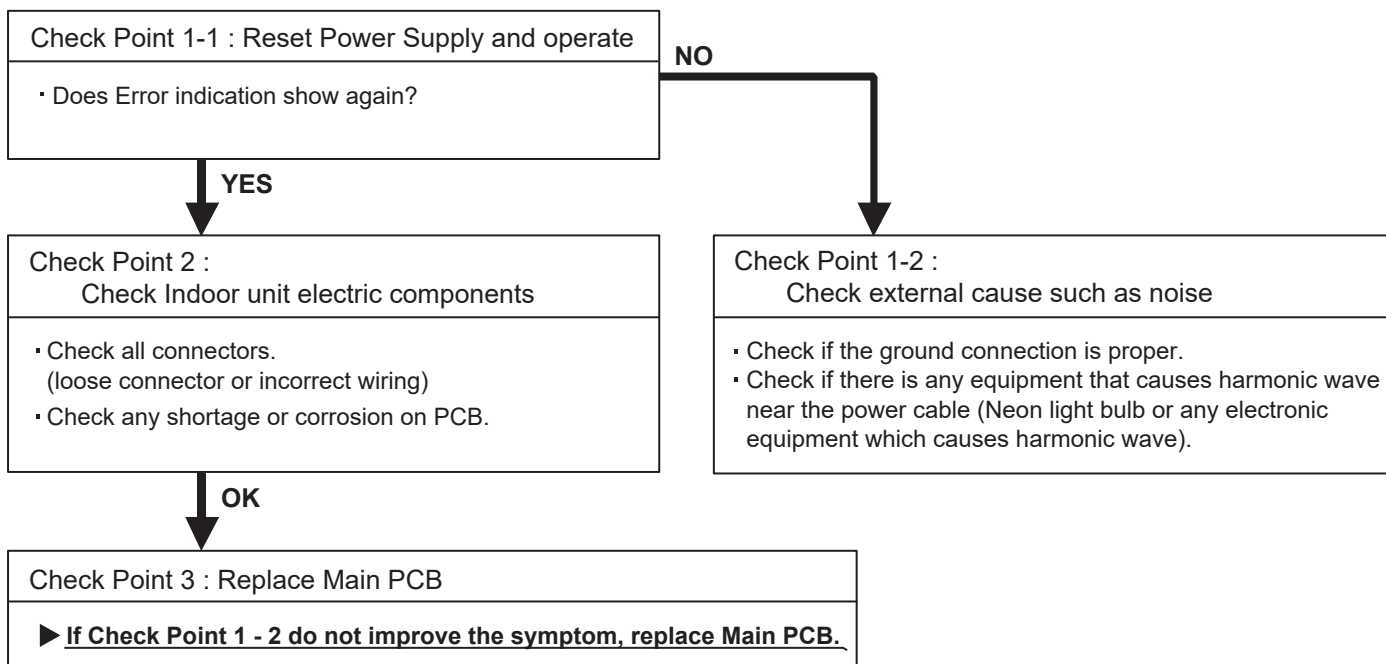

#### **Note : EEPROM**

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

<b>Trouble shooting 17</b> <b><u>OUTDOOR UNIT Error Method:</u></b> <b>Active Filter Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : LED 1 : 22 time Flash Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 64]</b>
--	---

<b><u>Detective Actuators:</u></b> Outdoor unit Main PCB Active filter module	<b><u>Detective details:</u></b> ① When inverter input DC voltage is higher than 425V or lower than 80V. ② When a momentary power cut off occurred on low voltage
---	---

<b><u>Forecast of Cause :</u></b> 1. External cause    2. Connector connection failure    3. Main PCB failure    4. Active filter module failure
---

<b>Check Point 1 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)</b>
<ul style="list-style-type: none"> <li>Instant drop : Check if there is a large load electric apparatus in the same circuit.</li> <li>Momentary power failure : Check if there is a defective contact or leak current in the power supply circuit.</li> <li>Noise : Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.</li> </ul>



<b>Check Point 2 : Check connection of Connector</b>
<ul style="list-style-type: none"> <li>Check if connector is removed.</li> <li>Check erroneous connection.</li> <li>Check if cable is open.</li> </ul> <b>&gt;&gt;Upon correcting the removed connector or miss-swiring, reset the power.</b>



<b>Check Point 3 : Check Active filter module</b>
<ul style="list-style-type: none"> <li>Check Active filter module. (PARTS INFORMATION 6)</li> </ul> <b>&gt;&gt;If Active filter module is abnormal, replace it.</b>



<b>Check Point 4 : Replace Main PCB</b>
<b>► If Check Point 1 - 3 do not improve the symptom, change Main PCB.</b>

<b>Troubleshooting 18</b> <b><u>OUTDOOR UNIT Error Method:</u></b> <b>IPM Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : LED 1 : 14 time Flash Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 5 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 65]</b>
---	---

<b><u>Detective Actuators:</u></b> Outdoor unit Main PCB Compressor	<b><u>Detective details:</u></b> ① When more than normal operating current to IPM in Main PCB flows, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
---	--

<b><u>Forecast of Cause :</u></b> 1. Defective connection of electric components 3. Outdoor Heat Exchanger clogged	2. Outdoor Fan Operation failure 4. Compressor failure	5. Main PCB failure
--	---	---------------------

<b>Check Point 1 : Check connections of Outdoor Unit Electrical Components</b>
<ul style="list-style-type: none"> <li>• Check if the terminal connection is loose.</li> <li>• Check if connector is removed.</li> <li>• Check erroneous connection.</li> <li>• Check if cable is open.</li> </ul> <b>&gt;&gt; <u>Upon correcting the removed connector or miss-wiring, reset the power.</u></b>



<b>Check Point 2 : Check Outdoor Fan, Heat Exchanger</b>
<ul style="list-style-type: none"> <li>• Is there anything obstructing the air distribution circuit?</li> <li>• Is there any clogging of Outdoor Heat Exchanger?</li> <li>• Is the Fan rotating by hand when operation is off ?</li> </ul> <b>&gt;&gt; <u>If the Fan Motor is locked, replace it.</u></b>



<b>Check Point 3 : Check Outdoor Fan</b>
<ul style="list-style-type: none"> <li>• Check Outdoor Fan Motor. (Refer to Trouble shooting 31)</li> </ul> <b>&gt;&gt; <u>If the Fan Motor is failure, replace it.</u></b>



<b>Check Point 4 : Check Compressor</b>
<ul style="list-style-type: none"> <li>• Check Compressor. (<b>PARTS INFORMATION 2</b>)</li> </ul>



<b>Check Point 5 : Replace Main PCB</b>
<b>► <u>If Check Point 1 - 4 do not improve the symptom, change Main PCB.</u></b>





## Troubleshooting 21

### OUTDOOR UNIT Error Method:

#### Heat Ex. OUT Thermistor Error

### Indicate or Display:

Outdoor Unit : LED 1 : 3 time Flash

Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 3 time Flash  
Economy lamp: Continuous flash.

ERROR CODE : [E : 73]

### Detective Actuators:

Outdoor Unit Main PCB Circuit  
Heat Exchanger Temperature Thermistor

### Detective details:

When Heat Exchanger Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.

### Forecast of Cause :

1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

### Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.


**>>Upon correcting the removed connector or miss-wiring, reset the power.**



### Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature(°F)	14°F	23°F	32°F	41°F	50°F	59°F	68°C	77°F	86°F
Resistance Value (kΩ)	27.81	21.02	16.05	12.38	9.63	7.56	5.98	4.77	3.84

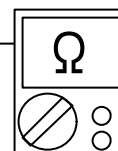


► **If Thermistor is either open or shorted, replace it and reset the power.**



### Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

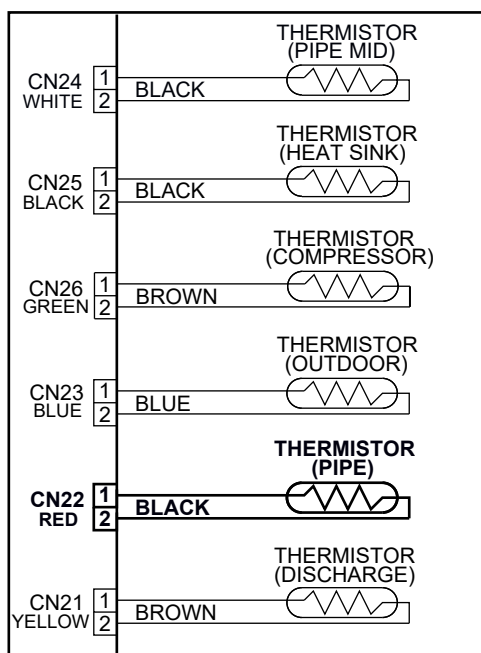

► **If the voltage does not appear, replace Main PCB.**



## Trouble shooting 22

### OUTDOOR UNIT Error Method:

#### Heat Ex. MID Thermistor Error

#### Indicate or Display:

Outdoor Unit : LED 1 : 16 time Flash

Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 3 time Flash  
Economy lamp: Continuous flash.

ERROR CODE : [E : 73]

#### Detective Actuators:

Outdoor Unit Main PCB Circuit  
Heat Exchanger Temperature Thermistor

#### Detective details:

When Heat Exchanger Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.

#### Forecast of Cause :

1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

#### Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.


**>>Upon correcting the removed connector or miss-wiring, reset the power.**

OK

#### Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature(°F)	14°F	23°F	32°F	41°F	50°F	59°F	68°C	77°F	86°F
Resistance Value (kΩ)	27.81	21.02	16.05	12.38	9.63	7.56	5.98	4.77	3.84

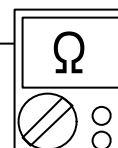


► **If Thermistor is either open or shorted, replace it and reset the power.**

OK

#### Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

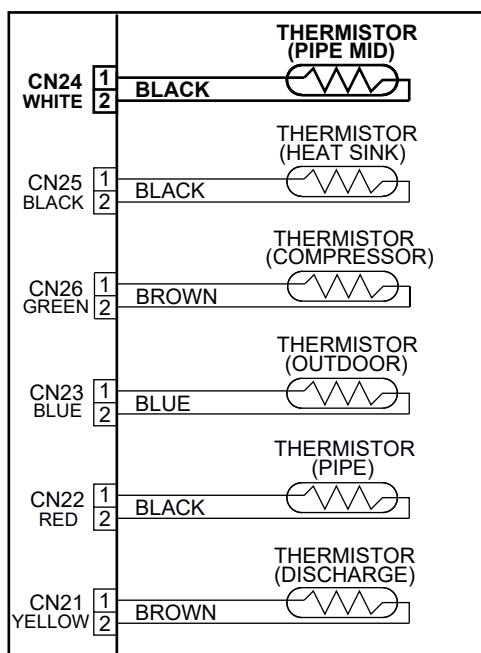

► **If the voltage does not appear, replace Main PCB.**












<b>Troubleshooting 27</b> <b><u>OUTDOOR UNIT Error Method:</u></b> <b>CT Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : LED 1 : 23 time Flash Indoor Unit : Operation lamp: 8 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 84]</b>
--	---

<b><u>Detective Actuators:</u></b> Outdoor unit main PCB	<b><u>Detective details:</u></b> When Input Current Sensor has detected 0A, while Inverter Compressor is operating at higher than 60 rps, after 1 minutes upon starting the Compressor. (Except during the defrost operation)
---	--

<b><u>Forecast of Cause:</u></b> 1. Defective connection of electric components    2. External cause    3. Main PCB failure
--


1. External cause

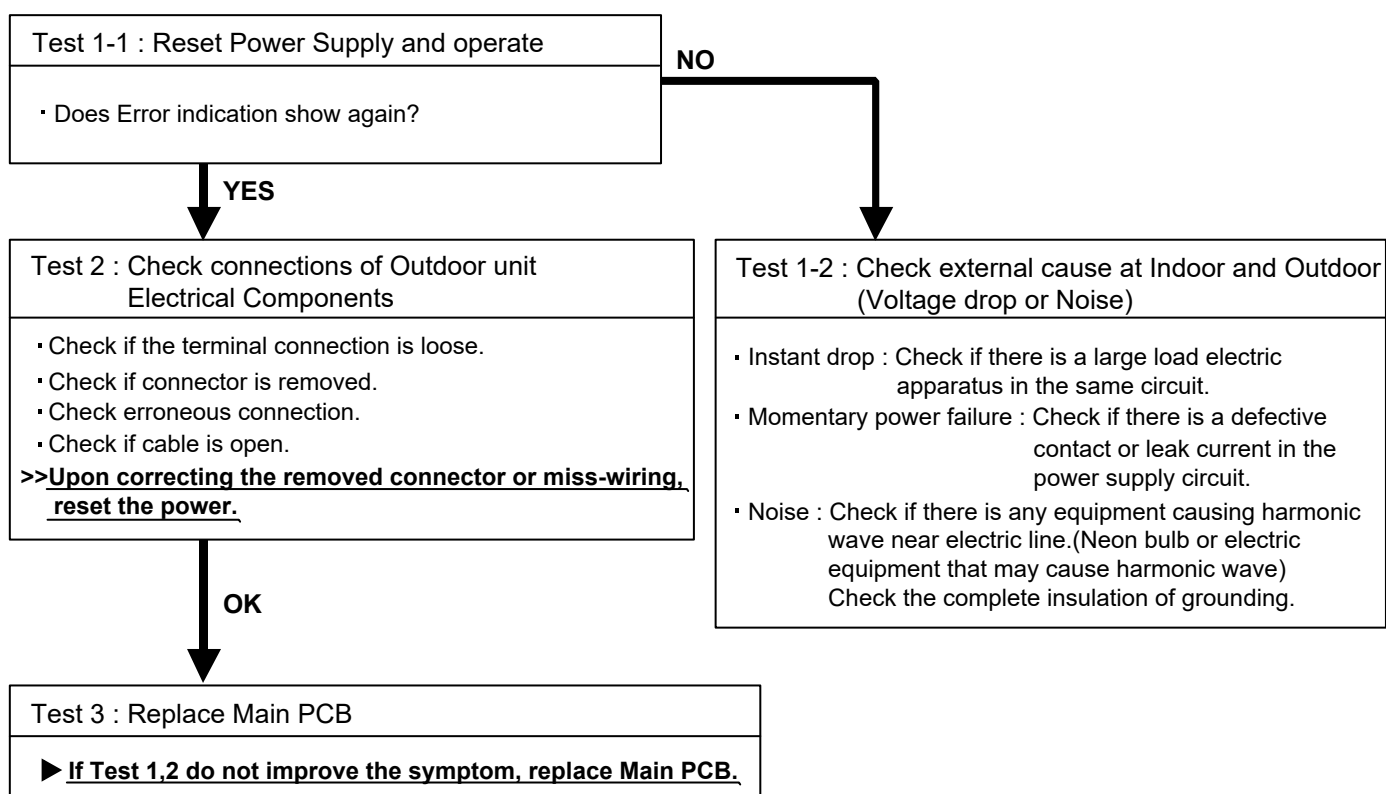

<b>Troubleshooting 28</b> <b><u>OUTDOOR UNIT Error Method:</u></b> <b>High Pressure Switch Error</b>	<b><u>Indicate or Display:</u></b> Outdoor Unit : LED 1 : 9 time Flash Indoor Unit : Operation lamp: 8 time Flash, Timer lamp: 6 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 86]</b>
--	--

<b><u>Detective Actuators:</u></b> Outdoor Unit Main PCB Circuit Pressure Switch	<b><u>Detective details:</u></b> When pressure switch open is detected in 10 seconds after the power is turned on.
--	---

<b><u>Forecast of Cause :</u></b> 1. Connector connection failure   2. Pressure Switch failure   3. Main PCB failure
---

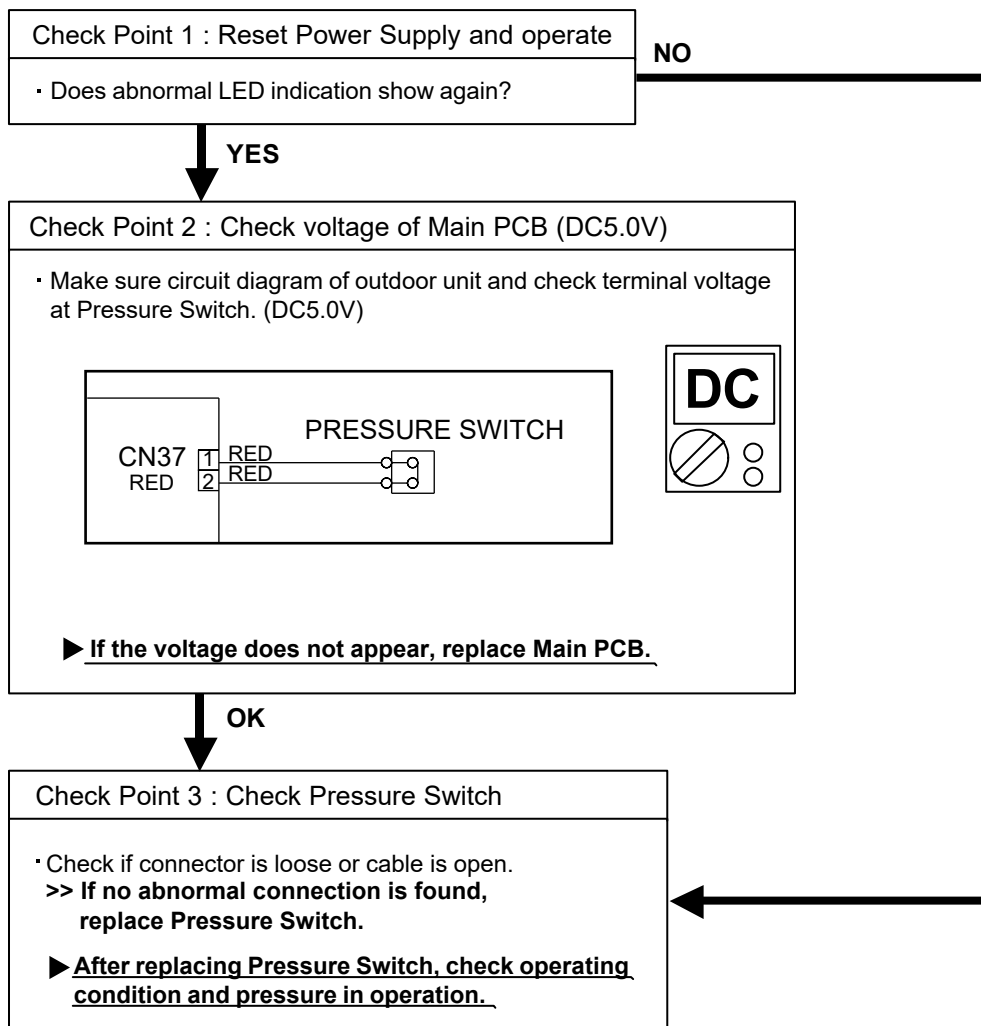

· Characteristics of pressure switch

PRESSURE SWITCH (CN37)	
	Pressure switch
Contact : Short ⇒ Open	608.7 ± 14.5 PSI (4.2 ± 0.10 MPa)
Contact : Open ⇒ Short	463.8 ± 21.7 PSI (3.2 ± 0.15 MPa)

<b>Troubleshooting 29</b> <b>OUTDOOR UNIT Error Method:</b> <b>Over Current Error</b>	<b>Indicate or Display:</b> Outdoor Unit : LED 1 : 12 time Flash Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 94]</b>
---	--

<b>Detective Actuators:</b>  Outdoor unit Main PCB Compressor	<b>Detective details:</b>  <b>"Protection stop</b> by overcurrent generation after inverter compressor start processing completed" generated consecutively 10 times. * The number of generations is reset if the start-up of the compressor succeeds.
--	--

<b>Forecast of Cause :</b> <ol style="list-style-type: none"> <li>1. Outdoor Heat Exchanger clogged</li> <li>2. Outdoor Fan Operation failure</li> <li>3. Main PCB</li> <li>4. Inverter compressor failure (lock, winding short)</li> </ol>
---

<b>Check Point 1 : Check ambient temp. around motor,Heat Exchanger</b>
<ul style="list-style-type: none"> <li>• Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)</li> <li>• Is there anything obstructing the air distribution circuit?</li> <li>• Is there any clogging of Outdoor Heat Exchanger?</li> </ul> <b>&gt;&gt;Upon the temperature coming down, restart operation.</b>



<b>Check Point 2 : Check Outdoor Fan</b>
<ul style="list-style-type: none"> <li>• Is the Fan rotating by hand when operation is off ?</li> </ul> <b>&gt;&gt; If the Fan Motor is locked, replace it.</b>



<b>Check Point 3 : Replace Main PCB</b>
<b>► If Check Point 1 - 2 do not improve the symptom, change Main PCB.</b>



<b>Check Point 4 : Replace Compressor</b>
<b>► If Check Point 3 do not improve the symptom, change Compressor.</b>



<b>Troubleshooting 30</b> <b><u>OUTDOOR UNIT Error Method:</u></b> <b>Compressor Control Error</b>	<b><u>Indicate or Display:</u></b> <b>Outdoor Unit : LED 1 : 13 time Flash</b> <b>Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 5 time Flash</b> <b>Economy lamp: Continuous flash.</b> <b>ERROR CODE : [E : 95]</b>
--	--

<b><u>Detective Actuators:</u></b>  Outdoor unit Main PCB Compressor	<b><u>Detective details:</u></b>  ① While running the compressor, if the detected rotor location is out of phase with actual rotor location more than 105°, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
---	--

<b><u>Forecast of Cause :</u></b>  1. Defective connection of electric components    2. Main PCB failure    3. Compressor failure
---

Check Point 1 : Check connection of around the Compressor components
For Compressor Terminal, Main PCB • Check if connector is removed. • Check erroneous connection. • Check if cable is open. (Refer to PARTS INFORMATION 2) <b>&gt;&gt;<u>Upon correcting the removed connector or miss-wiring, reset the power.</u></b>



Check Point 2 : Replace Main PCB
<b>▶ <u>If Check Point 1 do not improve the symptom, change Main PCB.</u></b>



Check Point 3 : Replace Compressor
<b>▶ <u>If Check Point 2 do not improve the symptom, change Compressor.</u></b>

<b>Troubleshooting 31</b> <b>OUTDOOR UNIT Error Method:</b> <b>Outdoor Unit Fan Motor Error</b>	<b>Indicate or Display:</b> Outdoor Unit : LED 1 : 15 time Flash Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 7 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 97]</b>
---	--

<b>Detective Actuators:</b> Outdoor unit Main PCB Outdoor unit fan motor	<b>Detective details:</b> ① When outdoor fan rotation speed is less than 100rpm in 20 seconds after fan motor starts, fan motor stops. ② After fan motor restarts, if the same operation within 60sec is repeated 3 times in a row, compressor and fan motor stops. ③ If ① and ② repeats 5 times in a row, compressor and fan motor stops permanently.
--	---

<b>Forecast of Cause:</b> 1. Fan rotation failure    2. Motor protection by surrounding temperature rise    3. Main PCB failure 4. Outdoor unit fan motor failure
---

<b>Check Point 1 : Check rotation of Fan</b>
• Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) <b>&gt;&gt;If Fan or Bearing is abnormal, replace it.</b>



<b>Check Point 2 : Check ambient temp. around motor</b>
• Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) <b>&gt;&gt;Upon the temperature coming down, restart operation.</b>



<b>Check Point 3 : Check Outdoor unit fan motor</b>
• Check Outdoor unit fan motor. <b>(PARTS INFORMATION 5)</b> <b>&gt;&gt;If Outdoor Fan Motor is abnormal, replace Outdoor fan motor and Main PCB.</b>



<b>Check Point 4 : Check Output Voltage of Main PCB</b>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <b>DC</b>  </div>						
• Check outdoor unit circuit diagram and the voltage. (Measure at Main PCB side connector)							
	<table border="1"> <thead> <tr> <th>Read wire</th><th>DC voltage</th></tr> </thead> <tbody> <tr> <td>Red - Black</td><td>260 - 400V</td></tr> <tr> <td>White - Black</td><td>15 ± 1.5V</td></tr> </tbody> </table>	Read wire	DC voltage	Red - Black	260 - 400V	White - Black	15 ± 1.5V
Read wire	DC voltage						
Red - Black	260 - 400V						
White - Black	15 ± 1.5V						
<b>► If the voltage is not correct, replace Main PCB.</b>							

<b>Troubleshooting 32</b> <b>OUTDOOR UNIT Error Method:</b> <b>4-Way Valve Error</b>	<b>Indicate or Display:</b> Outdoor Unit : LED 1 : 20 time Flash Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 9 time Flash Economy lamp: Continuous flash. <b>ERROR CODE : [E : 99]</b>
--	--

<b>Detective Actuators:</b> Indoor unit Controller PCB Heat exchanger temperature thermistor Room temperature thermistor 4-way valve	<b>Detective details:</b> When the indoor heat exchanger temperature is compared with the room temperature, and either following condition is detected continuously two times, the compressor stops. <ul style="list-style-type: none"> <li>▪ Cooling or Dry operation [Indoor heat exchanger temp.] - [Room temp.] &gt; 20°F(10°C)</li> <li>▪ Heating operation [indoor heat exchanger temp.] - [Room temp.] &lt; -20°F(-10°C)</li> </ul> If the same operation is repeated 5 times, the compressor stops permanently.
--	--

<b>Forecast of Cause :</b> 1. Connector connection failure   2. Thermistor failure   3. Coil failure   4. 4-way valve failure 5. Main PCB failure   6. Controller PCB failure
---

<b>Check Point 1 : Check connection of Connector</b>
<ul style="list-style-type: none"> <li>▪ Check if connector is removed.</li> <li>▪ Check erroneous connection.</li> <li>▪ Check if thermistor cable is open.</li> </ul> <b>&gt;&gt; <u>Upon correcting the removed connector or miss-wiring, reset the power.</u></b>



<b>Check Point 2 : Check thermistor of Indoor unit</b>
<ul style="list-style-type: none"> <li>▪ Isn't it fallen off the holder?</li> <li>▪ Is there a cable pinched?</li> </ul> <b>&gt; <u>Check characteristics of thermistor, (Refer to Trouble shooting 10,11)</u></b> <b>&gt; <u>If defective, replace the thermistor.</u></b>



<b>Check Point 3 : Check the solenoid coil and 4-way valve</b>
[ Solenoid coil ] <ul style="list-style-type: none"> <li>▪ Remove CN30 from PCB and check the resistance value of coil. Resistance value is about 1.4kΩ</li> </ul> <b>&gt;&gt; <u>If it is Open or abnormal resistance value, replace Solenoid Coil.</u></b>
[ 4-way valve ] <ul style="list-style-type: none"> <li>▪ Check each piping temperature, and the location of the valve by the temperature difference.</li> </ul> <b>&gt;&gt; <u>If the value location is not proper, replace 4-way valve.</u></b>



<b>Check Point 4 : Check the voltage of 4-way valve</b>
<ul style="list-style-type: none"> <li>▪ Check the CN 30 voltage of Main PCB <b>Check if AC187V(AC208V-10%) - 253V(AC230V+10%) appears at CN 30 of Main PCB.</b></li> </ul> [ Heating operation ] <b>&gt;&gt; <u>If it is not voltage, Replace Main PCB.</u></b> [ Cooling operation ] <b>&gt;&gt; <u>If it is voltage, Replace Main PCB.</u></b>



<b>Check Point 5 : Replace Controller PCB</b>
<b>► <u>If Check Point 1- 4 do not improve the symptom, replace Controller PCB of Indoor unit .</u></b>



<b>Trouble shooting 34</b> <b><u>OUTDOOR UNIT Error Method:</u></b> <b>Compressor Temp. Error</b>	<b><u>Indicate or Display:</u></b> <b>Outdoor Unit : LED 1 : 19 time Flash</b> <b>Indoor Unit : Operation lamp: 10 time Flash, Timer lamp: 3 time Flash</b> <b>Economy lamp: Continuous flash.</b> <b>ERROR CODE : [E : A3]</b>
---	---

<b><u>Detective Actuators:</u></b>  Compressor temperature thermistor	<b><u>Detective details:</u></b>  "Protection stop by "compressor temperature $\geq 226.4^{\circ}\text{F}(108^{\circ}\text{C})$ during compressor operation" generated 2 times within 24 hours.
---	---

<b><u>Forecast of Cause :</u></b>	1. 3-way valve not opened 2. EEV defective, strainer clogged 3. Outdoor unit operation failure, foreign matter on heat exchanger 4. Compressor temperature thermistor failure 5. Insufficient refrigerant 6. Main PCB failure
-----------------------------------	--

#### <Cooling operation>

Check Point 1 : Check if 3-way valve(gas side) is open.
<ul style="list-style-type: none"> <li>If the 3-way valve(gas side) was closed, open the 3-way valve(gas side) and check operation.</li> </ul>



Check Point 2 : Check the EEV, strainer
<ul style="list-style-type: none"> <li>EEV open?</li> <li>Strainer clogging check (Refer to PARTS INFORMATION 3)</li> </ul>



Check Point 3 : Check the outdoor unit fan,heat exchanger
<ul style="list-style-type: none"> <li>Check for foreign object at heat exchanger</li> <li>Check if fan can be rotated by hand.</li> <li>Motor check (PARTS INFORMATION 5)</li> </ul>



Check Point 4 : Check the compressor thermistor
<ul style="list-style-type: none"> <li>Discharger thermistor characteristics check (Check by disconnecting thermistor from PCB.)</li> <li>* For the characteristics of the thermistor, refer to the "Trouble shooting 20".</li> </ul>




Check Point 5 : Check the refrigerant amount
<ul style="list-style-type: none"> <li>Leak check</li> </ul>

#### <Heating operation>

Check Point 1 : Check if 3-way valve(liquid side) is open.
<ul style="list-style-type: none"> <li>If the 3-way valve(liquid side) was closed, open the 3-way valve(liquid side) and check operation.</li> </ul>



Check Point 2 : Check the EEV, strainer
<ul style="list-style-type: none"> <li>EEV open?</li> <li>Strainer clogging check (Refer to PARTS INFORMATION 3)</li> </ul>

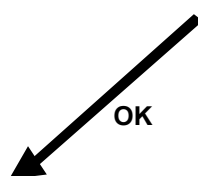

<b>Troubleshooting 35</b> <b><u>INDOOR UNIT Error Method:</u></b> <b>Poor refrigerant circulation</b>	<b><u>Indicate or Display:</u></b> <b>Outdoor Unit : No indication</b> <b>Indoor Unit : Operation lamp: 10 time Flash, Timer lamp: 8 time Flash</b> <b>Economy lamp: Continuous flash.</b> <b>ERROR CODE : [E : A8]</b>
---	---

<b><u>Detective Actuators:</u></b> Refrigerant leak detection device	<b><u>Detective details:</u></b> Refrigerant leak detector (optional or locally purchased) operates to notify the refrigerant leak.
---	--

<b><u>Forecast of Cause:</u></b> 1. Refrigerant leak    2. Connection failure    3. Refrigerant leak detector failure 4. Controller PCB failure
---

<b>Test 1 : Check for refrigerant leaks</b>
Check if there is no refrigerant leak from the heat exchanger and the surrounding pipe connection.



<b>Test 2 : Check refrigerant leak detector</b>
Check the connection wiring (omission or disconnection) of the refrigerant leak detector. Check the power of the refrigerant leak detector. Check if the refrigerant leak detector is faulty.



**Replace controller PCB**

## 2-3 TROUBLE SHOOTING WITH NO ERROR CODE

### Troubleshooting 36

Indoor Unit - No Power

#### Forecast of Cause:

1. Power Supply failure
2. External cause
3. Electrical Components defective

#### Check Point 1 : Check Installation Condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >> **If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical Manual.**

↓  
OK

#### Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.  
(Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.

↓  
OK

#### Check Point 3 : Check Electrical Components



- Check the voltage of power supply.
- >> **Check if AC187 - 253V appears at Outdoor Unit Terminal L1 - L2.**

↓  
YES

- Check Fuse of between of Terminal and Filter PCB.
- >> **If Fuse is open, check if the wiring between Terminal and Filter PCB is loose, and replace Fuse.**
- Check Varistor in Filter PCB.
- >> **If Varistor is defective, there is a possibility of an abnormal power supply. Check the correct power supply and replace Varistor. Upon checking the normal power supply, replace Varistor.**

↓  
OK

#### Check Point 4 : Replace Filter PCB

- ▶ **If Check Point 1- 3 do not improve the symptom, replace Filter PCB.**

## Troubleshooting 37

### Outdoor Unit - No Power

#### Forecast of Cause:

1. Power Supply failure
2. External cause
3. Electrical Components defective

#### Check Point 1 : Check Installation Condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >> **If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical Manual.**

↓ OK

#### Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.  
(Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.

↓ OK

#### Check Point 3 : Check Electrical Components



- Check the voltage of power supply.
- >> **Check if AC187 - 253V appears at Outdoor Unit Terminal L1 - L2.**

↓ YES

- Check Fuse in Main PCB.
- >> **If Fuse is open, check if the wiring between Terminal and Main PCB is loose, and replace Fuse.**

↓ YES

- Check Active Filter Module. (PARTS INFORMATION 6)
- >> **If Active Filter Module is abnormal, replace it.**

↓ OK

#### Check Point 4 : Replace Main PCB

- ▶ **If Check Point 1- 3 do not improve the symptom, replace Main PCB.**



## Troubleshooting 38

No Operation (Power is ON)

### Forecast of Cause:

1. Setting/ Connection failure
2. External cause
3. Electrical Component defective

#### Check Point 1 : Check indoor and outdoor installation condition

- Indoor Unit - Check incorrect wiring between Indoor Unit - Remote Controller.  
Or, check if there is an open cable connection.
- Are these Indoor unit, Outdoor unit, and Remote controller suitable model numbers to connect?  
**>> If there is some abnormal condition, correct it by referring to Installation manual and Data & Technical Manual.**

OK

Turn off Power and check/ correct followings.

- Is there loose or removed communication line of Indoor unit and Outdoor unit?

OK

#### Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.  
(Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.

OK

#### Check Point 3 : Check Wired Remote Controller and Controller PCB



- Check Voltage at terminal 1-3 of Controller PCB or Communication PCB.  
(Power supply to Remote Controller)  
Wall Mount Type : CN300 (UTY-TWRXZ2)  
Cassette Type, Duct Type : CN300  
Floor Type : CN6  
**>> If it is DC12V, Remote Controller is failure. (Controller PCB is normal) >> Replace Remote Controller**  
**>> If it is DC 0V, Controller PCB is failure. (Check Remote Controller once again)**  
**>> Check Indoor unit fan motor. (PARTS INFORMATION 4)**  
**If it is normal, replace Controller PCB.**  
**If it is abnormal, replace Indoor unit fan motor and Controller PCB.**  
**>> If the symptom does not change by above Check 1, 2, 3, replace Main PCB of Outdoor unit.**

## Troubleshooting 39

### No Cooling / No Heating

#### Forecast of Cause:

1. Indoor Unit error
2. Outdoor Unit error
3. Effect by Surrounding environment
4. Connection Pipe / Connection Wire failure
5. Refrigeration cycle failure

#### Check Point 1 : Check Indoor Unit

- Does Indoor unit FAN run on HIGH FAN?
- Is Air filter dirty?
- Is Heat exchanger clogged?
- Check if Energy save function is operated.



#### Check Point 2 : Check Outdoor Unit Operation

- Check if Outdoor unit is operating
- Check any objects that obstruct the air flow route.
- Check clogged Heat exchanger.
- Is the Valve open?



#### Check Point 3 : Check Site Condition

- Is capacity of Indoor unit fitted to Room size?
- Any windows open? Or direct sunlight ?




#### Check Point 4 : Check Indoor/ Outdoor Installation Condition

- Check connection pipe (specified pipe length & Pipe diameter?)
- Check any loose or removed communication line.
- >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**





#### Check Point 5 : Check Refrigeration Cycle

- Check if Strainer is clogged (Refer to the figure at right).
- Measure Gas Pressure and if there is a leakage, correct it.
- >> **When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.**
- Check EEV (PARTS INFORMATION 3)
- Check Compressor (PARTS INFORMATION 1,2)

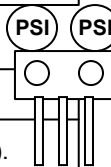

#### Attention

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference like shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

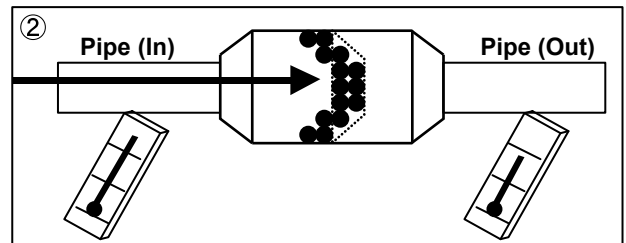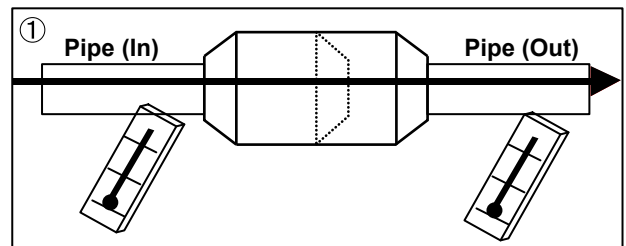

## Troubleshooting 40

### Abnormal Noise

#### Forecast of Cause :

1. Abnormal installation (Indoor/ Outdoor)
2. Fan failure (Indoor/ Outdoor)
3. Compressor failure (Outdoor)

#### Diagnosis method when Abnormal Noise is occurred

- Abnormal noise is coming from Indoor unit.  
(Check and correct followings)

- Is Main Unit installed in stable condition?
- Is the installation of Air suction grille and front panel normal?

OK

- Is Fan broken or deformed?
- Is the screw of Fan loose?
- Is there any object which obstruct the Fan rotation?

- Abnormal noise is coming from Outdoor unit.  
(Check and correct followings)

- Is Main Unit installed in stable condition?
- Is Fan Guard installed normally?

OK

- Is Fan broken or deformed?
- Is the screw of Fan loose?
- Is there any object which obstruct the Fan rotation?

OK

- Check if vibration noise by loose bolt or contact noise of piping is happening.

OK

- Is Compressor locked?  
>> Check Compressor (PARTS INFORMATION 1,2)

## Trouble shooting 35

### Water Leaking

#### Forecast of Cause:

1. Erroneous installation
2. Drain hose failure

#### Diagnosis method when water leak occurs

- Is Main unit installed in stable condition?
- Is Main unit broken or deformed at the time of transportation or maintenance?

OK

- Is Drain hose connection loose?
- Is there a trap in Drain hose?
- Is Drain Hose clogged?

OK


- Is Fan rotating?

#### Diagnosis method when water is spitting out.

- Is the filter clogged?

OK

- Check Gas pressure and correct it if there was a gas leak.

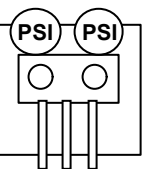

## Troubleshooting 41

### Too Warm

#### Forecast of Cause :

1. House insulation setting has not been changed.
2. Temperature sensing location has not been changed.
3. Installation location of the wired remote.
4. Function settings have not been changed.

Check Point 1 : Check insulation level of structure of house

Is insulation level greater than R-13.

YES

Check Point 1-1 : Check Function Setting

If insulation level is greater than R-13 set function 95 to 01. (Ref.)

Function Number	Setting Value	Setting Description
95	00	Standard insulation
	01	High insulation

OK

Check Point 1-2 : Check effects of Function Setting change

Is the space still too warm in relation to set point.

Too warm

NO

Check Point 2 : Verify room temperature sensing location

Do you want room temperature sensed at the wired remote controller (Wired remote sensor) or by they build in sensor inside the unit (Indoor unit sensor).


"Wired remote sensor"

TO NEXT PAGE

"Indoor unit sensor"

Check Point 3 : Check the remote controller display


Is the "Thermo Sensor Icon" displayed on the screen?

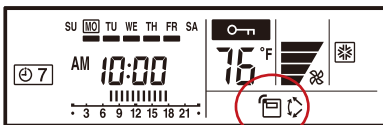

YES

Check Point 3-1 : Check the remote controller

Hold down the THERMO SENSOR button until the thermo sensor icon is turned off.

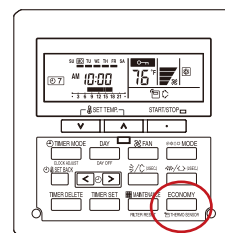

Too warm

NO

Check Point 4 : Check Function Settings


Using the table on the right adjust function 31. (Room Temperature Control for indoor unit sensor)

Ref.)

Function Number	Setting Value	Setting Description
31 (For heating)	00	Standard setting
	01	No correction 0.0°F (0.0°C)
	02	-1°F (-0.5°C)
	03	-2°F (-1.0°C)
	04	-3°F (-1.5°C)
	05	-4°F (-2.0°C)
	06	-5°F (-2.5°C)
	07	-6°F (-3.0°C)
	08	-7°F (-3.5°C)
	09	-8°F (-4.0°C)

Less Heating

“Wired remote sensor”

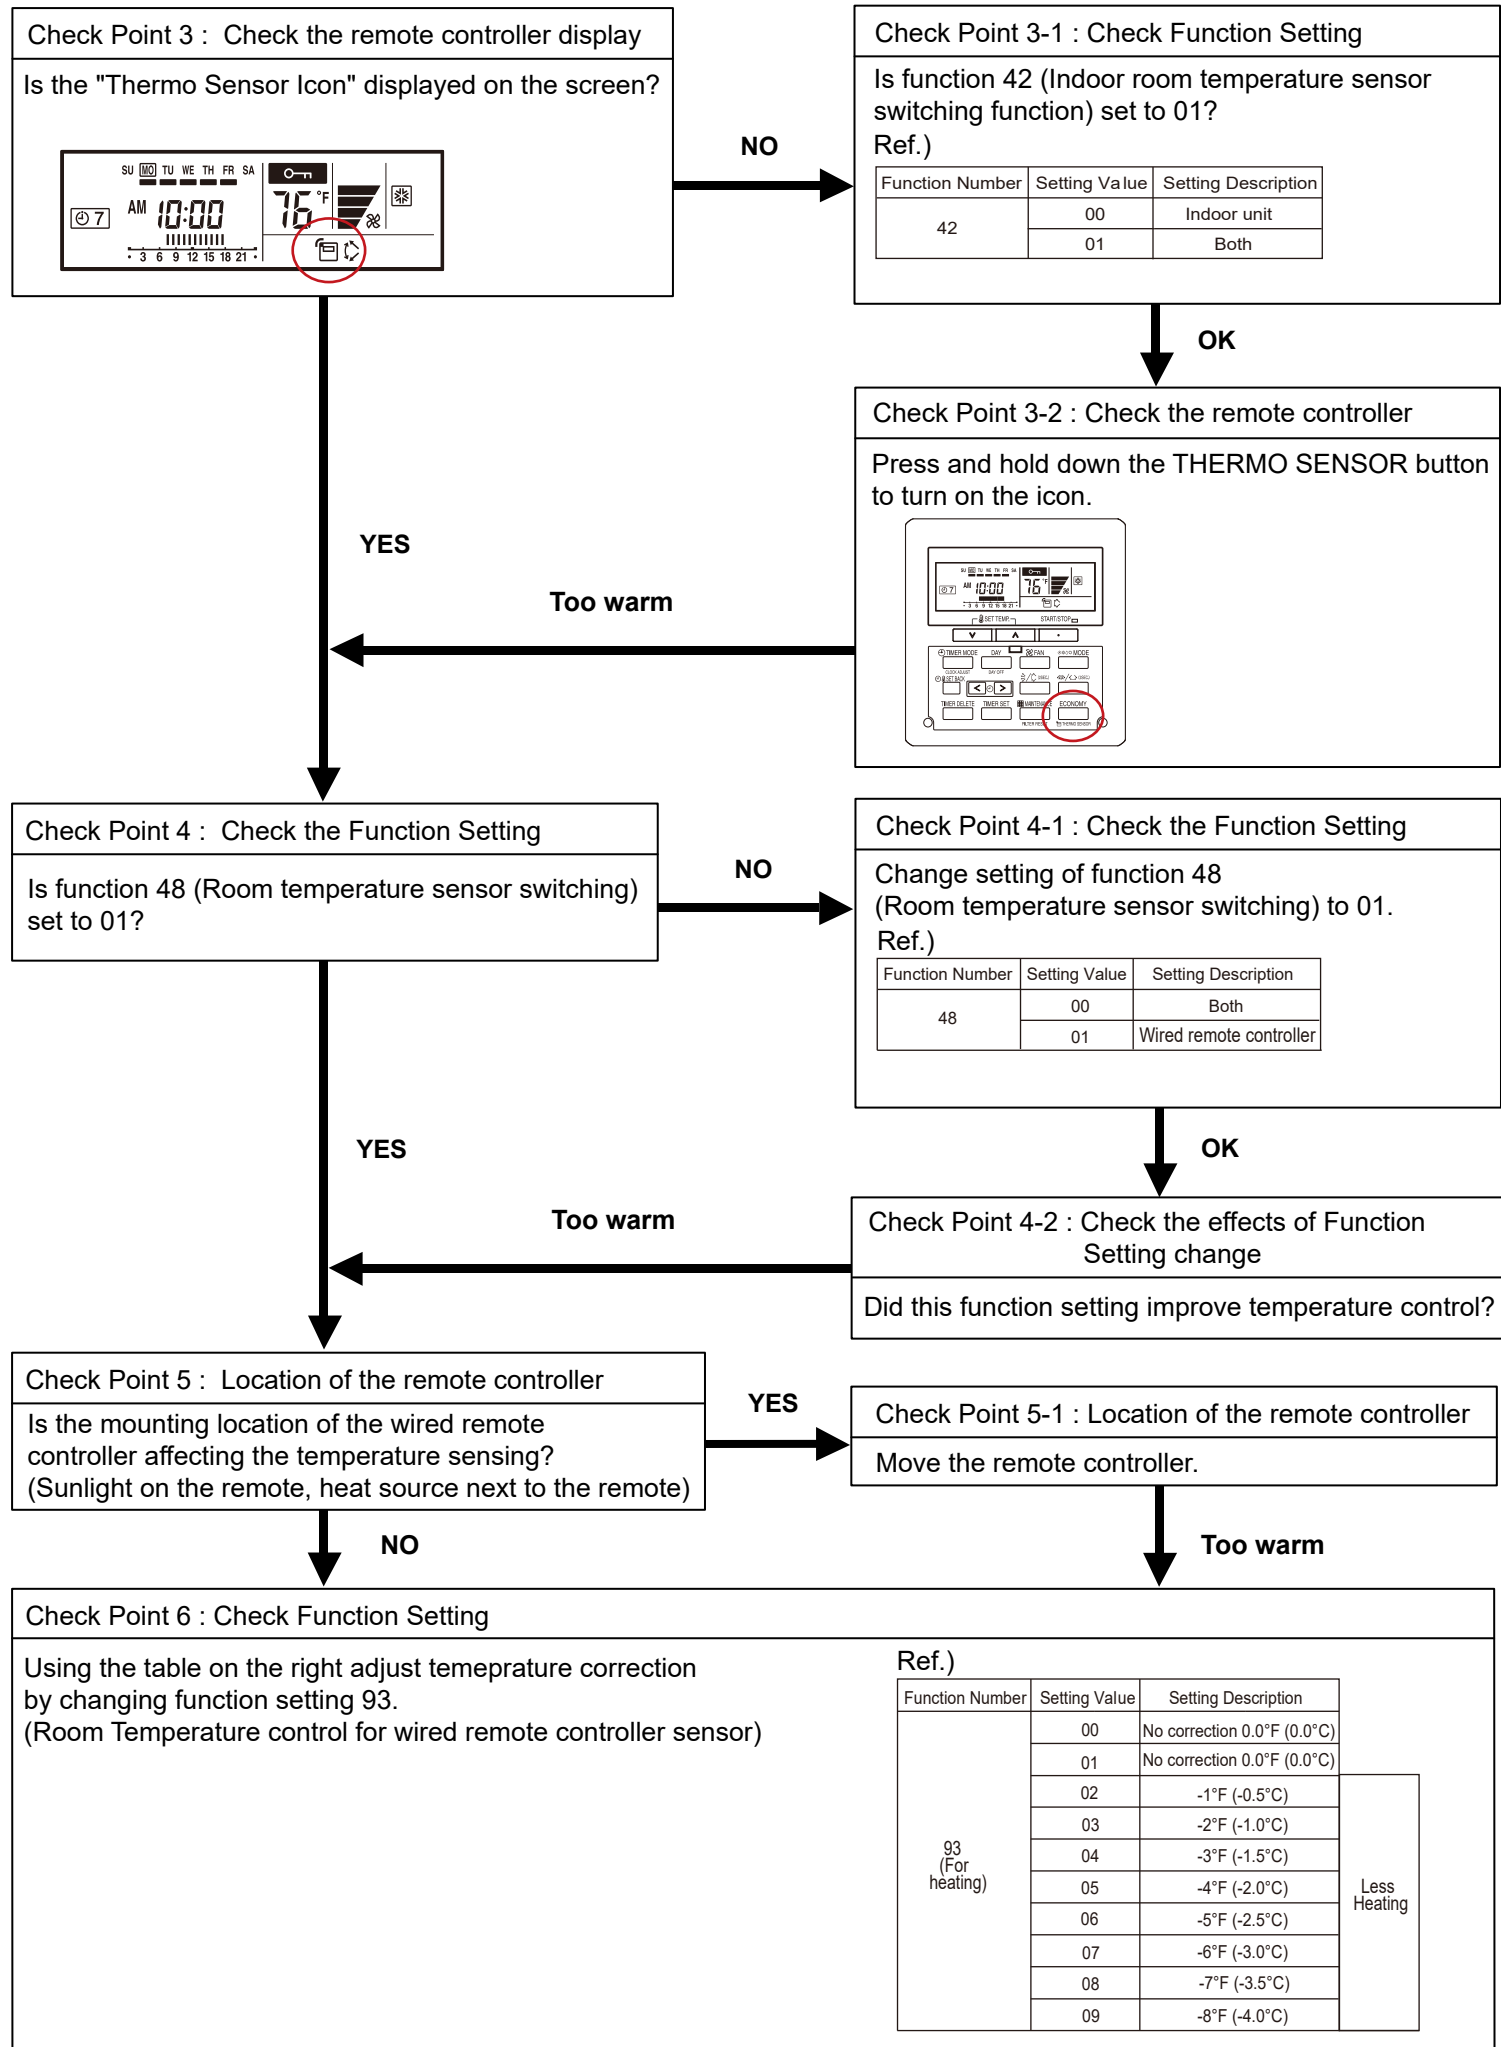

## Troubleshooting 42

Too Cool

### Forecast of Cause :

1. House insulation setting has not been changed.
2. Temperature sensing location has not been changed.
3. Installation location of the wired remote.
4. Function settings have not been changed.

Check Point 1 : Check insulation level of structure of house

Is insulation level greater than R-13.

YES

Check Point 1-1 : Check Function Setting

If insulation level is greater than R-13 set function 95 to 01. Ref.)

Function Number	Setting Value	Setting Description
95	00	Standard insulation
	01	High insulation

OK

Check Point 1-2 : Check effects of Function Setting change

Is the space still too cool in relation to set point.

Too cool

NO

Check Point 2 : Verify room temperature sensing location

Do you want room temperature sensed at the wired remote controller (Wired remote sensor) or by they build in sensor inside the unit (Indoor unit sensor).


"Wired remote sensor"

TO NEXT PAGE

"Indoor unit sensor"

Check Point 3 : Check the remote controller display


Is the "Thermo Sensor Icon" displayed on the screen?

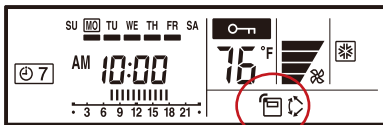

YES

Check Point 3-1 : Check the remote controller

Hold down the THERMO SENSOR button until the thermo sensor icon is turned off.

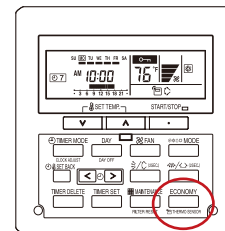

Too cool

NO

Check Point 4 : Check Function Settings


Using the table on the right adjust function 30. (Room Temperature Control for indoor unit sensor)

Ref.)

Function Number	Setting Value	Setting Description
30 (For cooling)	00	Standard setting
	01	No correction 0.0°F (0.0°C)
	10	+1°F (+0.5°C)
	11	+2°F (+1.0°C)
	12	+3°F (+1.5°C)
	13	+4°F (+2.0°C)
	14	+5°F (+2.5°C)
	15	+6°F (+3.0°C)
	16	+7°F (+3.5°C)
	17	+8°F (+4.0°C)

Less Cooling

“Wired remote sensor”

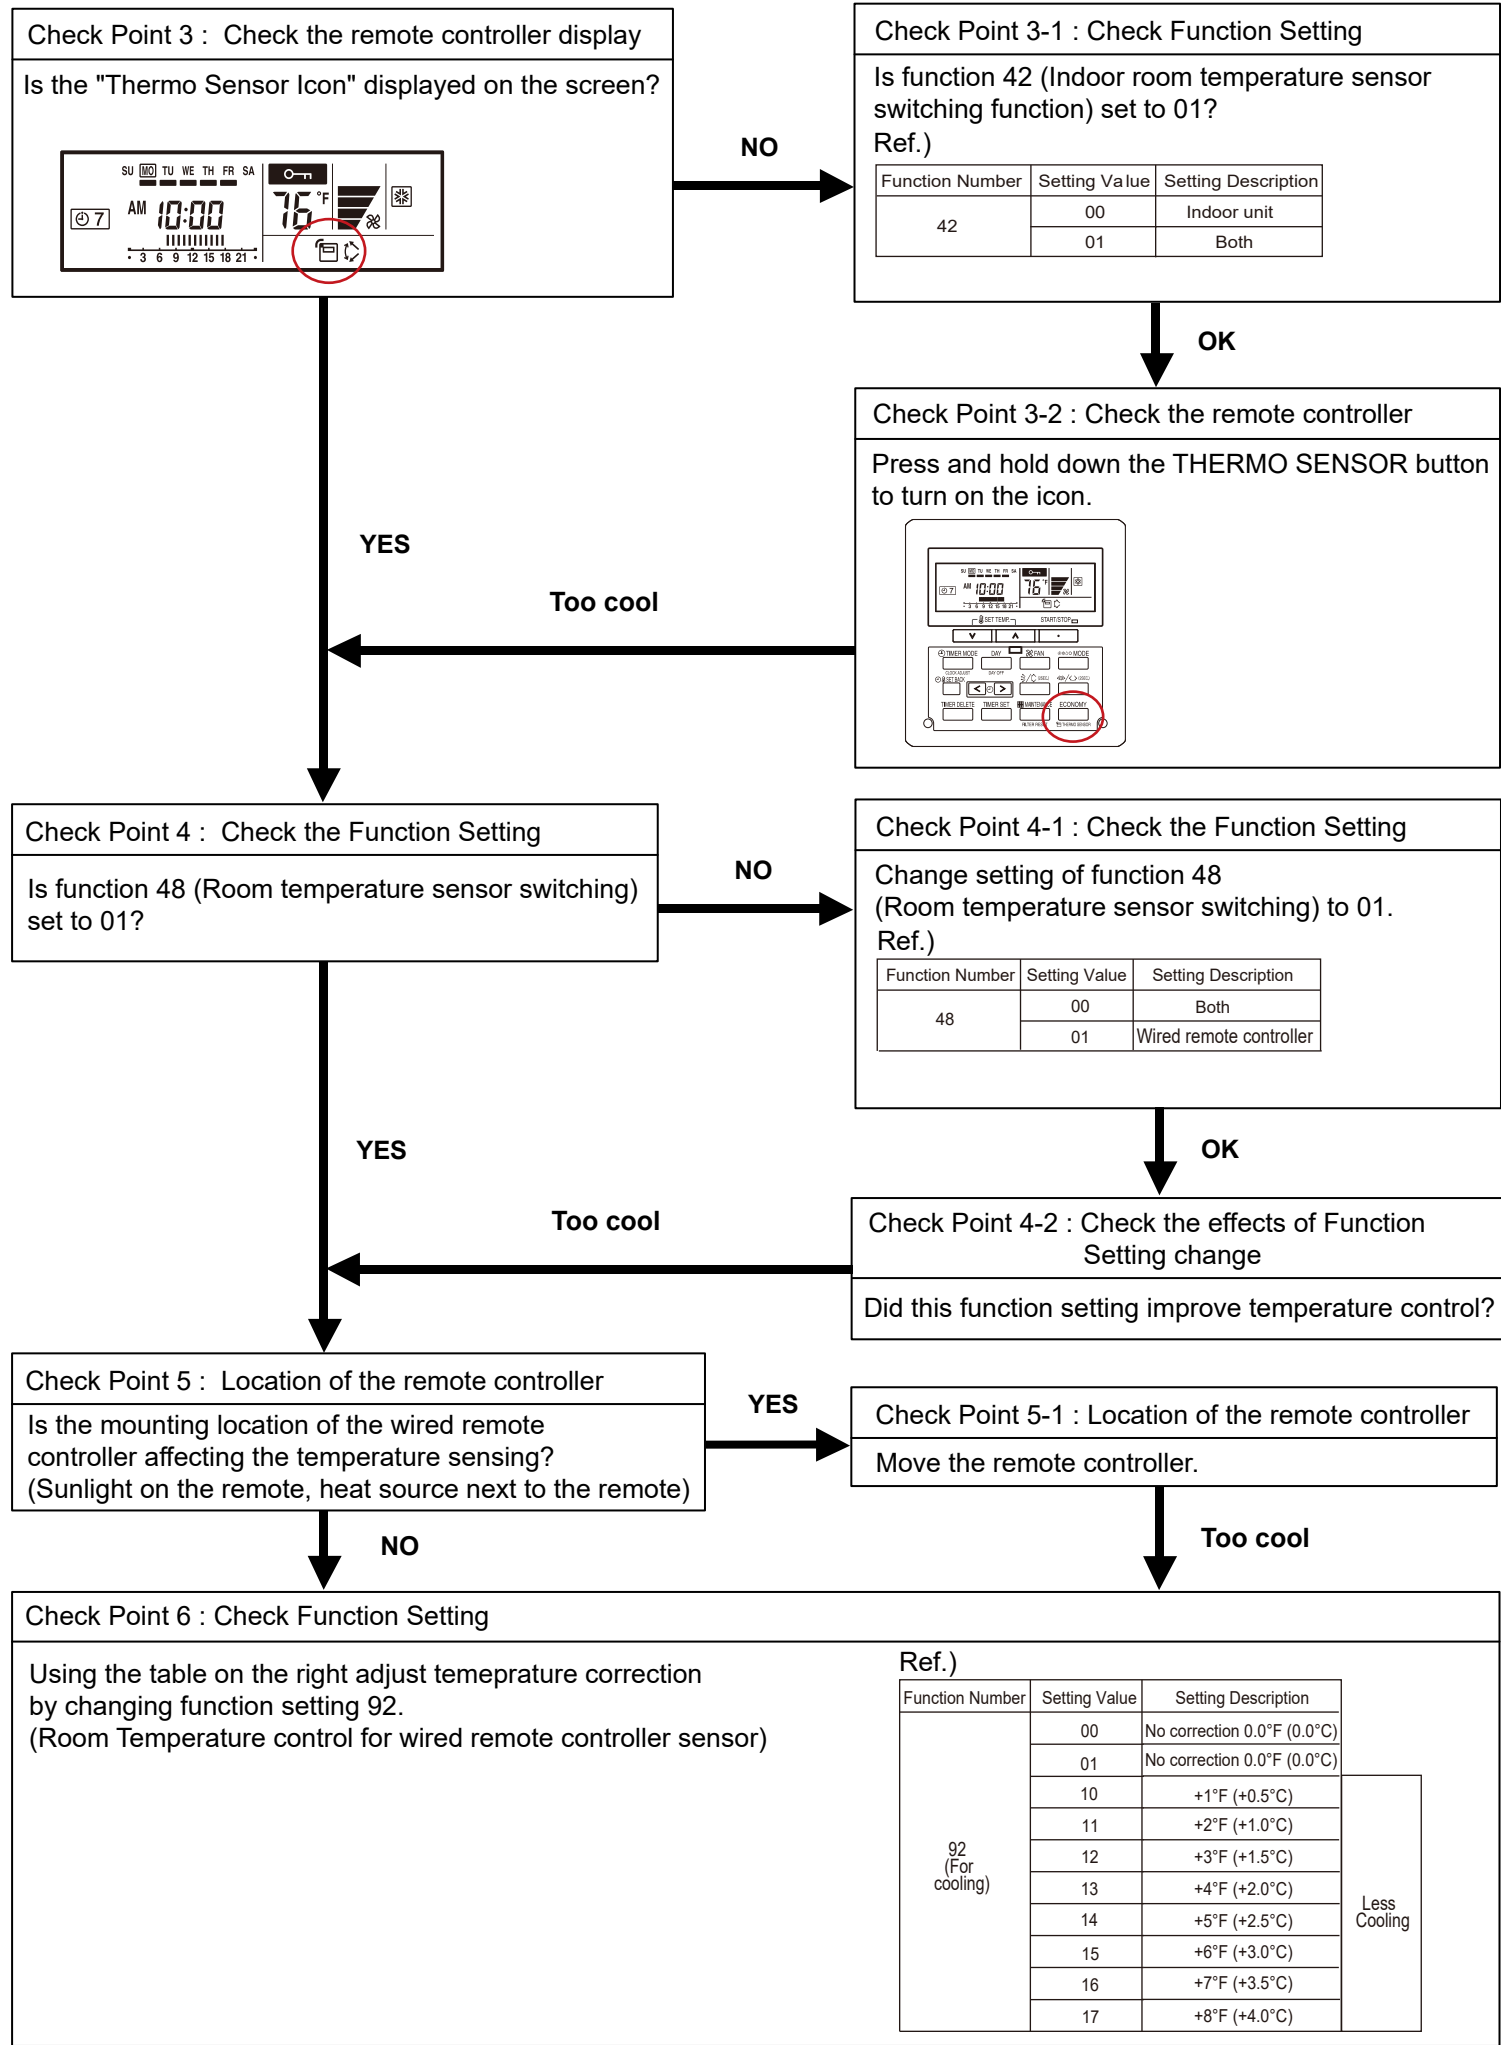


## 2-4 SERVICE PARTS INFORMATION

### SERVICE PARTS INFORMATION 1

#### Compressor

Diagnosis method of Compressor ( If Outdoor Unit LED displays Error, refer to Trouble shooting )

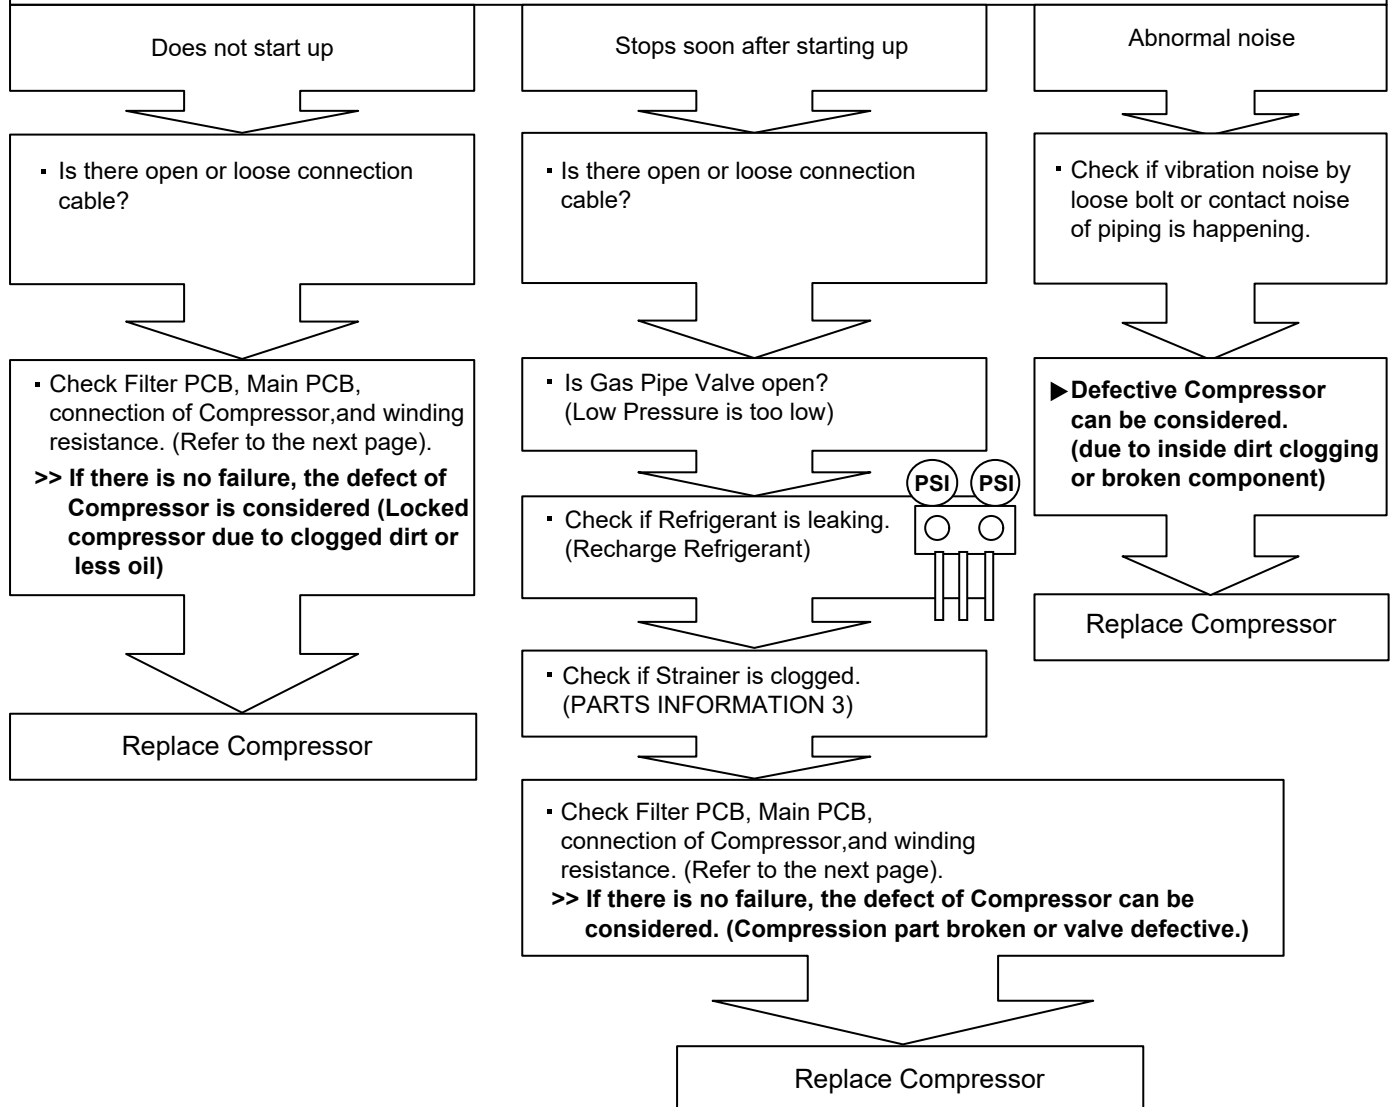




## SERVICE PARTS INFORMATION 2


### Compressor

#### Check Point 1 : Check Connection

- Check terminal connection of Compressor (loose or incorrect wiring)

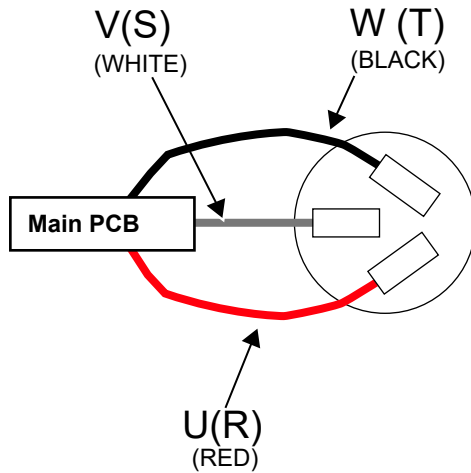


- Check terminal connection of Main PCB (loose or incorrect wiring)

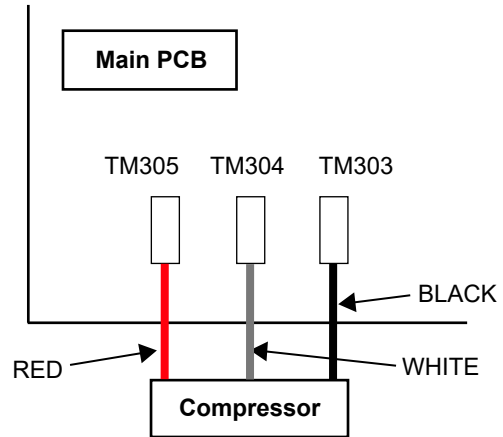

#### Check Point 2 : Check Winding Resistance

- Check winding resistance of each terminal

► **If the resistance value is 0  $\Omega$  or infinite, replace Compressor.**

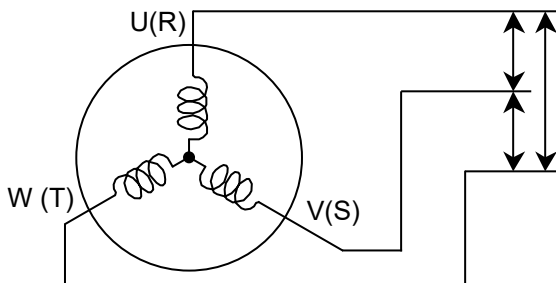

For AOU36RLXFZ1  
Resistance Value : 0.642  $\Omega$  at 68°F(20°C)



#### Check Point 3 : Replace Main PCB


► **If the symptom does not change with above Check 1, 2, replace Main PCB.**

### SERVICE PARTS INFORMATION 3

#### Outdoor unit Electronic Expansion Valve ( EEV )


##### Check Point 1 : Check Connections

- Check connection of connector  
( Loose connector or open cable )

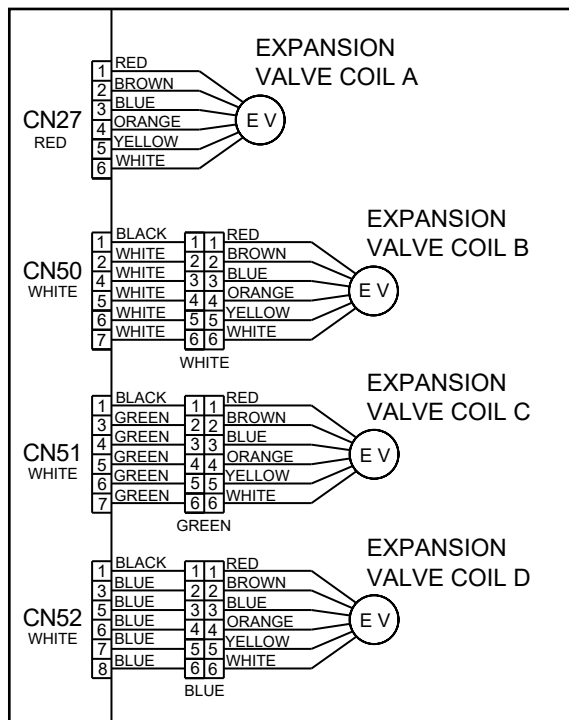

#### Check Point 2 : Check Coil of EEV

- Remove connector, check each winding resistance of Coil.

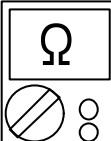Read wire	Resistance value
White - Red	$46 \Omega \pm 4 \Omega$ at 68°F(20°C) 
Yellow - Brown	
Orange - Red	
Blue - Brown	

► **If Resistance value is abnormal, replace EEV.**

#### Check Point 3 : Check Voltage from Main PCB.

- Remove Connector and check Voltage (DC12V)

► **If it does not appear, replace Main PCB.**

DC



#### Check Point 4 : Check Noise at start up

- Turn on Power and check operation noise.


► **If an abnormal noise does not show, replace Main PCB.**

#### Check Point 5 : Check Opening and Closing Operation of Valve

When Valve is closed, it has a temp. difference between Inlet and Outlet.

**CLOSE**  
Example : Hot Gas


Pipe (In)  
Hi TEMP.

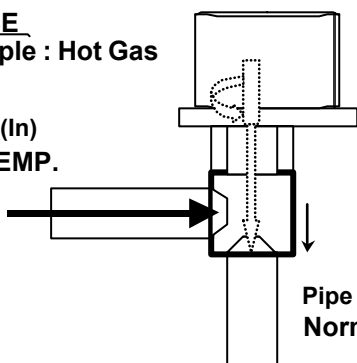

If it is open, it has no temp. difference between Inlet and Outlet.



**OPEN**  
Example : Hot Gas

Pipe (In)  
Hi TEMP.

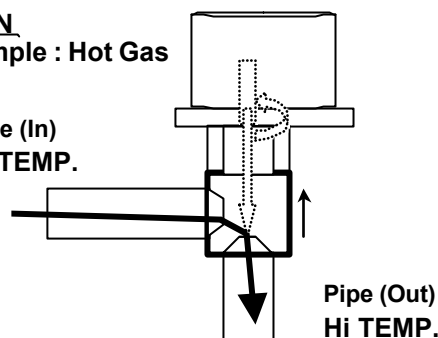

#### Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference as shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

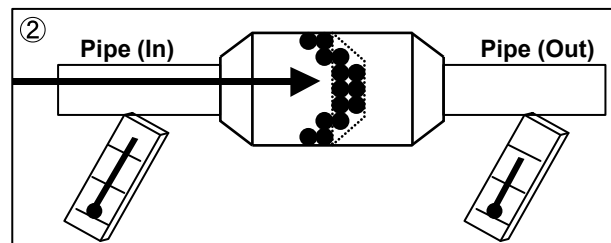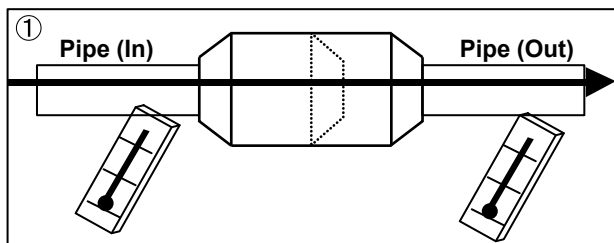

## **SERVICE PARTS INFORMATION 4**

### Indoor unit fan motor

#### Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.  
(Check if fan is caught, dropped off or locked motor)

**>>If Fan or Bearing is abnormal, replace it.**

#### Check Point 2 : Check resistance of Indoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.  
(Vm: DC voltage, GND: Ground terminal)

**>>If they are short-circuited (below 300 k $\Omega$ ), replace Indoor fan motor and Controller PCB.**

##### For Compact Wall Mount, Floor(Upper Motor) Type

Pin number (wire color)	Terminal function (symbol)
6 (Red)	DC voltage (Vm)
5	No function
4 (Black)	Ground terminal (GND)
3 (White)	Control voltage (Vcc)
2 (Yellow)	Speed command (Vsp)
1 (Blue)	Feed back (FG)

##### For Compact Wall Mount, Wall Mount Type

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Ground terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Blue)	Feed back (FG)

##### For Slim Duct, Compact Cassette(PCB Side) Type

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Ground terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown)	Feed back (FG)

##### For Compact Cassette(Fan Motor Side) Type

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3 (White)	Control voltage (Vcc)
4 (Black)	Ground terminal (GND)
5	No function
6	No function
7 (Yellow)	Speed command (Vsp)
8 (Brown)	Feed back (FG)

##### For Floor(Lower Motor) Type

Pin number (wire color)	Terminal function (symbol)
7 (Red)	DC voltage (Vm)
6	No function
5	No function
4 (Black)	Ground terminal (GND)
3 (White)	Control voltage (Vcc)
2 (Yellow)	Speed command (Vsp)
1 (Blue)	Feed back (FG)

## **SERVICE PARTS INFORMATION 5**

Outdoor unit fan motor

### Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.  
(Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

### Check Point 2 : Check resistance of Outdoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.  
(Vm: DC voltage, GND: Ground terminal)
- >>If they are short-circuited (below 300 k $\Omega$ ), replace Outdoor fan motor and Main PCB.**

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3 (Black)	Ground terminal (GND)
4 (White)	Control voltage (Vcc)
5 (Yellow)	Speed command (Vsp)
6 (Brown)	Feed back (FG)

## SERVICE PARTS INFORMATION 6

### Active filter module

#### Check Point 1 : Check Open or Short-circuit and Diode (D1)



- Remove connector, check the open or short-circuit and the diode in the module

Check the open or short-circuit

Table.1 Each type standard value

Terminal		Resistance value	
		Type A	Type B
multimeter (+)	multimeter (-)	SACT32010 [ HITACHI ] LACT33020 [ HITACHI ]	PM-604 [ FGEL ] PM-703 [ FGEL ]
		PM-601 [ FGEL ] <u>LOT No. - 1302931395</u>	PM-601 [ FGEL ] <u>LOT No. 1302931396 -</u>
+	(+IN)*	360kΩ ± 20%	360kΩ ± 20%
-	(-IN)*	0 Ω	0 Ω
※ P	+	720kΩ ± 20%	900kΩ ± 20%
L1	L2	1.01MΩ / 0.76MΩ (Ref. value 1) (Ref. value 2)	1.01MΩ / 0.76MΩ (Ref. value 1) (Ref. value 2)
P	N1 (N)*	360kΩ ± 20%	540kΩ ± 20%
L1, L2	Control Box	∞ Ω	∞ Ω
※ L2	N1 (N)*	1.65MΩ / 1.14MΩ (Ref. value 1) (Ref. value 2)	1.65MΩ / 1.14MΩ (Ref. value 1) (Ref. value 2)

\* ( ) is FGEL terminal name.

Table.2 Standard value is changed by the tool specification  
(Type A and B are the same value)

Terminal		Resistance value
multimeter (+)	multimeter (-)	
※ L2	P	1.32MΩ / 0.66MΩ (Ref. value 1) (Ref. value 2)
※ P	L2	1.01MΩ / 0.76MΩ (Ref. value 1) (Ref. value 2)

※ By kind of multimeter , the value may change significantly.

Ref. value 1


Specifications for Multimeter  
Manufacturer : FLUKE  
Model name : FLUKE11  
Power source : DC9V.

Ref. value 2

Specifications for Multimeter  
Manufacturer : SANWA  
Model name : PM3  
Power source : DC3V.

#### LOT No. of PM-601 [ FGEL ] type

Label position

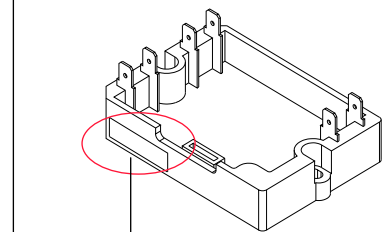


Label



Model name

Lot No. (10 figures)

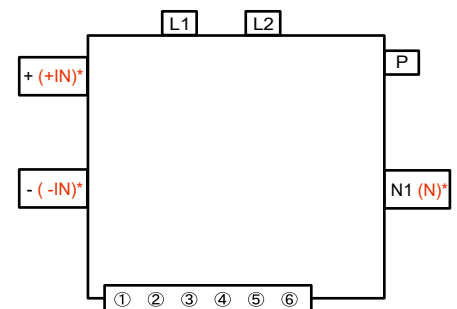


► If it is abnormal, replace ACTIVE FILTER MODULE

#### Check Point 2 : Check the Output DC voltage (between P and N)

DC



- Check the Output DC voltage (between P and N) of compressor stopping and operating.  
>> If the output voltage of compressor operating is less than the output voltage of compressor stopping,  
Active Filter Module is defective. >> Replace Active Filter Module

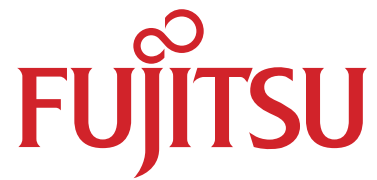

**FUJITSU GENERAL LIMITED**

**3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan**