DIGITAL THERMOMETER

USER MANUAL

FEATURES:

Backlit LCD Digital Display
°C/F° Temperature Scales
Foldout Stainless Steel Probe
Compact Pocket Size

CONTROLS:

ON/OFF Button
Probe Release Button
Manual Probe Release Handle
°C/°F Selection Button
Backlit LCD HOLD Button

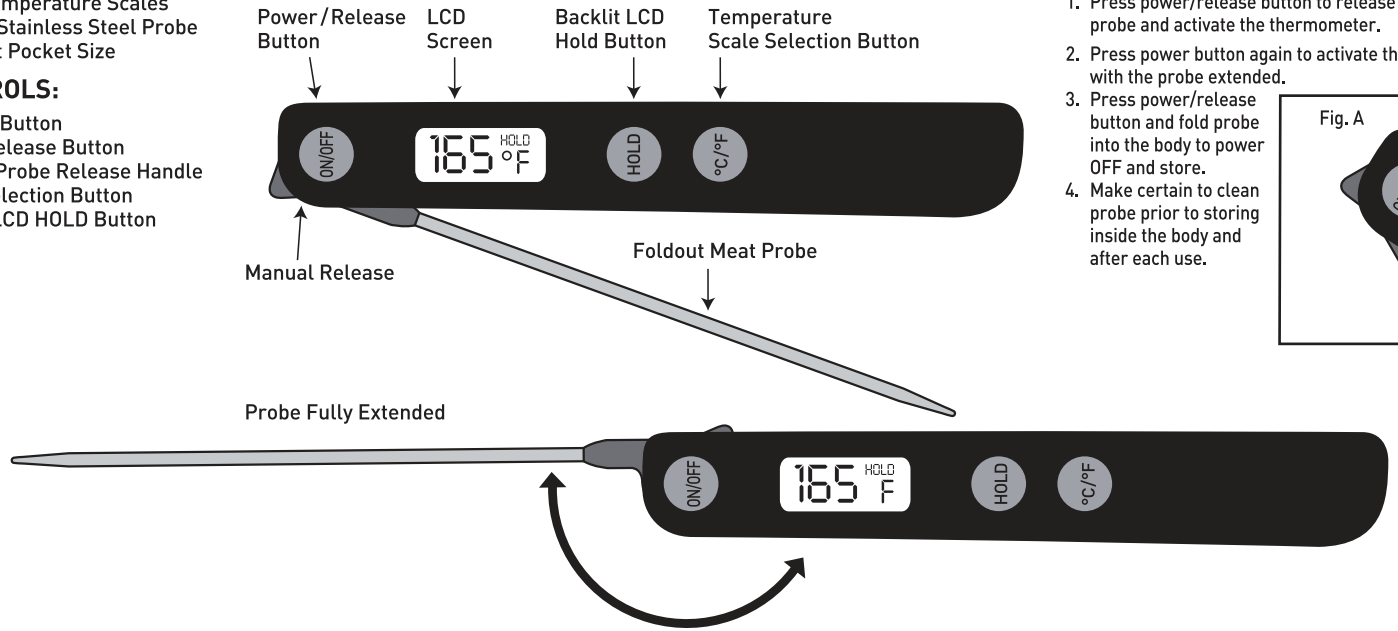

OPERATING INSTRUCTIONS:

Powering ON/OFF

1. Press power/release button to release the foldout probe and activate the thermometer.
2. Press power button again to activate the thermometer with the probe extended.
3. Press power/release button and fold probe into the body to power OFF and store.
4. Make certain to clean probe prior to storing inside the body and after each use.

Fig. A

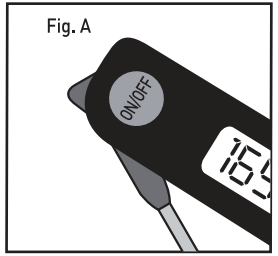

OPERATING INSTRUCTIONS:

Probe Insertion

1. Press power/release button to release the foldout probe or use release handle to manually release probe.
2. Extend completely and lock into position.
3. Insert probe tip into the center of the thickest part of the meat, taking care not to pierce through it (Fig. B). Do not expose any part of the probe to open flames.

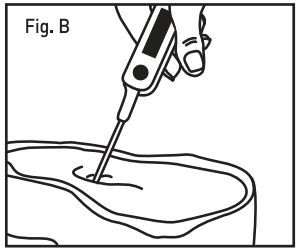

Hold Button/Backlight

1. Press hold button to illuminate the backlight.
2. Fold probe into the body to power off.

°C/°F Temperature Display

1. Press button for desired temperature scale.

BATTERY INSTALLATION

1. Slide the battery cover off of the top of the thermometer.
2. Insert 1 AAA 1.5V battery (not included) as indicated by the polarity symbols (+and-), see Fig. C.
3. Replace the battery cover.

Fig. C Battery Compartment

Battery Cover

CARE INSTRUCTIONS:

1. Clean outside of unit by wiping with a damp soft cloth.
2. Dry completely with soft cloth.
3. Do not use abrasive cleaning agents.
4. Unit is NOT waterproof. DO NOT submerge in water.

WARNING: The meat probe is not intended for use as an oven thermometer or grill surface thermometer. The meat probe is designed to measure internal meat temperature and has an operational range between -58°F and 572°F (-50°C and 300°C). Exposing the probe tip to temperatures above 572°F could cause damage to the temperature sensor.

WARNING: The probe quick release is spring loaded. Please keep fingers clear of probe during release. Please make sure to extend completely and lock probe into position prior to inserting into meat.

WARNING: DO NOT old and new batteries. DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. DO NOT dispose of batteries in fire. Batteries may explode or leak. Please dispose of batteries properly. Remove the batteries when not in use for an extended period of time. Batteries could leak causing corrosion.

CAUTION: Stainless steel meat probe will become extremely hot during use. Remove probe from meat and allow to cool. Remove probe prior to slicing into meat

PROGRADE GRILLING

Any questions,please email us at hello@progradegrill.com