




**CUT INNER SLEEVE TO DESIRED HEIGHT. (IF NEEDED)
(SLEEVE EXTENSION CAN ALSO BE ADDED,
FOR DESIRE HEIGHT OVER 10-3/4")
(Fig. 1)**

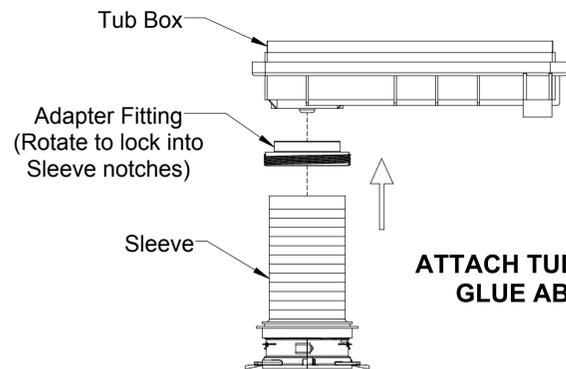


**ATTACH TUB BOX ADAPTER TO SLEEVE.
GLUE ABS ADAPTER TO TUB BOX.
(Fig. 2)**

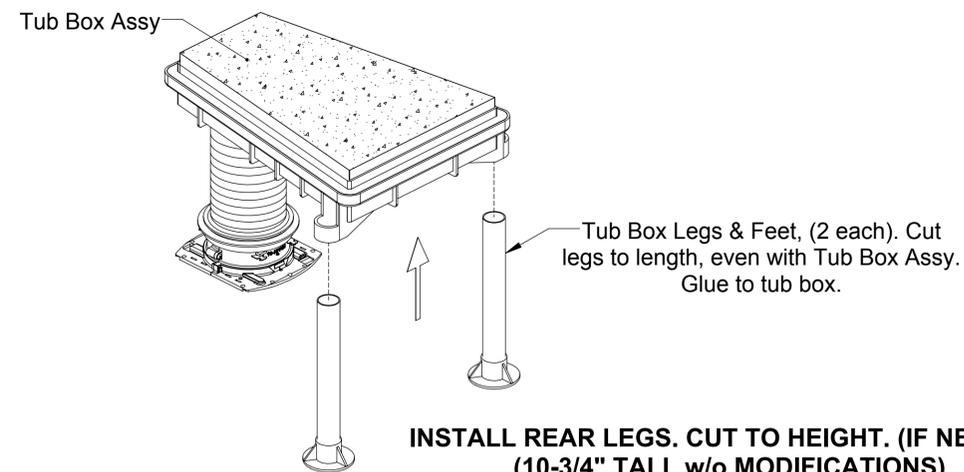


**INSTALL REAR LEGS. CUT TO HEIGHT. (IF NEEDED)
(10-3/4" TALL w/o MODIFICATIONS)
(Fig. 3)**

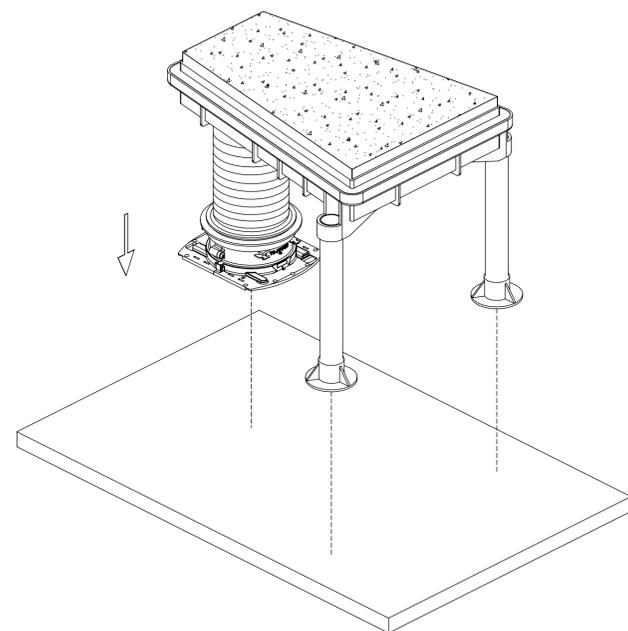


**NAIL TUB BOX, SLEEVE
AND LEGS TO FORM DECK.
(Fig. 4)**

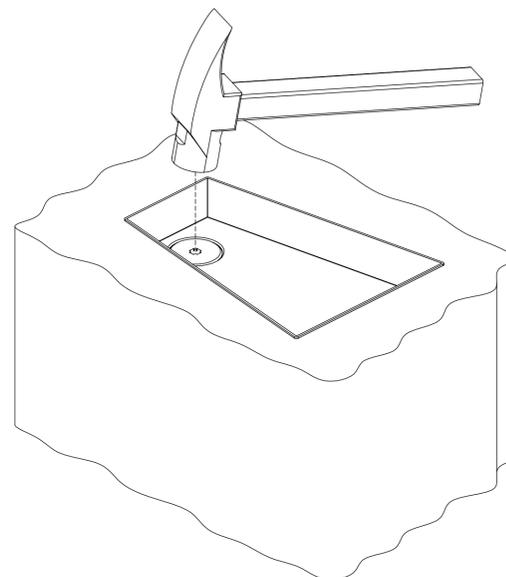

**REMOVE STYROFOAM BLOCK
& "KNOCK OUT PLUG".
(Fig. 6)**

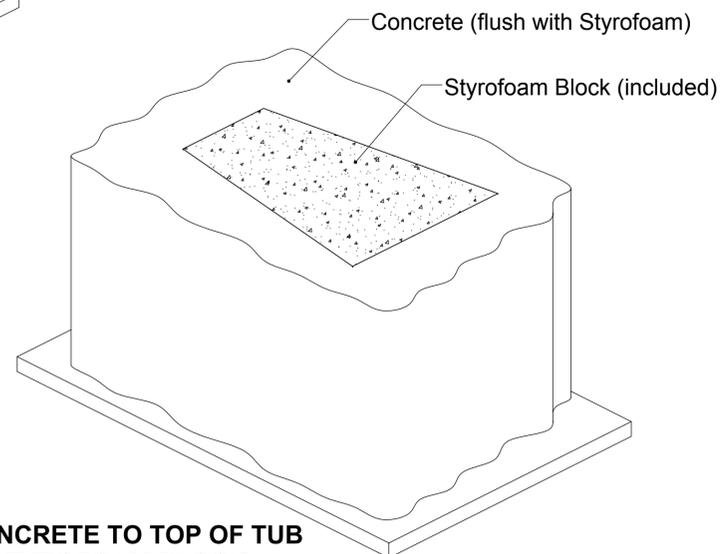

**POUR CONCRETE TO TOP OF TUB
BOX STYROFOAM BLOCK.
(Fig. 5)**

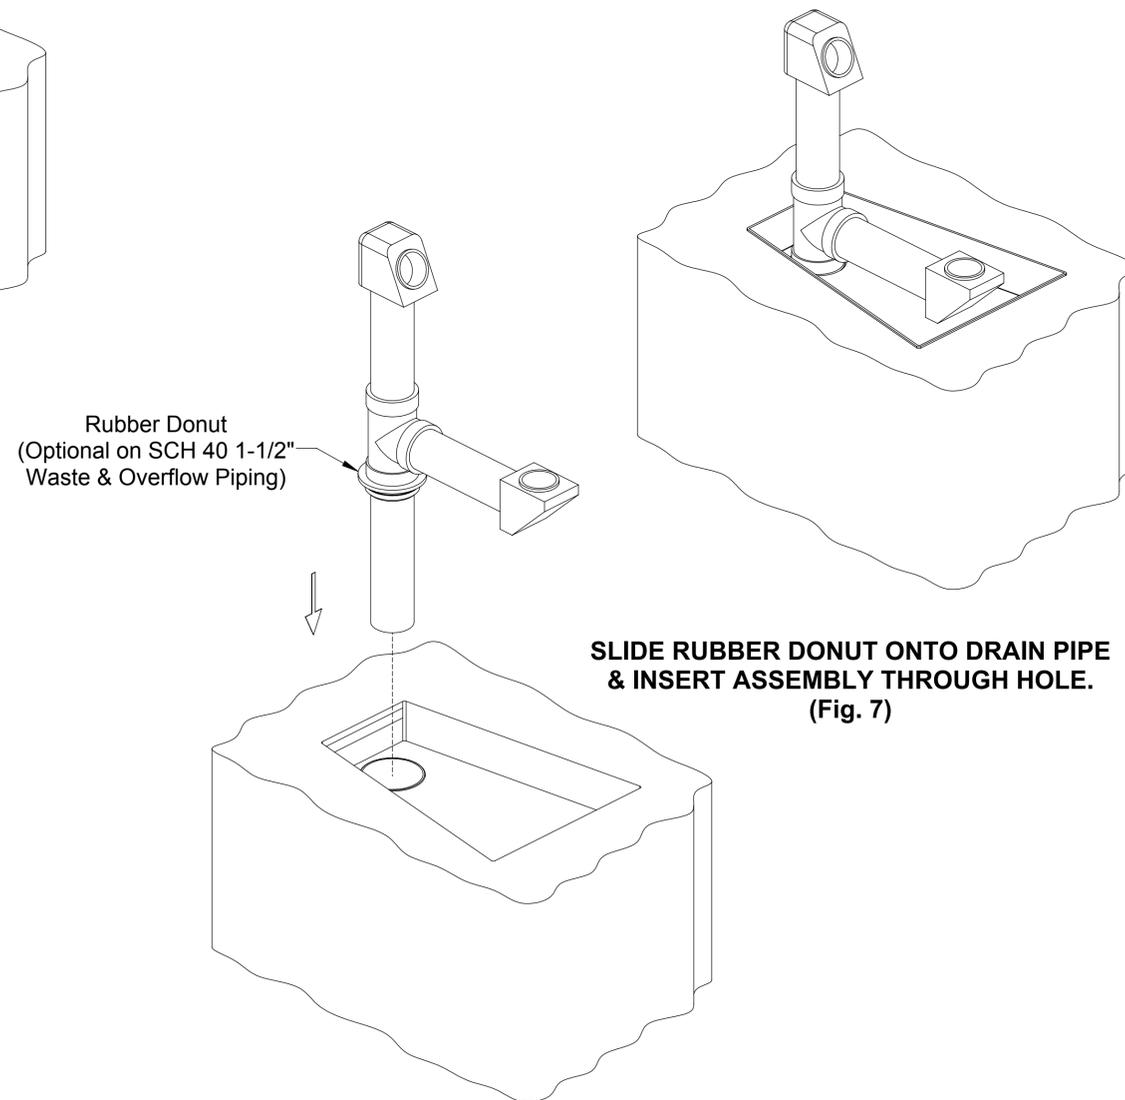

**SLIDE RUBBER DONUT ONTO DRAIN PIPE
& INSERT ASSEMBLY THROUGH HOLE.
(Fig. 7)**