



Vinyl Shower Pan Cement



DIRECTIONS FOR USAGE:

1. Surfaces to be joined must be clean and dry.
2. Apply cement with dauber or short natural bristle brush. If cement appears jellied, it may be thinned by adding a small amount of acetone.
3. To join sheets allow a 4" minimum overlap. Apply a thin even coat of cement to both surfaces to be joined. The entire surface of material to be joined must be covered with cement. Apply the cement to short lengths of material, not to exceed 3' at a time.
4. Join cemented surfaces as quickly as possible before cement dries. For seams exceeding 6' in length, use a weighted, smooth flooring roller to facilitate bonding material.
5. Apply a wide bead of cement to the entire length of the overlap. If material has been joined outside of installation area, apply the bead to both top and bottom edges of the overlap.
6. Do not disturb or try to peel joined surfaces. The cemented seam should fully cure in 24 hours.

NOTE: COMMON PVC PIPE CEMENT WILL NOT SOLVENT WELD VINYL SHOWER PAN LINER


Pint size only

PART NUMBER	QTY
3008	12 cans per case

Shower Pan Caulk

Excellent for sealing between shower pan liner and shower drains

- To insure a waterproof seal between the lower drain flange and the pan material, apply a small ring of #1709 caulking on top of the lower drain flange.
- Can be used anywhere an economical, weather resistant, long life sealant is required

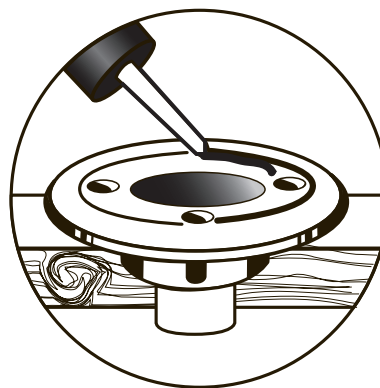

For use please follow the installation instructions on page I-7

PART NUMBER	SIZE
1709	10 oz Cartridge