



3M™ No Polish Connector 8800-APC/AS
SM SC/APC, Angle Splice, 250/900- μ m

Instructions

Contents

1.0 Summary	3
2.0 Connector Preparation	4
3.0 Fiber Preparation.....	4
4.0 Fiber Insertion.....	7
5.0 Splice Actuation.....	8

Safety Precautions

Protective Eyewear

CAUTION

Safety glasses should be worn when handling chemicals and cleaving the optical fiber

Chemical Precautions

WARNING

Storage, use and disposal of isopropyl alcohol should be per your company health, safety and environmental instructions. Refer to material safety data sheet for health hazards, safe handling, proper use and control measures.

CAUTION

Product contains phenylmethyl silicone (63148-58-3), hydrophobic silica (68611-44-9) and may cause minimal eye irritation. Avoid contact with eyes and wash hands before eating or smoking. Upon eye contact, immediately flush eyes with water while holding eyelids open and continue flushing for ten minutes. Contact a physician. Upon skin contact, wash with soap and water. Product Information: Material Safety Data Sheet or 3M Company, St. Paul MN, 55144-1000, (651) 733-1110 Operator 55

Bare Fiber Handling

CAUTION

Cleaved glass fibers are sharp and can pierce the skin. Use tweezers when handling shards and dispose of them properly per your company health and safety instructions.

Fiber/Cable Handling

CAUTION

Optical fiber can be damaged by excessive tensile, compressive and bending forces. Consult the manufactures' specifications for proper handling instructions.

Laser Safety

CAUTION


Take the proper precautions when working with optical fiber because invisible laser light may be present. The principal laser hazard when working with fiber optics is injury to the eye. Never look directly into the fiber or connector using the naked eye or a microscope.

1.0 Summary

- 1.1 3M™ No Polish Connector 8800-APC/AS terminates 250 μm or 900 μm single fibers with SC/APC interface and angle splice for superior optical return loss performance.



- 1.2 Required tools, which are available in the 3M™ Fiber Optic Angle Cleave Kit 2565.

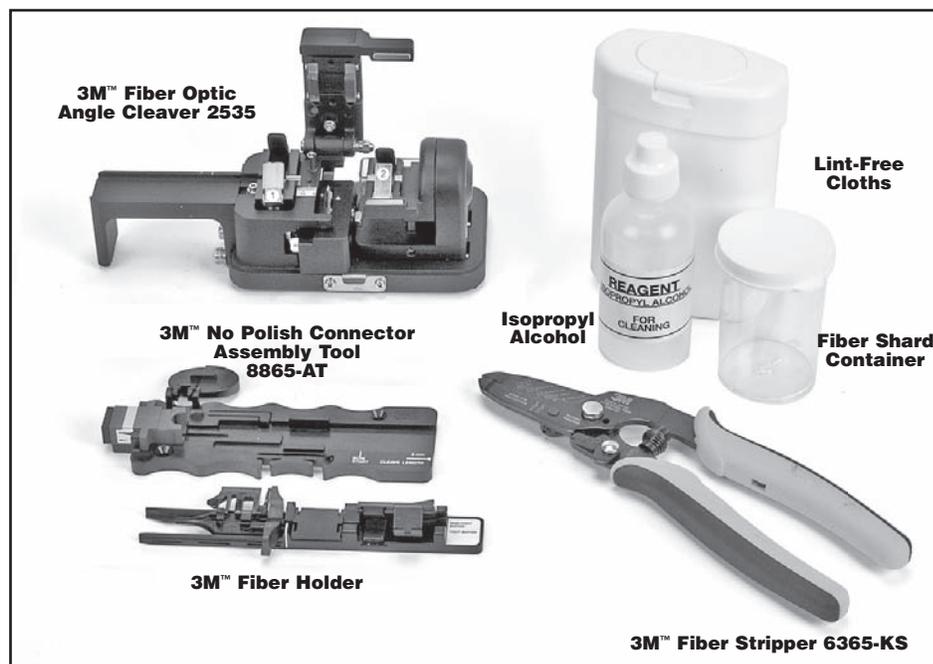

- 1.3 For situations where a suitable work area is not available, the case and plastic plate, which are included in the 2565 kit, can create a work surface. The case can be set on level ground, on a vehicle, or hung by the hook and shoulder strap.




- 1.4 Add one full bottle (1.8 fl. oz./53 ml.) of 99% pure isopropyl alcohol into lint-free cloth container to pre-moisten wipes.

2.0 Connector Preparation

- 2.1 Prior to each termination, clean all tools, including fiber holder, with a lint-free cloth and reagent-grade isopropyl alcohol.




- 2.2 Carefully remove connector body from the bag. Remove the dust caps from the front and rear of the connector body.
- 2.3 Open the actuator button on the assembly tool base. Insert connector into coupling in the tool with white actuation cap facing upwards, pushing forward until it clicks.

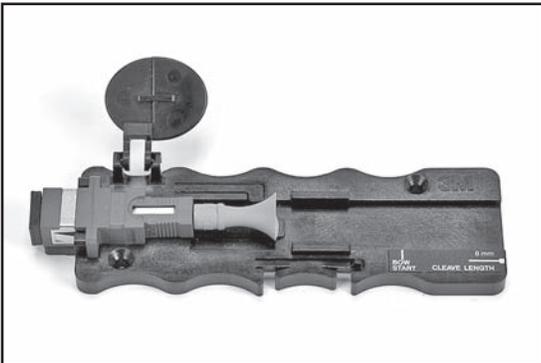


3.0 Fiber Preparation


- 3.1 Open all three angle cleaver clamps and levers.

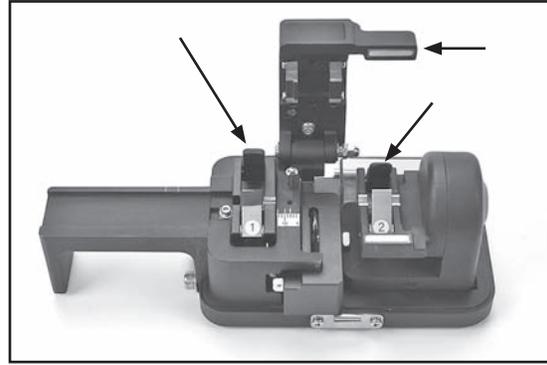


- 3.2 Carefully clean the cleaver clamps using a small brush.

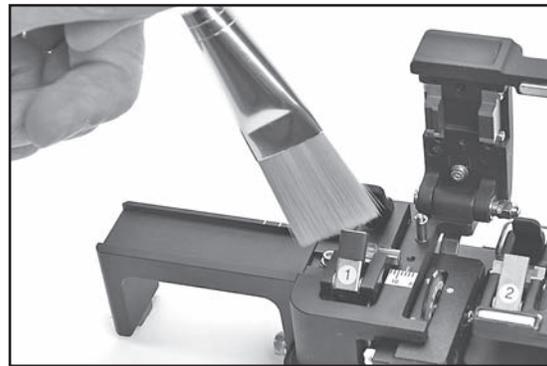


- 3.3 For 900 μm buffer fiber, cut the buffer. If the 900 μm slides easily from the fiber it is loose tube or semi-tight buffered fiber.

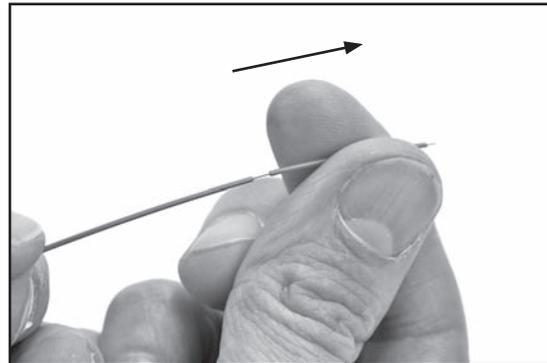


In this instance, use the fiber holders' clamp to prohibit the buffer from moving or stretching during the stripping process. Place the fiber into the fiber holder groove, labeled "semi-tight", with the fiber to be stripped protruding from the back of the holder. Close the clamp and proceed to strip and clean the fiber. Once complete, remove the fiber from the holder. If the 250 μm fiber still moves inside the 900 μm buffer after it is clamped in the "semi-tight" groove, then the connector must be installed on the 250 μm fiber. Strip at least eight inches (203 mm) of the 900 μm buffer and complete the installation.

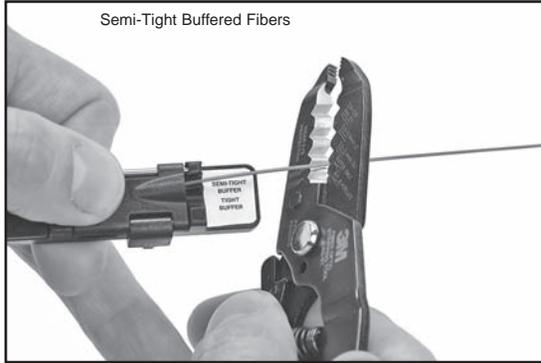


- 3.4 For all fibers, strip the 900 μm and 250 μm coatings exposing glass for 1.67" to 1.77" (42.5 mm to 45 mm).

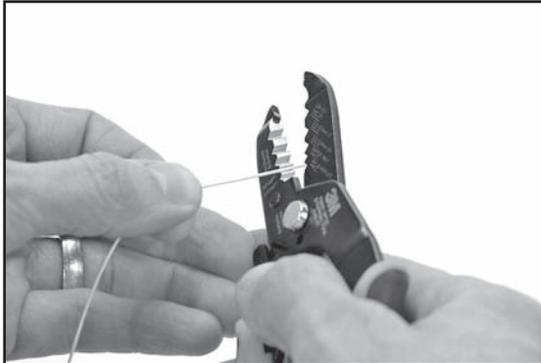


- 3.5 To verify the correct strip length, use the white marks on the left side of the cleaver. Align the coating edge to the left edge of the cleaver and the fiber tip should be between the two white lines.

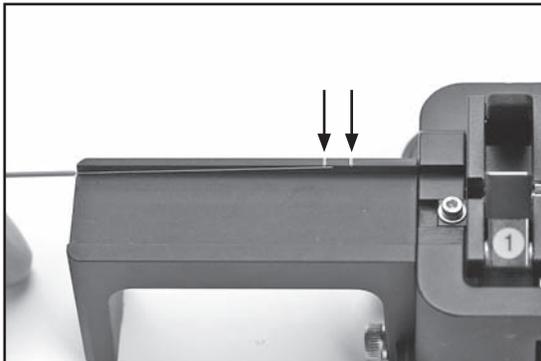

- 3.6 Clean fiber with alcohol and lint-free cloth.

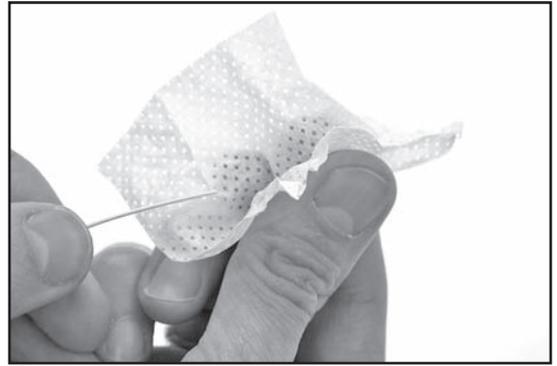


- 3.7 With the two covers and clamp open, place the assembly tool fiber holder onto the cleaver. Push the holder toward the cleaver blade until it stops.

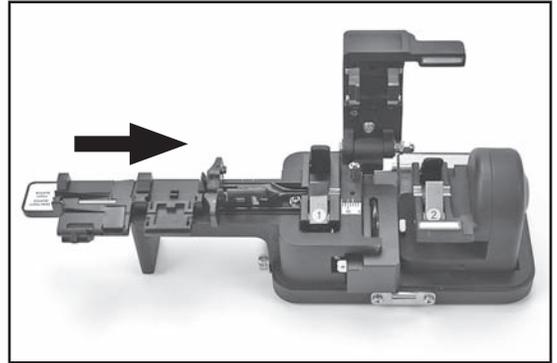


- 3.8 Place fiber in angle cleaver so that the coating edge is at 8.0 ± 0.5 mm.

Note: Make sure that the natural bow in the fiber is facing down and laying properly in the bottom of V-groove in both cleaver clamps 1 & 2.

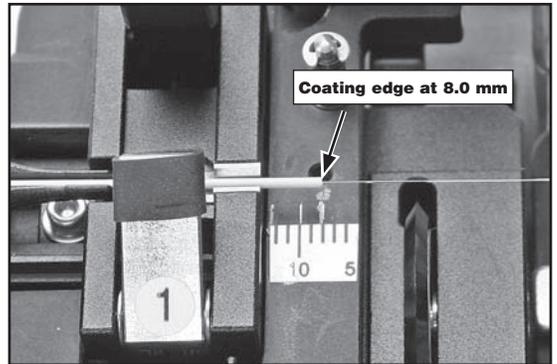


3.9 Close the cleaver clamp #1 first. This process sets the appropriate cleave length.


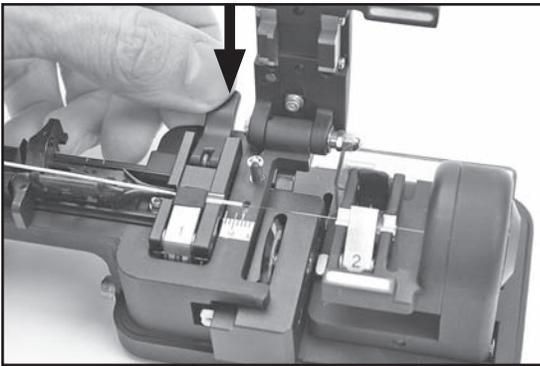


3.10 Close the cleaver clamp #2.


Note: *Ensure there is no fiber bow between the two clamps. If there is a bow, open both clamps and repeat steps 3.9 and 3.10.*

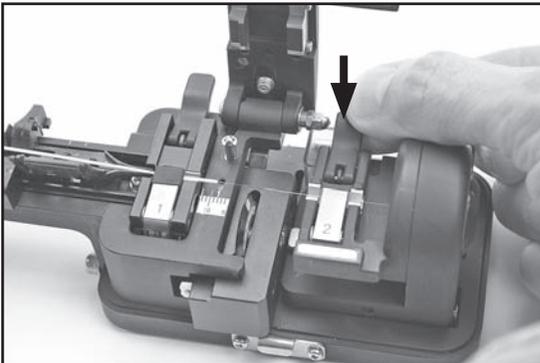


3.11 For 250 μm fiber and tight buffer 900 μm fiber, the fiber should be placed in the fiber holder tool groove which is labeled "Tight buffer". For semi-tight buffer fiber, it should be placed in the groove labeled "Semi-tight buffer". This provides the proper clamping force on the 900 μm buffer.

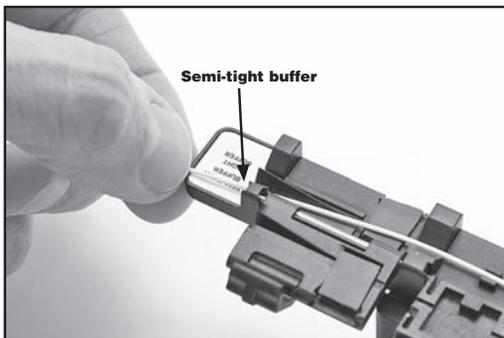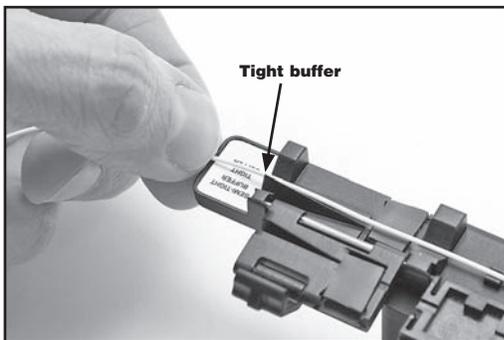

3.12 Close the two covers and the clamp on the fiber holder. The funnel cover will not close completely while in the cleaver. Do not force or cover can break.

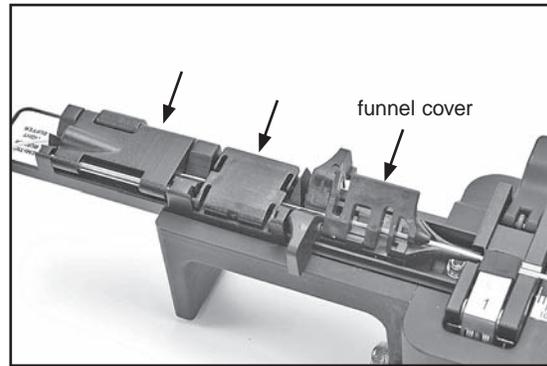


3.13 Depress cleaver activation lever (#3) and hold it down until Clamp #2 slide assembly has fully moved to the right, indicating that the angle cleave is complete.

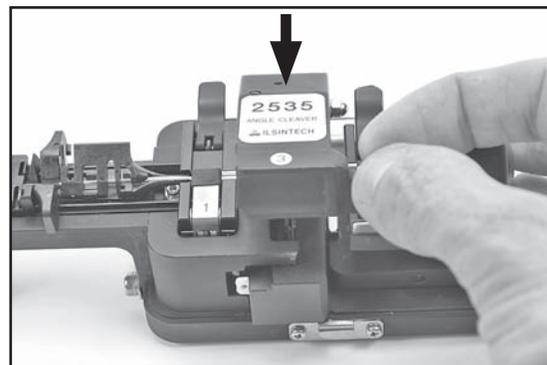


Note: *If fiber does not break immediately upon activation, or it breaks so that the cleave length is not 8 mm, then open clamps and carefully clean the cleaver clamps with a brush and alcohol-soaked lint-free cloth. Cut exposed fiber and strip, clean and cleave again. If issues persist, rotate cleaver blade to the next position using the supplied wrenches and try again.*

3.14 Open cleaver clamp #1 and remove fiber holder and fiber from cleaver.


Note: *Do not open activation lever after cleaving until fiber holder and fiber have been removed.*

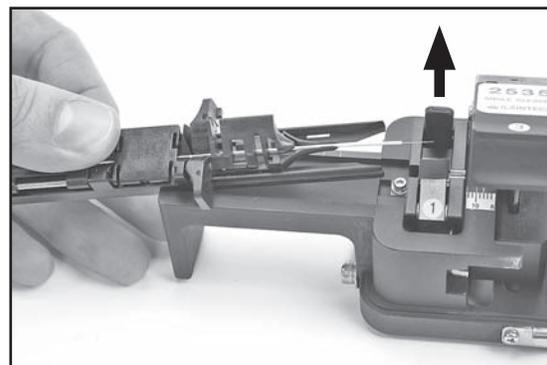

- 3.15 Verify the 8 mm cleave length again by using the length gauge on the assembly base. The 8 mm cleave length is measured from the end of the 900 μm buffer to the end of the cleaved fiber. On semi-tight buffer fiber, the 250 μm coating may protrude 1 mm past the 900 μm semi-tight buffer. Re-strip, clean and cleave the fiber if necessary to meet length requirements.

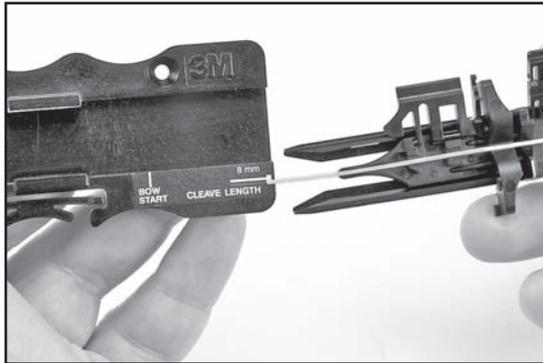


- 3.16 Open activation lever #3 and clamp #2 of angle cleaver. Dispose of fiber shard per company practice.

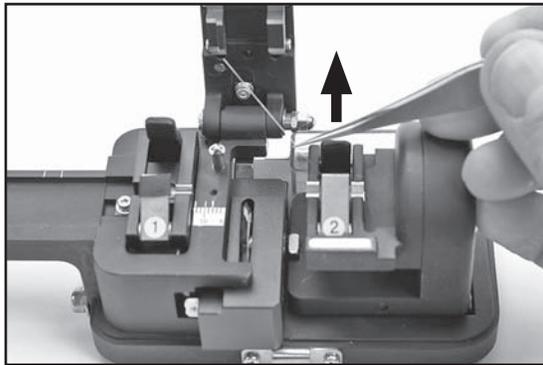


4.0 Fiber Insertion


- 4.1 Slide the fiber holder's guide funnel fully forward and close the funnel cover. An audible click can be heard. Check for proper cleave length again by inspecting the amount of fiber protruding beyond the funnel end of the holder. The amount of exposed fiber should be from 0 to 1 mm (0.04").

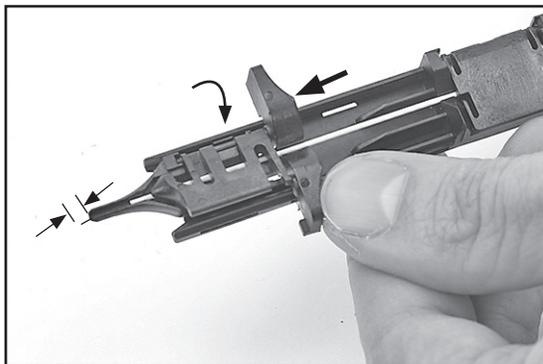

- 4.2 Place fiber holder in the assembly tool base.

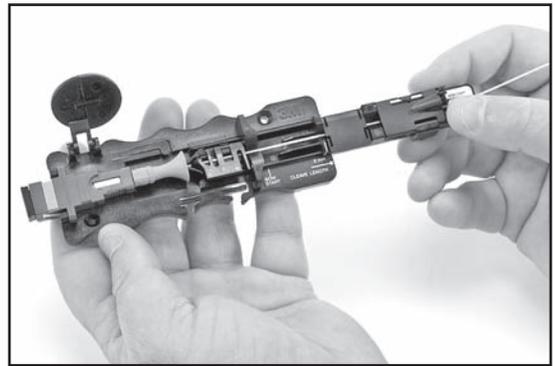


- 4.3 VERY SLOWLY slide the fiber holder towards the connector. A bow in the fiber is started once the white line on the fiber holder is even with the white line (BOW START) on the base. If a bow is not seen, strip, clean and cleave the fiber as shown in section 3 and try installation again.

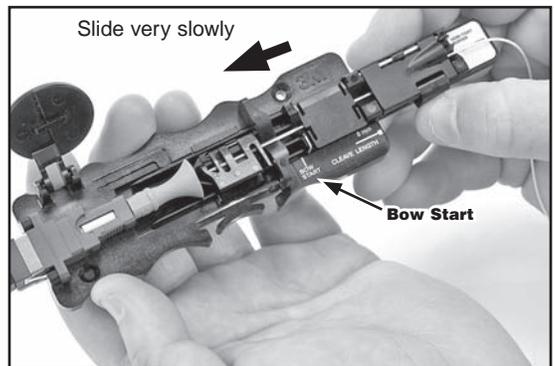


Note: See photo in 4.4 for more detail.

- 4.4 If a bow is seen before the white line on the holder meets the white line on the base, then strip, clean, and cleave the fiber as shown in Section 3 and try again.

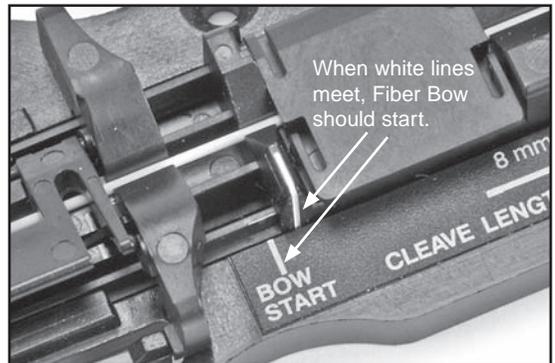


- 4.5 When the fiber holder is pushed toward the connector and stops, the fiber bow should be seen as below. The fiber will bow and lift the middle cover for rigid fibers and remain closed for flexible fibers.

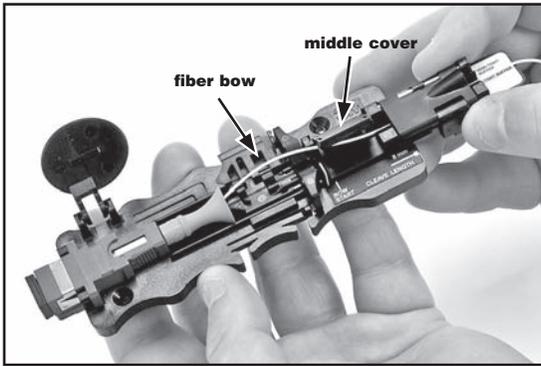


5.0 Splice Actuation

- 5.1 While there is a fiber bow, press actuator button firmly to actuate the splice. An audible click will be heard when properly completed.


Note: *If continuity verification is required or you need to test the link prior to placing in service you will perform this step now. Do not proceed to step 5.2 until testing is complete. If re-termination is required, please skip to Section 6, 3M™ No Polish Connector (NPC) Re-termination.*

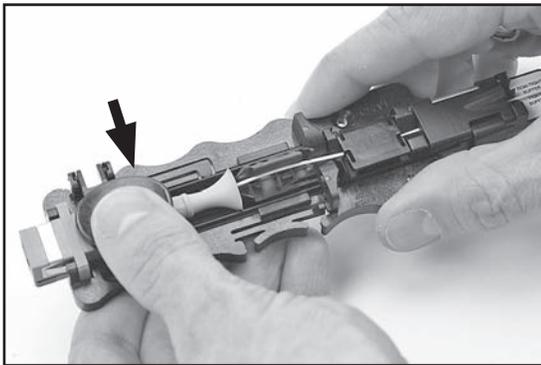


- 5.2 Press release lever to allow forward motion of funnel. Push ears to move funnel forward and actuate buffer clamp.

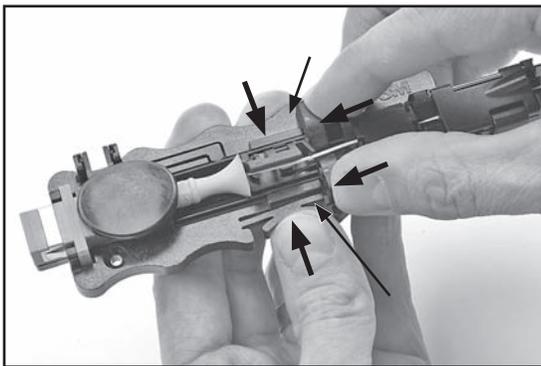

- 5.3 Open the clamp and lift the covers to release fiber.

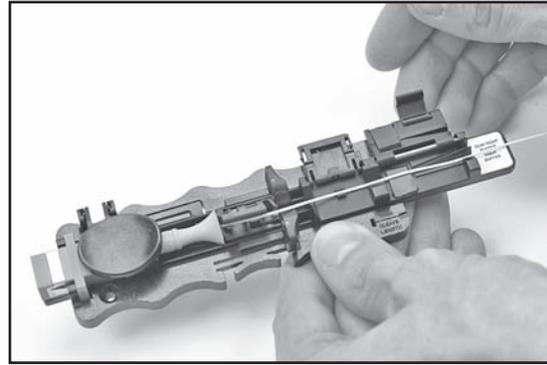


- 5.4 Slide fiber holder from actuation tool.

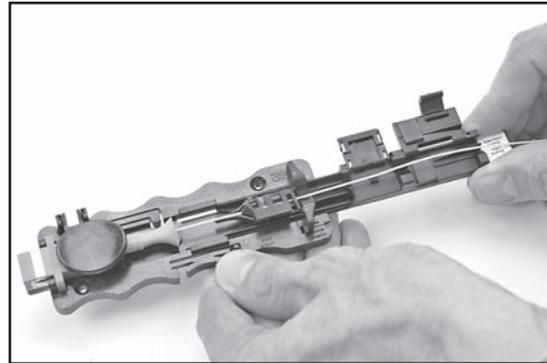

Optional: 3M™ No Polish Connector can be tested in the tool using a SC coupling.

- 5.5 Pull connector from coupling and clean connector end face with isopropyl alcohol and a lint-free cloth.

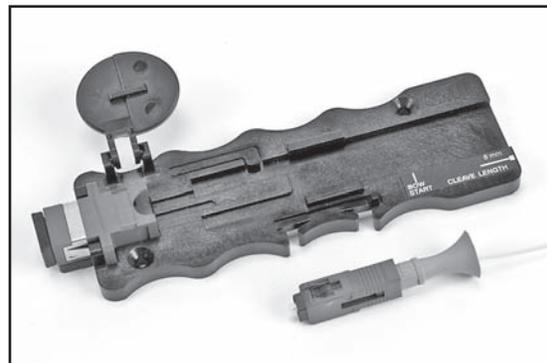


- 5.6 After removing connector from the coupling, replace the dust cap on the ferrule until connector is ready to be placed in service.




6.0 3M™ No Polish Connector (NPC) Re-termination

- 6.1 To re-terminate the NPC connector, remove the connector from the coupling on the actuation tool and fiber holder prior to activating the buffer clamp at the boot. Take the cap popper provided for you in the box of NPC connectors and place it in the three slots provided on the underside of the NPC connector shell as shown.

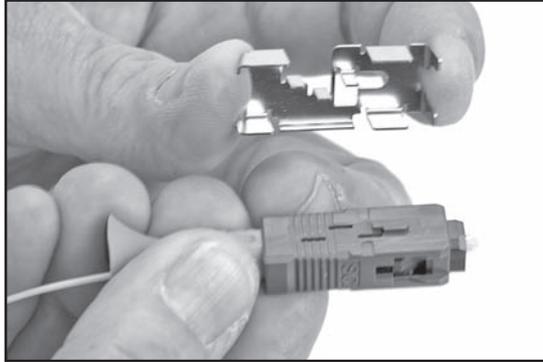


- 6.2 Firmly press the cap popper into the NPC connector shell until the activation cap is depressed.

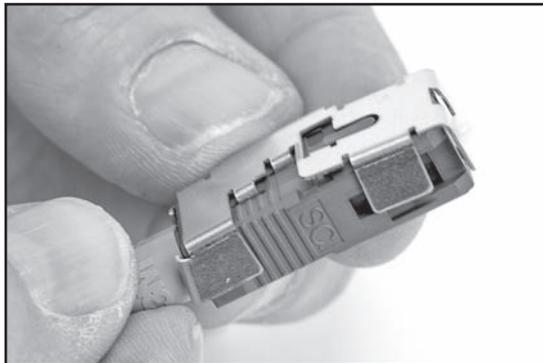

Remove fiber and insert connector with the actuation cap facing up in the coupling, pushing forward until it clicks. Follow steps 3.0 through 5.1 to re-terminate the NPC connector.

- 6.3 Upon verification that connector has been terminated satisfactorily, slide the fiber holder up into the back of the boot. Return to steps 5.2 through 5.6 to complete the termination of the NPC connector.

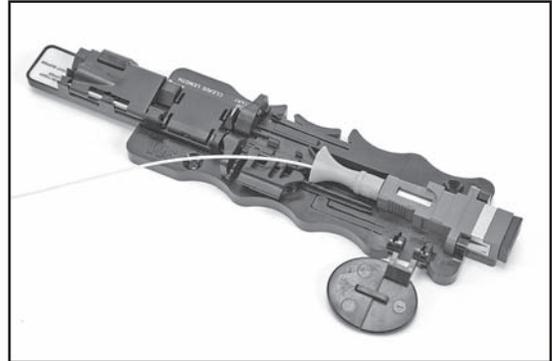

For information regarding the proper field testing procedure refer to the Tech Tip on the 3M CMD website, www.3m.com/telecom

3M™ No Polish Connector, Kit and Tool Descriptions		Packaging
8800-APC/AS*	No Polish Connector SM SC/APC Angle Splice, 250/900 µm (green housing, green boot)	60/package
2565	Fiber Optic Angle Cleave Kit	1/package
2535	Fiber Optic Angle Cleaver	1/package
8865-AT	No Polish Connector Assembly Tool	1/package

*Every box of 60 contains a 3M No Polish Connector Tool 8865-AT.

3M™ Fiber Optic Angle Cleave Kit 2565 Contents	
2535	Fiber Optic Angle Cleaver with brush, tweezers, maintenance parts and spare rubber pads
2501-AS	Fibriok™ Angle Splice Assembly Tool
8865-AT	No Polish Connector Assembly Tool
6362-TH	Fiber Stripping Tool
6365-KS	Kevlar Snips
	Lint-Free Cloths, Cleaning Alcohol Bottle, Work Plate, Fiber Shard Container
8800-APC/AS	No Polish Connector SM SC/APC Angle Splice, 250/900 µm (2 ea.)
2529-AS	Fibriok™ II Angle Fiber Splice (6 ea.)
2540-AS	Fibriok™ 250 µm Angle Fiber Splice (5 ea.)



3M and Fibriok are trademarks of 3M Company.

Important Notice

All statements, technical information, and recommendations related to 3M's products are based on information believed to be reliable, but the accuracy or completeness is not guaranteed. Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to the product which are not contained in 3M's current publications, or any contrary statements contained on your purchase order shall have no force or effect unless expressly agreed upon, in writing, by an authorized officer of 3M.

Warranty; Limited Remedy; Limited Liability.

This product will be free from defects in material and manufacture for a period of one (1) year from the time of purchase. **3M MAKES NO OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** If this product is defective within the warranty period stated above, your exclusive remedy shall be, at 3M's option, to replace or repair the 3M product or refund the purchase price of the 3M product. **Except where prohibited by law, 3M will not be liable for any indirect, special, incidental or consequential loss or damage arising from this 3M product, regardless of the legal theory asserted.**



Communication Markets Division

6801 River Place Blvd.
Austin, TX 78726-9000
1-800-426-8688

www.3MTelecommunications.com

Please Recycle. Printed in USA.
© 3M 2010. All Rights Reserved.
78-8140-1581-0-C