


Amel Fixed Coupling Alignment Tool

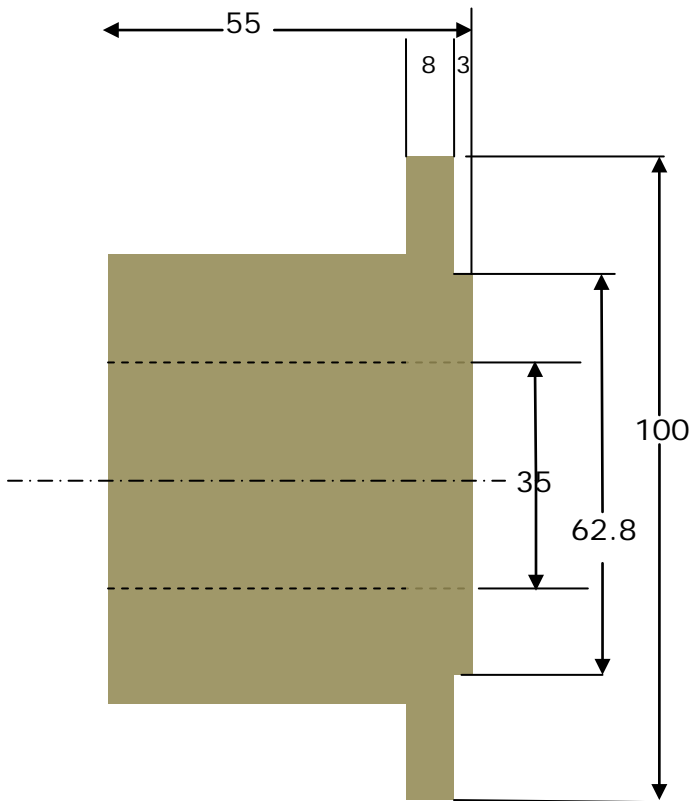

PEARL: It is a good idea to make the bore of the tool a few thousandths bigger than 35 mm - otherwise it will be very difficult to get on or off the C-Drive input shaft, also machine a slight bevel so that the Fixed Coupling enters the shaft with ease.