

Hobie®
Mirage Drive®
Instruction Supplement



Please read through the instruction manual before using this product.

Mirage Drive Cranks


Assembly

①


Insert cranks into drums

②


Tighten crank bolt using a 9/16" or 15mm wrench until the bolt is flush with the drum.

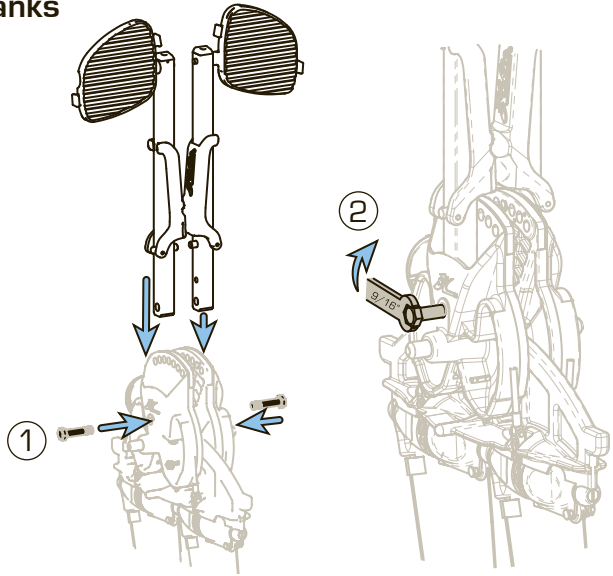


Identifying your Mirage well

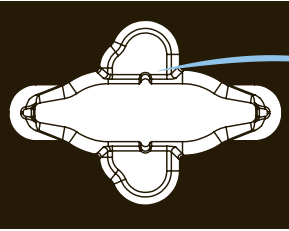



Leave nubs if Mirage well features alignment grooves.

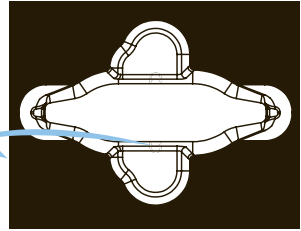


Remove nubs if Mirage well does **not** feature alignment grooves.

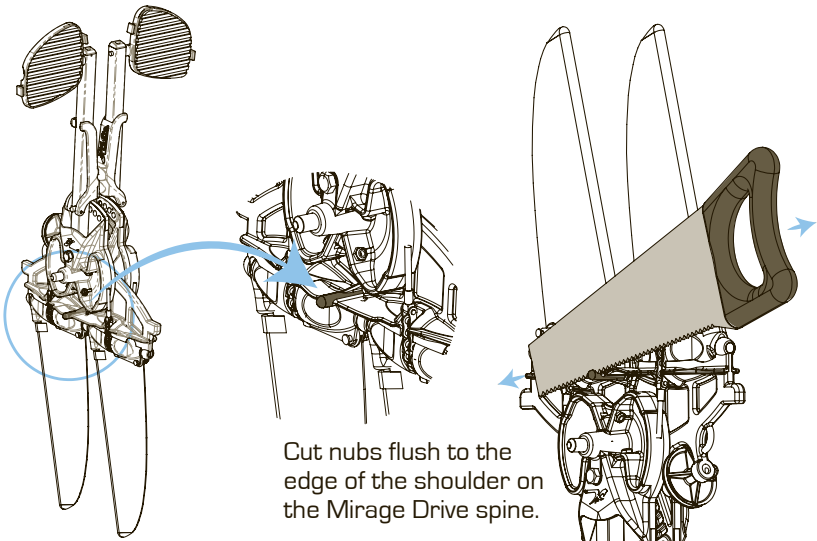

Cut nubs flush to the edge of the shoulder on the Mirage Drive spine.

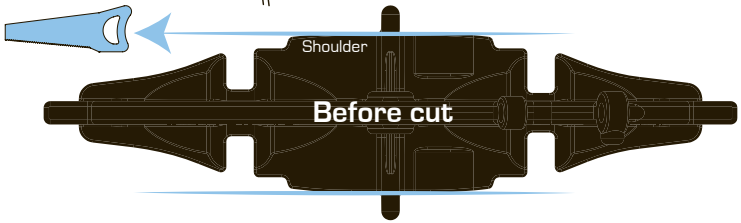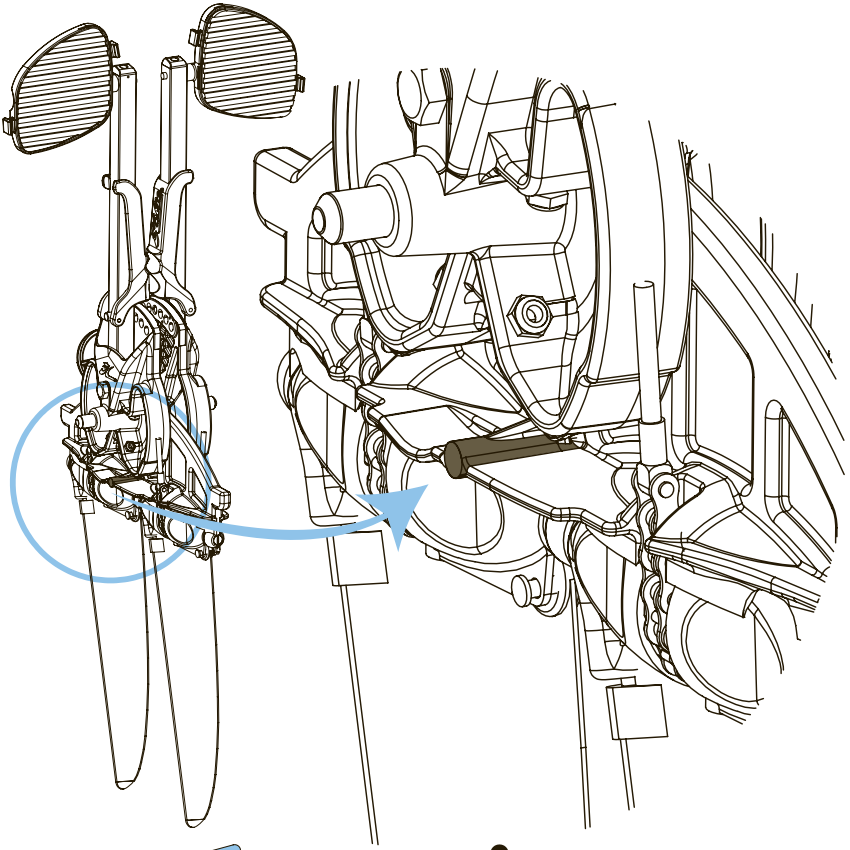

**Top
View**

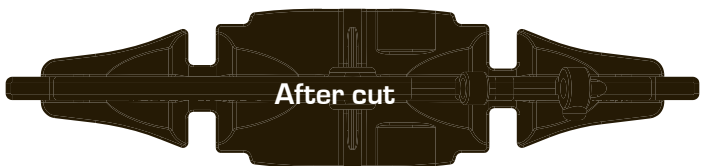



Hobie Cat Company
Oceanside, California, USA
1-800-HOBIE-49
hobiecat.com

Hobie Cat Australasia
Huskisson, New South Wales, Australia
1-800-4-HOBIE
hobiecat.com.au

Hobie Cat Europe
Toulon, France
+33(0)494 08 78 78
hobie-cat.net

Hobie Kayak Europe
Stellendam, The Netherlands
+31(0)187 499 440
hobie-kayak.com

Hobie Cat Brazil
Bahia
Brazil
+55 (73) 9982 2424
hobiecat.com.br