



Welcome to the Speedmaster Team

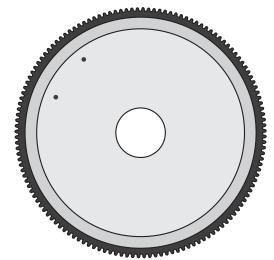

Internally Balanced (Counter Weight Off)

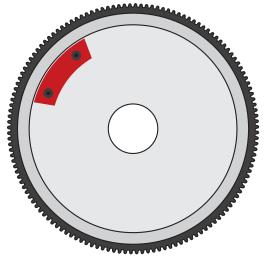

Externally Balanced (Counter Weight On)

CHEVROLET FLYWHEEL For 2PC RMS				
Internally Balanced (Counter Weight Off)		Externally Balanced (Counter Weight On)		
153 Tooth	168 Tooth	153 Tooth	168 Tooth	
SBC 283	SBC 283	BBC 396	SBC 400	
SBC 350	SBC 350	BBC 427	BBC 396	
		BBC 454	BBC 427	
			BBC 454	

CHEVROLET FLYWHEEL For 1PC RMS				
Internally Balanced (Counter Weight Off)		Externally Balanced (Counter Weight On)		
153 Tooth	168 Tooth	153 Tooth	168 Tooth	
Custom	Custom	SBC 350 Late	SBC 350 Late	



Please note: The coutner weight comes pre installed, for engines with Internal balance (counter weight off); the counter weight will need to be removed prior installation.

How to Remove Counter Weight for Internally Balanced Applications.

The counter weight is attached to the flywheel using 2x allen head bolts; by removing these 2 bolts you will be able to remove the counter weight.

Once the counter weight is removed the bolts will not need to be reintalled.

