

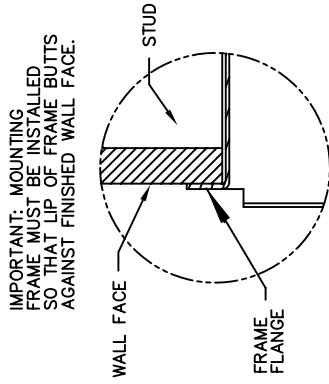


MOUNTING FRAME INSTALLATION:

1. HOLD ROUGH-IN DIMENSIONS $\pm 1/8"$ (3.2mm).
2. THIS FRAME WILL ACCOMMODATE SEVERAL DIFFERENT BOWL MOUNTING HEIGHTS. SEE MODEL H117.8 INSTALLATION DRAWING (SHT. 2 OF 2) RECEIVED WITH THE FOUNTAIN FOR PROPER LOCATIONS OF 5/16"-18 PANEL NUT RETAINERS. WASTE AND SUPPLY HEIGHTS ARE ALSO DETAILED ON MODEL H117.8 INSTALLATION DRAWING (SHT. 1 OF 2).
3. WHEN INSTALLING THIS UNIT, LOCAL, STATE OR FEDERAL CODES SHOULD BE ADHERED TO. FOR DIFFERENT INSTALLATION HEIGHTS OTHER THAN SHOWN, DIMENSIONS MARKED (*) MUST BE ADJUSTED ACCORDINGLY.
4. ALIGN HOLES IN CHILLER SUPPORT TRAY WITH HOLES IN FRAME AND FASTEN IN PLACE WITH #10 SHEET-METAL SCREWS SUPPLIED WITH UNIT.
5. INSERT 5/16"-18 PANEL NUT RETAINERS (SUPPLIED WITH FOUNTAIN) FROM OPPOSITE SIDE OF OPENINGS (SHOWN BY DARKENED HOLES). HOLE COMBINATION SHOWN (INSET) IS FOR REF. ONLY.
6. TO CHANGE FOUNTAIN MTG. SCREW LOCATIONS, FIRST REMOVE SCREWS AND THEN SQUEEZE CLIPS ON NUT RETAINER TO POP OUT (SUPPLIED WITH FOUNTAIN). SNAP INTO NEW POSITIONS AND RE-ASSEMBLE SCREWS.

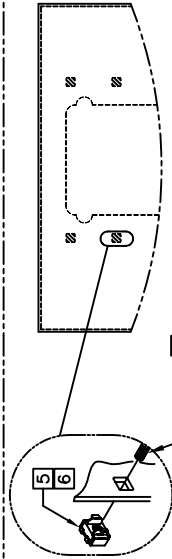


DETAIL A

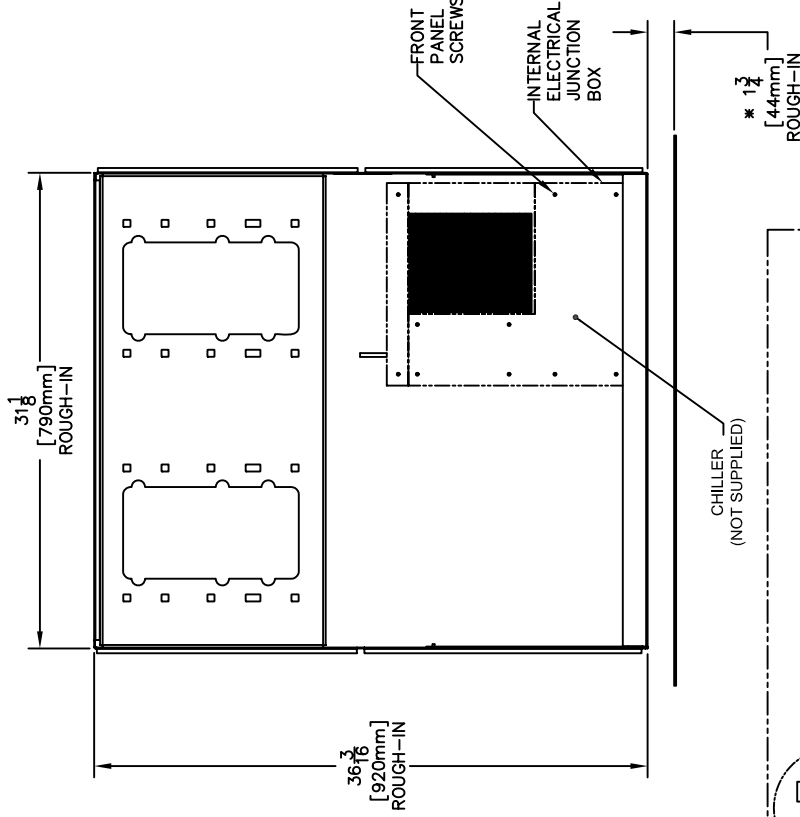

BOWL MOUNTING DETAIL

CHILLER ELECTRICAL INSTALLATION:

1. ENSURE ELECTRICAL POWER IS OFF AND POWER MATCHES VOLTAGE, PHASE AND CYCLE LISTED ON CHILLER LABEL
2. REMOVE FRONT PANEL TO GAIN ACCESS TO INTERNAL JUNCTION BOX.
3. HARDWIRE CHILLER THROUGH ITS SIDE. WIRE IN ACCORDANCE WITH LOCAL, STATE AND FEDERAL CODES.
4. REPLACE FRONT PANEL. DO NOT APPLY POWER UNTIL UNIT WATER SUPPLY IS CONNECTED AND ON.

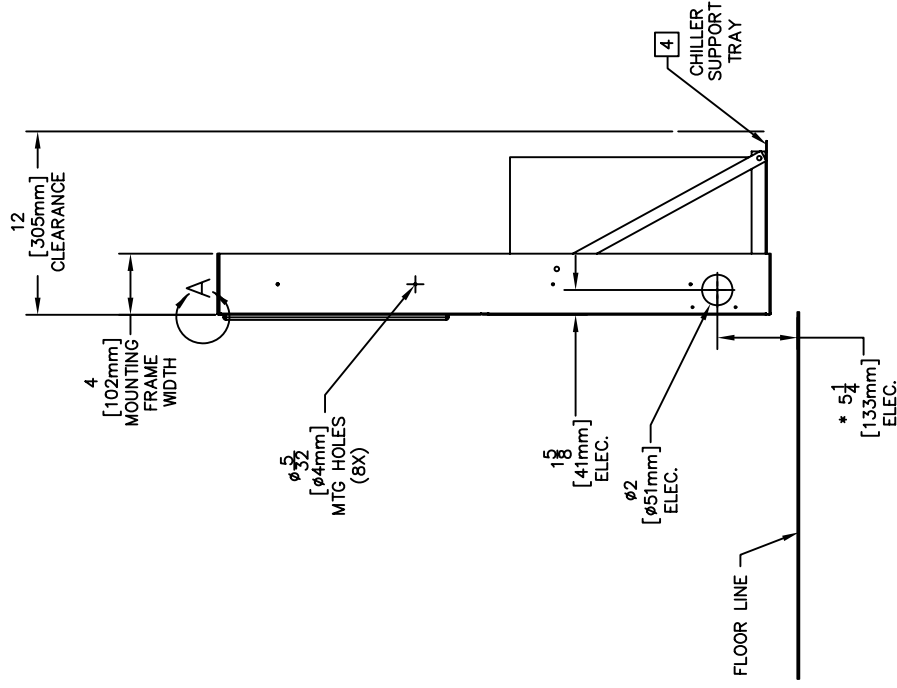

INFO FAX : 1-888-FAX-HAWS (1-888-329-4297)
1455 Kleppe Ln, Sparks NV, 89431
Phone: 775-359-4712 Fax: 775-359-7424
Haws Ag, Bachweg 3 CH-3401 Burgdorf Switzerland
Haws Mtg Pte Ltd 74 Sungai Kadut Loop Singapore 729531
e-mail: Haws@hawsco.com website: www.hawsco.com

CHILLER MODEL	MTGFR 17
CHILLER SERIAL	0002080015
CHILLER NAME	15275A00
CHILLER TYPE	1
CHILLER SIZE	A
CHILLER SHL	1 OF 1