



RGDG

Parts List
20-June-2015



*This parts list is current as of the above revision date.
See <http://www.rheempartslists.net/92-42800-RGDG.pdf> for the current revision.*

80% Gas Furnaces

Table of Contents

Model Explanation	Page 3
-------------------------	--------

Parts Numbers

Panels (1)	Page 4
Panels (2)	Page 5
Panels (3)	Page 6
Electrical Group (1)	Page 7
Electrical Group (2)	Page 8
Electrical Group (3)	Page 9
Blower Group	Page 10
Heat Exchanger-Burner Group	Page 11
Gas Controls - Robertshaw	Page 12
Gas Controls - Honeywell (SP)	Page 13
Gas Controls Honeywell (HSI)	Page 14
Gas Controls - White Rodgers (HSI)	Page 15
Field Test Parts 07 (1)	Page 16
Field Test Parts 07 (2)	Page 17
Orifice Selection Chart	Page 18

Drawings/Photographs

Exploded View	Page 19
Vent Pressure Detector	Page 19
Blower Assembly	Page 20
Heat Exchanger Assembly	Page 21

Notes/Disclaimer	Page 22
------------------------	---------

MODEL NUMBER EXPLANATION

R	G	D	G	-	0	7	E	A	U	E	R
1	2	3	4		5		6	7	8	9	10

1	TRADENAME IDENTIFICATION	7	VARIATIONS A = Standard B = Wide Cabinet
2	G = GAS FURNACE		
3	D = UPFLOW	8	BLOWER DESIGNATION M = 11 X 7 DU R = 11 X 10 DU U = 11 X 6 DU
4	DESIGN SERIES		
5	HEATING CAPACITY (INPUT BTU/HR) 04 = 45,000 09 = 90,000 05 = 50,000 10 = 100,000 06 = 67,500 12 = 125,000 07 = 75,000 15 = 150,000	9	AIRFLOW E = 1100 - 1300 CFM G = 1500 - 1700 CFM J = 1900 - 2100 CFM S = 500 - 1300 CFM
6	IGNITION TYPE E = Electric Ignition (HSI) N = Electric Ignition (HSI) w/NOX 0, 5 or 7 = Standing Pilot M = Standing Pilot w/NOX	10	FUEL CODES A = Canadian - Natural Gas R = U.S. - Natural Gas

SERIAL NUMBER EXPLANATION

C	E	5	D	3	0	7	F	5	1	9	1	0	0	0	0
1		2	3	4	5	6	7	8		9				10	

1	GAS CODE	6	MOTOR HORSEPOWER
2	LIMIT CONTROL	7	PRODUCTION LOCATION F = Fort Smith, AR
3	BLOWER	8	WEEK
4	HEATING ELEMENT	9	YEAR
5	SPECIAL AREA REQUIREMENT	10	PRODUCTION NUMBER

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG- 04 5/M/E/N A U	RGDG 05 0/M A U	RGDG 05 E/N A U	RGDG 06 7 A U	RGDG 06 E/N A U	RGDG 07 5/M A M
PANELS, MISCELLANEOUS PARTS								
1		Jacket	AS-61690-01	AS-61690-01	AS-61690-01	AS-61690-03	AS-61690-03	AS-61690-02
2	1	Top Plate - Canadian Models built w/Jumper Plugs - Before F0793	N/A	AE-61719-01	AE-61719-01	N/A	N/A	N/A
2	1	Top Plate - U.S. and Canadian Models w/o Jumper Plugs - After F0793	AE-61657-01	AE-61657-01	AE-61657-01	AE-61657-02	AE-61657-02	AE-61657-02
3		Blower/Filter Door	AE-61679-01	AE-61679-01	AE-61679-01	AE-61680-01	AE-61680-01	AE-61680-01
4		Burner Door (w/o Plug Button)	AE-61675-01	AE-61675-01	AE-61675-01	AE-61676-01	AE-61676-01	AE-61676-01
		Plug Button - 1-3/16 in opening (2)	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components) - Before F1997	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01
5		Control Mounting Plate - After F1997	AE-61968-01	AE-61968-01	N/A	AE-61968-01	N/A	AE-61968-01
5		Control Mounting Plate - F1997 - F1399	N/A	N/A	AE-61968-01	N/A	AE-61968-01	N/A
5		Control Mounting Plate - After F1399	N/A	N/A	AE-67877-01	N/A	AE-67877-01	N/A
		Jumper Plug - Canadian Models Before F0793	See Electrical Group					
		Silicone Tubing - Pressure Switch	79-21491-83	79-21491-83	79-21491-83	79-21491-83	79-21491-83	79-21491-83
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)	N/A	AE-61507-01	AE-61507-01	N/A	N/A	N/A
14		Integrated Furnace Control Board (IFC)	See Gas Controls					
15		Pressure Switch	See Electrical Group					
16		Door Switch - Push Button	See Electrical Group					
17		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group					
19		Limit - Manual Reset (Burner Compartment)	See Electrical Group					
20		Transformer	See Electrical Group					
22		Induced Draft Blower w/Gasket	See Electrical Group					
28		Gas Valve	See Gas Controls					
		Filter Retainer Rod	45-24095-01	45-24095-01	45-24095-01	45-24095-01	45-24095-01	45-24095-01
		Filter Support Angle	AE-61883-01	AE-61883-01	AE-61883-01	AE-61883-01	AE-61883-01	AE-61883-01
		Filter Rod Support Angle	AE-60520-01	N/A	N/A	AE-60520-01	AE-60520-01	AE-60520-01
13		Filter - Permanent Plastic	54-24094-01	54-24094-01	54-24094-01	54-24094-01	54-24094-01	54-24094-01
For 07 Models manufactured before F0191 - See Field Test Parts 07								

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG 07 5/M A U	RGDG 07 E/N A M	RGDG 07 E/N A U	RGDG 10 0/M A U	RGDG 10 0/M B R	RGDG 10 E/N A M
PANELS, MISCELLANEOUS PARTS								
1		Jacket	AS-61690-03	AS-61690-02	AS-61690-03	AS-61690-03	AS-61690-04	AS-61690-02
2	1	Top Plate - Canadian Models built w/Jumper Plugs - Before F0793	AE-61719-02	AE-61719-02	AE-61719-02	AE-61719-02	AE-61719-03	AE-61719-02
2	1	Top Plate - U.S. and Canadian Models w/o Jumper Plugs - After F0793	AE-61657-02	AE-61657-02	AE-61657-02	AE-61657-02	AE-61657-03	AE-61657-02
3		Blower/Filter Door	AE-61680-01	AE-61680-01	AE-61680-01	AE-61680-01	AE-61681-01	AE-61680-01
4		Burner Door (w/o Plug Button)	AE-61676-01	AE-61676-01	AE-61676-01	AE-61676-01	AE-61677-01	AE-61676-01
		Plug Button - 1-3/16 in opening (2)	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components) - Before F1997	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01
5		Control Mounting Plate - After F1997	AE-61968-01	N/A	N/A	AE-61968-01	AE-61968-01	N/A
5		Control Mounting Plate - F1997 - F1399	N/A	AE-61968-01	AE-61968-01	N/A	N/A	AE-61968-01
5		Control Mounting Plate - After F1399	N/A	AE-67877-01	AE-67877-01	N/A	N/A	AE-67877-01
		Jumper Plug - Canadian Models Before F0793	See Electrical Group					
		Silicone Tubing - Pressure Switch	79-21491-83	79-21491-83	79-21491-83	79-21491-83	79-21491-83	79-21491-83
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)	AE-61507-02	AE-61507-02	AE-61507-02	AE-61507-02	AE-61507-02	AE-61507-02
14		Integrated Furnace Control Board (IFC)	See Gas Controls					
15		Pressure Switch	See Electrical Group					
16		Door Switch - Push Button	See Electrical Group					
17		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group					
19		Limit - Manual Reset (Burner Compartment)	See Electrical Group					
20		Transformer	See Electrical Group					
22		Induced Draft Blower w/Gasket	See Electrical Group					
28		Gas Valve	See Gas Controls					
		Filter Retainer Rod	45-24095-01	45-24095-01	45-24095-01	45-24095-01	45-24095-01	45-24095-01
		Filter Support Angle	AE-61883-01	AE-61883-01	AE-61883-01	N/A	AE-61883-01	AE-61883-01
		Filter Rod Support Angle	AE-60520-01	AE-60520-01	AE-60520-01	N/A	AE-60520-01	AE-60520-01
13		Filter - Permanent Plastic	54-24094-01	54-24094-01	54-24094-01	54-24094-01	54-24094-02	54-24094-01
For 07 Models manufactured before F0191 - See Field Test Parts 07								

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG 10 E/N A U	RGDG 10 E/N B R	RGDG 12 5/M A R	RGDG 12 E/N A R	RGDG 15 0/M A R	RGDG 15 E/N A R
PANELS, MISCELLANEOUS PARTS								
1		Jacket	AS-61690-03	AS-61690-04	AS-61690-05	AS-61690-05	AS-61690-05	AS-61690-05
2	1	Top Plate - Canadian Models built w/Jumper Plugs - Before F0793	AE-61719-02	AE-61719-03	AE-61719-04	AE-61719-04	AE-61719-04	AE-61719-04
2	1	Top Plate - U.S. and Canadian Models w/o Jumper Plugs - After F0793	AE-61657-02	AE-61657-03	AE-61657-04	AE-61657-04	AE-61657-04	AE-61657-04
3		Blower/Filter Door	AE-61680-01	AE-61681-01	AE-61682-01	AE-61682-01	AE-61682-01	AE-61682-01
4		Burner Door (w/o Plug Button)	AE-61676-01	AE-61677-01	AE-61678-01	AE-61678-01	AE-61678-01	AE-61678-01
		Plug Button - 1-3/16 in opening (2)	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components) - Before F1997	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01
5		Control Mounting Plate - After F1997	N/A	N/A	AE-61968-01	N/A	AE-61968-01	N/A
5		Control Mounting Plate - F1997 - F1399	AE-61968-01	AE-61968-01	N/A	AE-61968-01	N/A	AE-61968-01
5		Control Mounting Plate - After F1399	AE-67877-01	AE-67877-01	N/A	AE-67877-01	N/A	AE-67877-01
		Jumper Plug - Canadian Models Before F0793	See Electrical Group					
		Silicone Tubing - Pressure Switch	79-21491-83	79-21491-83	79-21491-83	79-21491-83	79-21491-83	79-21491-83
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)	AE-61507-01	AE-61507-02	AE-61507-02	AE-61507-02	AE-61507-03	AE-61507-03
14		Integrated Furnace Control Board (IFC)	See Gas Controls					
15		Pressure Switch	See Electrical Group					
16		Door Switch - Push Button	See Electrical Group					
17		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group					
19		Limit - Manual Reset (Burner Compartment)	See Electrical Group					
20		Transformer	See Electrical Group					
22		Induced Draft Blower w/Gasket	See Electrical Group					
28		Gas Valve	See Gas Controls					
		Filter Retainer Rod	45-24095-01	45-24095-01	45-24095-01	45-24095-01	45-24095-01	45-24095-01
		Filter Support Angle	N/A	AE-61883-01	AE-61883-01	AE-61883-01	AE-61883-01	AE-61883-01
		Filter Rod Support Angle	N/A	AE-60520-01	AE-60520-01	AE-60520-01	AE-60520-01	AE-60520-01
13		Filter - Permanent Plastic	54-24094-01	54-24094-02	54-24094-03	54-24094-03	54-24094-03	54-24094-03

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG- 04 5/M/E/N A U	RGDG 05 0/M/E/N A U	RGDG 06 7/E/N A U	RGDG 07 5/M/E/N A M
ELECTRIC GROUP						
15	Stk	Pressure Switch - Before F4797	42-24064-03	42-24064-02	42-24064-03	N/A
15	Stk	Pressure Switch - After F4797	42-23648-03	42-23648-03	42-23648-03	N/A
15	Stk	Pressure Switch - Before F4296	N/A	N/A	N/A	42-24064-01
15	Stk	Pressure Switch - After F4296	N/A	N/A	N/A	42-23648-03
16		Door Switch - Push Button	42-22692-01	42-22692-01	42-22692-01	42-22692-01
17	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-22679-01	47-22679-03	47-22679-02	47-22679-01
18	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - HSI Models	N/A	47-21900-21	N/A	47-21900-06
18	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - Standing Pilot Models	N/A	47-21900-05	N/A	N/A
	Stk,2	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)	N/A	47-22862-01	N/A	47-22862-02
19	Stk	Limit - Manual Reset (Burner Compartment)	47-22861-01	47-22861-01	47-22861-01	47-22861-01
		Bracket (Limit - Manual Reset)	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02
20	Stk	Transformer w/Fuse	46-22863-02	46-22863-02	46-22863-02	46-22863-02
		Transformer Fuse - 9/16 in.	46-22863-82	46-22863-82	46-22863-82	46-22863-82
		Transformer Fuse - 1-1/4 in.	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK
21		Capacitor - Blower Motor	See Blower Group			
22	Stk,2	Induced Draft Blower w/Gasket - Before F0499	70-24071-01	70-22838-02	70-24071-02	70-22838-02
22	Stk,2	Induced Draft Blower w/Gasket - After F0499	70-24071-04	70-22838-02	70-24071-05	70-22838-02
		Jumper Plug - Canadian Models Before F0793	N/A	AS-60857-02	N/A	AS-60857-02
		Wiring Harness - 9 pin from Blower Inducer Control to 4 pin and 9 pin (Standing Pilot Ignition)	AS-61997-01	AS-61997-01	AS-61997-01	AS-61997-01
		Wiring Harness - 4 pin to 2 pin (Standing Pilot Ignition)	AS-61998-08	N/A	AS-61998-08	N/A
		Wiring Harness - 4 pin to 2 flag terminals (Standing Pilot Ignition)	N/A	AS-61705-01	N/A	AS-61705-01
		Wiring Harness - 9 pin to 2 pin and 4 terminals (Standing Pilot Ignition)	N/A	AS-61704-05	N/A	N/A
		Wiring Harness - 9 pin to 5 terminals (Standing Pilot Ignition)	AS-61998-06	AS-61998-06	AS-61998-06	AS-61998-06
		Wiring Harness - 9 pin from IFC to 9 pin (HSI) - Before F3094	AS-61702-01	AS-61702-01	AS-61702-01	AS-61702-01
		Wiring Harness - 9 pin to 7 terminals (HSI) - Before F3094	AS-61706-01	AS-61706-01	AS-61706-01	AS-61706-01
		Wiring Harness - 6 pin from IFC to 4 pin (HSI) - Before F3094	AS-61703-01	AS-61703-01	AS-61703-01	AS-61703-01
		Wiring Harness - 4 pin to two 2 pin connectors and 1 terminal (HSI) - Before F3094	AS-61707-06	N/A	AS-61707-06	N/A
		Wiring Harness - 4 pin to 2 pin/2 flag terminals/1 straight terminal (HSI) - Before F3094	N/A	AS-61707-01	N/A	AS-61707-01
		Wiring Harness - 9 pin from IFC to 9 pin (HSI) - After F3094	AS-61702-07	AS-61702-07	AS-61702-07	AS-61702-07
		Wiring Harness - 9 pin to 8 terminals (HSI) - After F3094	AS-61706-09	AS-61706-09	AS-61706-09	AS-61706-09
		Wiring Harness - 6 pin from IFC to 4 pin (HSI) - After F3094	AS-61703-01	AS-61703-01	AS-61703-01	AS-61703-01
		Wiring Harness - 4 pin to two 2 pin connectors (HSI) - After F3094	AS-61707-08	N/A	AS-61707-08	N/A
		Wiring Harness - 4 pin to 2 pin and 2 flag terminals (HSI) - F3094	N/A	AS-61707-09	N/A	AS-61707-09
For 07 Models manufactured before F0191 - See Field Test Parts 07						

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG 07 5/M A U	RGDG 07 E/N A U	RGDG 10 0/M A U	RGDG 10 0/M B R	RGDG 10 E/N A M
ELECTRIC GROUP							
15	Stk	Pressure Switch - Before F4296	42-24064-01	42-24064-01	42-24064-01	42-24064-01	42-24064-01
15	Stk	Pressure Switch - After F4296	42-23648-03	42-23648-03	42-23648-03	42-23648-03	42-23648-03
16		Door Switch - Push Button	42-22692-01	42-22692-01	42-22692-01	42-22692-01	42-22692-01
17	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-22679-02	47-22679-02	47-22679-02	47-22679-02	47-22679-02
18	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - HSI Models	N/A	47-21900-06	N/A	N/A	47-21900-21
18	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - Standing Pilot Models	47-21900-06	N/A	47-21900-05	47-21900-05	N/A
	Stk,2	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)	47-22862-02	47-22862-02	47-22862-03	47-22862-03	N/A
19	Stk	Limit - Manual Reset (Burner Compartment)	47-22861-01	47-22861-01	47-22861-01	47-22861-01	47-22861-01
		Bracket (Limit - Manual Reset)	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02
20	Stk	Transformer w/Fuse	46-22863-02	46-22863-02	46-22863-02	46-22863-02	46-22863-02
		Transformer Fuse - 9/16 in.	46-22863-82	46-22863-82	46-22863-82	46-22863-82	46-22863-82
		Transformer Fuse - 1-1/4 in.	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK
21		Capacitor - Blower Motor	See Blower Group				
22	Stk,2	Induced Draft Blower w/Gasket	70-22838-02	70-22838-02	70-22838-02	70-22838-02	70-22838-02
		Jumper Plug - Canadian Models Before F0793	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02
		Wiring Harness - 9 pin from Blower Inducer Control to 4 pin and 9 pin (Standing Pilot Ignition)	AS-61997-01	N/A	AS-61997-01	AS-61997-01	N/A
		Wiring Harness - 4 pin to 2 flag terminals (Standing Pilot Ignition)	AS-61705-01	N/A	AS-61705-01	AS-61705-01	N/A
		Wiring Harness - 9 pin to 2 pin and 4 terminals (Standing Pilot Ignition)	AS-61704-05	N/A	AS-61704-05	AS-61704-05	N/A
		Wiring Harness - 9 pin to 5 terminals (Standing Pilot Ignition)	AS-61998-06	N/A	AS-61998-06	AS-61998-06	N/A
		Wiring Harness - 9 pin from IFC to 9 pin (HSI) - Before F3094	N/A	AS-61702-01	N/A	N/A	AS-61702-01
		Wiring Harness - 9 pin to 7 terminals (HSI) - Before F3094	N/A	AS-61706-01	N/A	N/A	AS-61706-01
		Wiring Harness - 6 pin from IFC to 4 pin (HSI) - Before F3094	N/A	AS-61703-01	N/A	N/A	AS-61703-01
		Wiring Harness - 4 pin to 2 pin/2 flag terminals/1 straight terminal (HSI) - Before F3094	N/A	AS-61707-01	N/A	N/A	AS-61707-01
		Wiring Harness - 9 pin from IFC to 9 pin (HSI) - After F3094	N/A	AS-61702-07	N/A	N/A	AS-61702-07
		Wiring Harness - 9 pin to 8 terminals (HSI) - After F3094	N/A	AS-61706-09	N/A	N/A	AS-61706-09
		Wiring Harness - 6 pin from IFC to 4 pin (HSI) - After F3094	N/A	AS-61703-01			AS-61703-01
		Wiring Harness - 4 pin to 2 pin and 2 flag terminals (HSI) - After F3094	N/A	AS-61707-09	N/A	N/A	AS-61707-09
For 07 Models manufactured before F0191 - See Field Test Parts 07							

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG 10 E/N A U	RGDG 10 E/N B R	RGDG 12 5/M/E/N A R	RGDG 15 O/M/E/N A R
ELECTRICAL GROUP						
15	Stk	Pressure Switch - Before F4296	42-24064-01	42-24064-01	42-24064-02	42-24064-02
15	Stk	Pressure Switch - After F4296	42-23648-03	42-23648-03	42-23648-02	42-23648-02
16		Door Switch - Push Button	42-22692-01	42-22692-01	42-22692-01	42-22692-01
17	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-22679-02	47-22679-02	47-22679-03	47-22679-03
18	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - HSI Models	47-21900-21	47-21900-21	47-21900-05	47-21900-01
18	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - Standing Pilot Models	N/A	N/A	47-21900-01	47-21900-01
	Stk,2	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)	47-22862-03	47-22862-03	47-22862-04	47-22862-03
19	Stk	Limit - Manual Reset (Burner Compartment)	47-22861-01	47-22861-01	47-22861-01	47-22861-01
		Bracket (Limit - Manual Reset)	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02
20	Stk	Transformer w/Fuse	46-22863-02	46-22863-02	46-22863-02	46-22863-02
		Transformer Fuse - 9/16 in.	46-22863-82	46-22863-82	46-22863-82	46-22863-82
		Transformer Fuse - 1-1/4 in.	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK	44-MDL2-5PK
21		Capacitor - Blower Motor	See Blower Group			
22	Stk,2	Induced Draft Blower w/Gasket	70-22838-02	70-22838-02	70-22838-02	70-22838-02
		Jumper Plug - Canadian Models Before F0793	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02
		Wiring Harness - 9 pin from Blower Inducer Control to 4 pin and 9 pin (Standing Pilot Ignition)	AS-61997-01	AS-61997-01	AS-61997-01	AS-61997-01
		Wiring Harness - 4 pin to 2 flag terminals (Standing Pilot Ignition)	N/A	N/A	AS-61705-01	AS-61705-01
		Wiring Harness - 9 pin to 2 pin and 4 terminals (Standing Pilot Ignition)	N/A	N/A	AS-61704-05	AS-61704-05
		Wiring Harness - 9 pin to 5 terminals (Standing Pilot Ignition)	N/A	N/A	AS-61998-06	AS-61998-06
		Wiring Harness - 9 pin from IFC to 9 pin (HSI) - Before F3094	AS-61702-01	AS-61702-01	AS-61702-01	AS-61702-01
		Wiring Harness - 9 pin to 7 terminals (HSI) - Before F3094	AS-61706-01	AS-61706-01	AS-61706-01	AS-61706-01
		Wiring Harness - 6 pin from IFC to 4 pin (HSI) - Before F3094	AS-61703-01	AS-61703-01	AS-61703-01	AS-61703-01
		Wiring Harness - 4 pin to 2 pin/2 flag terminals/1 straight terminal (HSI) - Before F3094	AS-61707-01	AS-61707-01	AS-61707-01	AS-61707-01
		Wiring Harness - 9 pin from IFC to 9 pin (HSI) - After F3094	AS-61702-07	AS-61702-07	AS-61702-07	AS-61702-07
		Wiring Harness - 9 pin to 8 terminals (HSI) - After F3094	AS-61706-09	AS-61706-09	AS-61706-09	AS-61706-09
		Wiring Harness - 6 pin from IFC to 4 pin (HSI) - After F3094	AS-61703-01	AS-61703-01	AS-61703-01	AS-61703-01
		Wiring Harness - 4 pin to 2 pin and 2 flag terminals (HSI) - After F3094	AS-61707-09	AS-61707-09	AS-61707-09	AS-61707-09

No.	Notes	MODEL	RGDG	RGDG	RGDG	RGDG	RGDG	RGDG
		HEATING CAPACITY	04	05	06	07	07	10
		IGNITION TYPE	5/E/M/N	0/E/M/N	7/E/N	5/M/E/N	5.M/E/N	0/M/E/N
		VARIATION	A	A	A	A	A	A
		BLOWER DESIGNATION	U	U	U	U	M	U
		FUEL CODE	R/A	R/A	R/A	R/A	R/A	R/A
BLOWER GROUP								
23	Stk	Blower Assembly (Includes items 21, 24-27)	AS-61697-27	AS-61697-07	AS-61697-24	AS-61697-24	AS-61697-53	AS-61697-24
21	Stk	Capacitor - Blower Motor	43-21298-45	43-21298-42	43-21298-42	43-21298-42	43-21298-45	43-21298-42
24		Housing	AS-61674-09	AS-61674-01	AS-61674-01	AS-61674-01	AS-61674-02	AS-61674-01
25		Motor Mounting Legs (4)	AE-61698-02	AE-61698-02	AE-61698-02	AE-61698-02	AE-61698-02	AE-61698-02
		Motor Mounting Leg Screws (8)	63-24368-01	63-24368-01	63-24368-01	63-24368-01	63-24368-01	63-24368-01
26	Stk	Blower Motor	51-24070-01	51-22873-01	51-24070-02	51-24070-02	51-25023-01	51-24070-02
27	Stk	Blower Wheel	70-22683-01	70-22683-01	70-22683-01	70-22683-01	70-22688-01	70-22683-01
		Capacitor Strap - Before F0792	N/A	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01
For 07 Models manufactured before F0191 - See Field Test Parts 07								

No.	Notes	MODEL	RGDG	RGDG	RGDG	RGDG		
		HEATING CAPACITY	10	10	12	15		
		IGNITION TYPE	E/N	0/M/E/N	5/M/E/N	0/M/E/N		
		VARIATION	A	B	A	A		
		BLOWER DESIGNATION	M	R	R	R		
		FUEL CODE	R/A	R/A	R/A	R/A		
BLOWER GROUP								
23	Stk	Blower Assembly (Includes items 21, 24-27)	AS-61697-29	AS-61697-30	AS-61697-30	AS-61697-30		
21	Stk	Capacitor - Blower Motor	43-21298-42	43-21298-45	43-21298-45	43-21298-45		
24		Housing	AS-61674-02	AS-61674-03	AS-61674-03	AS-61674-03		
25		Motor Mounting Legs (4)	AE-61698-02	AE-61698-02	AE-61698-02	AE-61698-02		
		Motor Mounting Leg Screws (8)	63-24368-01	63-24368-01	63-24368-01	63-24368-01		
26	Stk	Blower Motor	51-24070-02	51-25023-01	51-25023-01	51-25023-01		
27	Stk	Blower Wheel	70-22688-01	70-20602-01	70-20602-01	70-20602-01		
		Capacitor Strap - Before F0792	N/A	AE-50892-01	AE-50892-01	AE-50892-01		

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG- 04 5/M/E/N A U	RGDG 05 0/M/E/N A U	RGDG 06 7/E/N A U	RGDG 07 5/M/E/N A M	RGDG 07 5/M/E/N A U
HEAT EXCHANGER, BURNER / MANIFOLD							
6	Stk	Heat Exchanger	AS-61579-01	AS-61579-01	AS-61579-08	AS-61579-02	AS-61579-02
7	Stk	Burner Tube w/Shield	75-22840-02 (2)	75-22840-02 (2)	75-22840-02 (3)	75-22840-02 (3)	75-22840-02 (3)
8		NOX Burner Insert	AS-61714-01 (2)	AS-61714-01 (2)	AS-61714-01 (3)	AS-61714-01 (3)	AS-61714-01 (3)
9		NOX Burner Retainer Rod	AE-61715-01	AE-61715-01	AE-61715-02	AE-61715-02	AE-61715-02
		Burner Support (Holds the Burner between the Burner Support Brackets)	AE-61577-01	AE-61577-01	AE-61577-02	AE-61577-02	AE-61577-02
10		Burner Support Bracket (2)	AE-61588-01 (2)	AE-61588-01 (2)	AE-61588-01 (2)	AE-61588-01 (2)	AE-61588-01 (2)
11	Stk	Manifold (w/o Orifices)	81-23492-01	81-23492-01	81-23492-02	81-23492-02	81-23492-02
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(2)	(2)	(3)	(3)	(3)
For 07 Models manufactured before F0191 - See Field Test Parts 07							

No.	Notes	MODEL HEATING CAPACITY IGNITION TYPE VARIATION BLOWER DESIGNATION	RGDG 10 E/N A M	RGDG 10 0/M/E/N A U	RGDG 10 0/M/E/N B R	RGDG 12 5/M/E/N A R	RGDG 15 0/M/E/N A R
HEAT EXCHANGER, BURNER / MANIFOLD							
6	Stk	Heat Exchanger Assembly	AS-61579-07	AS-61579-07	AS-61579-04	AS-61579-05	AS-61579-06
7	Stk	Burner Tube w/Shield	75-22840-02 (4)	75-22840-02 (4)	75-22840-02 (4)	75-22840-02 (5)	75-22840-02 (6)
8		NOX Burner Insert	AS-61714-01 (4)	AS-61714-01 (4)	AS-61714-01 (4)	AS-61714-01 (5)	AS-61714-01 (6)
9		NOX Burner Retainer Rod	AE-61715-03	AE-61715-03	AE-61715-04	AE-61715-05	AE-61715-06
		Burner Support (Holds the Burner between the Burner Support Brackets)	AE-61577-03	AE-61577-03	AE-61577-03	AE-61577-04	AE-61577-05
10		Burner Support Bracket (2)	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01
11	Stk	Manifold (w/o Orifices)	81-23492-03	81-23492-03	81-23492-03	81-23492-04	81-23492-05
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(4)	(4)	(4)	(5)	(6)

No.	Notes	MODEL GAS CODE (TYPE)	RGDG BW (SP)	RGDG BX (SP)	RGDG BY (SP)	RGDG BZ (SP)
GAS CONTROLS - ROBERTSHAW						
28	Stk	Gas Valve - Natural Gas	60-22525-10	60-22525-10	60-22525-10	60-22525-10
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3
14	Stk,6	Blower/Inducer Control Board	47-22827-01	47-22830-01	47-22693-01	47-22828-01
30		Exhaust Hood Assembly	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01
Verify pilot vendor before ordering parts						
	Stk, 4	Pilot Assembly (Honeywell) - See Note 4 (On or before approximate Date Code F3792)	62-22834-01 See Note 4	62-22834-01 See Note 4	62-22834-01 See Note 4	62-22834-01 See Note 4
33	Stk	Pilot Assembly (Robertshaw) (NG - Natural Gas) (After approximate Date Code F3792)	62-22864-02	62-22864-02	62-22864-02	62-22864-02
	Stk	Pilot Orifice - Natural Gas	62-22832-02	62-22832-02	62-22832-02	62-22832-02
	Stk,5	Pilot Orifice Kit - LP	62-22834-83	62-22834-83	62-22834-83	62-22834-83
31	Stk	Thermocouple (Honeywell)	62-22348-02	62-22348-02	62-22348-02	62-22348-02
31	Stk	Thermocouple (Robertshaw)	62-19635-02	62-19635-02	62-19635-02	62-19635-02
		Pilot Tubing (Robertshaw) - Sizes 045,04M,050,05M,067,075,07M,(100 - Before F4591)	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60
		Pilot Tubing (Robertshaw) - Sizes 100,10M	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62
		Pilot Tubing (Robertshaw) - Sizes 125,12M	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64
		Pilot Tubing (Robertshaw) - Sizes 150,15M	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66
		Pilot Tubing (Honeywell) - Sizes 045,04M,050,05M,067,075,07M,(100 - Before F4591)	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61
		Pilot Tubing (Honeywell) - Sizes 100,10M - (F4591 - F0894)	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63
		Pilot Tubing (Honeywell) - Sizes 100,10M - (After F0894)	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65
		Pilot Tubing (Honeywell) - Sizes 125,12M	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65
		Pilot Tubing (Honeywell) - Sizes 150,15M	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67
32		Pilot Bracket	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01
		Pilot Shield	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01
		LP Conversion Kit:				
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04
For 07 Models manufactured before F0191 - See Field Test Parts 07						

No.	Notes	MODEL GAS CODE (TYPE)	RGDG BT (HSI)	RGDG CA (HSI)		
GAS CONTROLS - ROBERTSHAW						
28	Stk	Gas Valve - Natural Gas	60-22525-11	60-22525-11		
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3		
14	Stk	Integrated Furnace Control Board (IFC)	62-22737-07	62-22694-01		
	Stk	Flame Sensor	62-23543-01	62-23543-01		
29	Stk	Ignitor	62-22868-02	62-22868-02		
		Ignitor Bracket	AE-61581-01	AE-61581-01		
		Ignitor Shield	AE-61627-01	AE-61627-01		
		LP Conversion Kit:				
	Stk	U.S. Models	FP-15	FP-15		
	Stk	Canadian Models	FP-04	FP-04		
For 07 Models manufactured before F0191 - See Field Test Parts 07						

No.	Notes	MODEL GAS CODE (TYPE)	RGDG BA (SP)	RGDG BB (SP)	RGDG BL (SP)	RGDG BG (SP)	RGDG CB (SP)	RGDG CC (SP)
GAS CONTROLS - HONEYWELL								
28	Stk	Gas Valve - Natural Gas	60-22174-02	60-22174-02	60-22174-02	60-22174-02	60-22174-02	60-22174-02
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3
14	Stk,6	Blower/Inducer Control Board	47-22827-01	47-22830-01	47-22828-01	47-22693-01	47-22827-03	47-22828-02
30		Exhaust Hood Assembly	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01
Verify pilot vendor before ordering parts								
	Stk, 4	Pilot Assembly (Honeywell) - See Note 4 (On or before approximate Date Code F3792)	62-22834-01 See Note 4	62-22834-01 See Note 4	62-22834-01 See Note 4	62-22834-01 See Note 4	62-22834-01 See Note 4	62-22834-01 See Note 4
33	Stk	Pilot Assembly (Robertshaw) (NG - Natural Gas) (After approximate Date Code F3792)	62-22864-02	62-22864-02	62-22864-02	62-22864-02	62-22864-02	62-22864-02
	Stk	Pilot Orifice - Natural Gas	62-22832-02	62-22832-02	62-22832-02	62-22832-02	62-22832-02	62-22832-02
	Stk,5	Pilot Orifice Kit - LP	62-22834-83	62-22834-83	62-22834-83	62-22834-83	62-22834-83	62-22834-83
31	Stk	Thermocouple (Honeywell)	62-22348-02	62-22348-02	62-22348-02	62-22348-02	62-22348-02	62-22348-02
31	Stk	Thermocouple (Robertshaw)	62-19635-02	62-19635-02	62-19635-02	62-19635-02	62-19635-02	62-19635-02
		Pilot Tubing (Robertshaw) - Sizes 045,04M,050,05M,067,075,07M,100 (Before F4591)	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60
		Pilot Tubing (Robertshaw) - Sizes 100,10M	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62
		Pilot Tubing (Robertshaw) - Sizes 125,12M	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64
		Pilot Tubing (Robertshaw) - Sizes 150,15M	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66
		Pilot Tubing (Honeywell) - Sizes 045,04M,050,05M,067,075,07M,100 (Before F4591)	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61
		Pilot Tubing (Honeywell) - Sizes 100,10M - (F4591 - F0894)	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63
		Pilot Tubing (Honeywell) - Sizes 100,10M - (After F0894)	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65
		Pilot Tubing (Honeywell) - Sizes 125,12M	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65
		Pilot Tubing (Honeywell) - Sizes 150,15M	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67
32		Pilot Bracket	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01
		Pilot Shield	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01
		LP Conversion Kit:						
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04	FP-04	FP-04

No.	Notes	MODEL GAS CODE (TYPE)	RGDG BR (HSI)	RGDG CE (HSI)	RGDG CV (HSI)	RGDG CW (HSI)	RGDG CX (HSI)	RGDG CY (HSI)
GAS CONTROLS - HONEYWELL								
28	Stk	Gas Valve - Natural Gas	60-22866-01	60-22866-01	60-22866-01	60-22866-01	60-22866-01	60-22866-01
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3
14	Stk	Integrated Furnace Control Board (IFC)	62-22737-06	62-22694-02	62-22694-03	62-22737-08	62-22737-10	62-22694-11
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01
29	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:						
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04	FP-04	FP-04

No.	Notes	MODEL GAS CODE (TYPE)	RGDG BS (HSI)	RGDG CD (HSI)	RGDG CM (HSI)	RGDG CS (HSI)	RGDG CT (HSI)	RGDG CU (HSI)
GAS CONTROLS - HONEYWELL								
28	Stk	Gas Valve - Natural Gas	60-22866-01	60-22866-01	60-22866-01	60-22866-01	60-22866-01	60-22866-01
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3
14	Stk	Integrated Furnace Control Board (IFC)	62-22694-01	62-22737-07	62-22694-03	62-22737-08	62-22737-10	62-22694-11
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01
29	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:						
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04	FP-04	FP-04

No.	Notes	MODEL GAS CODE (TYPE)	RGDG DC (HSI)	RGDG DF (HSI)				
GAS CONTROLS - HONEYWELL								
28	Stk	Gas Valve - Natural Gas	60-22866-01	60-22866-01				
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3				
14	Stk	Integrated Furnace Control Board (IFC)	62-24044-01	62-24084-02				
	Stk	Flame Sensor	62-23543-01	62-23543-01				
29	Stk	Ignitor	62-22868-02	62-22868-02				
		Ignitor Bracket	AE-61581-01	AE-61581-01				
		Ignitor Shield	AE-61627-01	AE-61627-01				
		LP Conversion Kit:						
	Stk	U.S. Models	FP-15	FP-15				
	Stk	Canadian Models	FP-04	FP-04				

No.	Notes	MODEL GAS CODE (TYPE)	RGDG DA (HSI)	RGDG DB (HSI)	RGDG DG (HSI)	RGDG DH (HSI)
GAS CONTROLS - WHITE RODGERS						
28	Stk	Gas Valve - Natural Gas	60-23490-01	60-23490-01	60-23490-01	60-23490-01
28	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3
14	Stk	Integrated Furnace Control Board (IFC)	62-22737-08	62-22694-11	62-24084-02	62-24044-01
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01
29	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:				
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION AIRFLOW FUEL CODE	RGDG 07E A U E R	RGDG 075 A U E R		
FIELD TEST - DATE CODE BEFORE F0191						
PANELS, SHEET METAL, MISCELLANEOUS						
	10	Jacket	AS-61618-05	AS-61618-05		
		Top Plate	AE-61657-02	AE-61657-02		
		Blower Door	AE-61586-02	AE-61586-02		
		Burner Door	AE-61587-02	AE-61587-02		
		Heat Exchanger Assembly w/Insulation	AS-61579-02	AS-61579-02		
		Burner (3)	75-22840-01	75-22840-01		
	11	Burner Support-Holds the Burners Between the Burner Support Brackets	AE-61577-02	AE-61577-02		
		Burner Support Bracket (2)	AE-61588-01	AE-61588-01		
		Manifold (w/o Orifices) - "T" STYLE	81-22842-02	81-22842-02		
		Burner Orifice - Natural Gas (3)	62-21551-42	62-21551-42		
		Silicone Rubber Tubing (Pressure Switch)	68-21812-02	68-21812-02		
		Filter Retainer Rod	45-22867-01	45-22867-01		
		Filter Retainer Rod	45-22867-01	45-22867-01		
		Filter - Permanent	54-22697-01	54-22697-01		

No.	Notes	MODEL GAS CODE (TYPE)	RGDG AU (HSI)	RGDG BK (HSI)		
FIELD TEST - DATE CODE BEFORE F0191						
GAS CONTROLS - ROBERTSHAW (HSI)						
		Gas Valve - Natural Gas	60-22525-04	60-22525-04		
	7	Gas Valve - LP	See Note 7	See Note 7		
		Integrated Furnace Control Board (IFC)	62-22737-02	62-22694-01		
		Ignitor - Norton	62-22441-01	62-22441-01		
	7	Spring Conversion Assembly	60-18759-06	60-18759-06		
		LP Conversion Kit - U.S. Models	EP-65R	EP-65R		

No.	Notes	MODEL GAS CODE (TYPE)	RGDG BD (SP)	RGDG BE (SP)	RGDG BH (SP)	RGDG BM (SP)
FIELD TEST - DATE CODE BEFORE F0191						
GAS CONTROLS - ROBERTSHAW (STANDING PILOT)						
		Gas Valve - Natural Gas	60-22525-01	60-22525-01	60-22525-01	60-22525-01
	7	Gas Valve - LP	See Note 7	See Note 7	See Note 7	See Note 7
		Blower/Inducer Control Board	47-22827-01	47-22830-01	47-22693-01	47-22828-01
		Pilot Assembly (Honeywell)	62-22834-01	62-22834-01	62-22834-01	62-22834-01
		Pilot Orifice (Honeywell) - Natural	62-22834-02	62-22834-02	62-22834-02	62-22834-02
		Pilot Orifice - (Honeywell) - LP	62-22834-03	62-22834-03	62-22834-03	62-22834-03
		Thermocouple Kit (Robertshaw)	62-22348-01	62-22348-01	62-22348-01	62-22348-01
	7	Spring Conversion Assembly	60-18759-06	60-18759-06	60-18759-06	60-18759-06
		LP Conversion Kit - U.S. Models	EP-64R	EP-64R	EP-64R	EP-64R

No.	Notes	MODEL	RGDG	RGDG
		HEATING CAPACITY	07E	075
		VARIATION	A	A
		BLOWER DESIGNATION	U	U
		AIRFLOW	E	E
		FUEL CODE	R	R
FIELD TEST - DATE CODE BEFORE F0191				
ELECTRIC GROUP				
		Pressure Switch	42-22682-01	42-22682-01
		Door Switch - Push Button	42-22692-01	42-22692-01
		Limit - Main Limit (Heat Exchanger Panel)	47-22679-02	47-22679-02
		Vent Safety Switch - Manual Reset Limit on Induced Draft Motor	47-22383-40	47-22383-40
		Limit - Manual Reset (Burner Compartment)	47-22383-05	47-22383-05
		Transformer	46-22691-01	46-22691-01
		Induced Draft Blower Motor w/Gasket	70-22838-01	70-22838-01

No.	Notes	MODEL	RGDG	RGDG
		HEATING CAPACITY	07E	075
		VARIATION	A	A
		BLOWER DESIGNATION	U	U
		AIRFLOW	E	E
		FUEL CODE	R	R
FIELD TEST - DATE CODE BEFORE F0191				
BLOWER GROUP				
		Complete Blower Assembly	AS-61604-01	AS-61604-01
		Blower Assembly (Wheel, Motor, Housing)	AS-61697-01	AS-61697-01
		Control Box	68-22857-01	68-22857-01
		Control Box Cover	AE-61699-01	AE-61699-01
		Motor Mounting Legs (4)	AE-61612-01	AE-61612-01
		Screws (8)	63-22338-03	63-22338-03
		Blower Motor	51-22686-01	51-22686-01
		Blower Wheel	70-22683-01	70-22683-01
		Capacitor - Blower Motor	43-20847-11	43-20847-11
		Capacitor Strap	AE-50892-01	AE-50892-01

80% GAS FURNACE - ORIFICE SELECTION CHART - NATURAL GAS

CAUTION: Selection of the correct Natural Gas Orifice requires the following information for the specific installation:

1) Altitude in of the installation (ft.).

2) Average energy content of the Natural Gas fuel from the local supplier (BTU/cu. ft.).

For detailed information and instructions for Orifice selection, see the Gas Furnace LP Conversion Kit Index 92-21519-59 and the latest edition of the National Fuel Gas Code Handbook, or the National Standard of Canada, Natural Gas and Propane Installation Code, CAN B149.1.

CAUTION: This information is provided for replacement purposes only. Conversion for operation at High Altitude must be done using the kit specified on the product specification sheet for the unit.

NOTE: This Orifice sizing chart is based on 25,000 BTU/HR per burner.

NOTE: Factory installed orifices are calculated and sized based on a Natural Gas heating value of 1075 BTU/cu. ft. and an elevation of 0 - 3000 ft.

Energy Value (BTU/cu. ft.)	Elevation (ft.)							
	0 - 1999	2000 - 2999	3000 - 3999	4000 - 4999	5000 - 5999	6000 - 6999	7000 - 7999	8000 - 8999
850	62-22175-38	62-22175-39	62-22175-40	62-22175-41	62-22175-41	62-22175-42	62-22175-42	62-22175-43
900	62-22175-40	62-22175-41	62-22175-42	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-44
975	62-22175-41	62-22175-42	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-44	62-22175-44
1075	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-43	62-22175-44	62-22175-44	62-22175-45
1170	62-22175-43	62-22175-44	62-22175-44	62-22175-44	62-22175-45	62-22175-45	62-22175-46	62-22175-47

80% GAS FURNACE - ORIFICE SELECTION CHART - LP

CAUTION: Selection of the correct LP Orifice requires the altitude of the specific installation (ft.).


For detailed information and instructions for Orifice selection, see the Gas Furnace LP Conversion Kit Index 92-21519-59 and the latest edition of the National Fuel Gas Code Handbook (NFG), or the National Standard of Canada, Natural Gas and Propane Installation Code, CAN B149.1.

CAUTION: This information is provided for replacement purposes only. Conversion to LP or for operation at High Altitude should be done using the kit(s) specified on the product specification sheet for the unit.


NOTE: This Orifice sizing chart is based on 25,000 BTU/HR per burner. Also, the chart is developed using the specified pressure setting of 10 in. water column instead of the 11.0 in water column used by the NFG and CANB149.1.

NOTE: Orifices supplied in the LP Conversion Kit are calculated and sized based on an altitude of 0 - 4000 ft.


Elevation (ft.)	Orifice							
0 - 2000	62-22175-54							
2001 - 3000	62-22175-54							
3001 - 4000	62-22175-54							
4001 - 5000	62-22175-54							
5001 - 6000	62-22175-54							
6001 - 7000	62-22175-54							
7001 - 8000	62-22175-55							
8001 - 9000	62-22175-55							
9001 - 10000	62-22175-55							

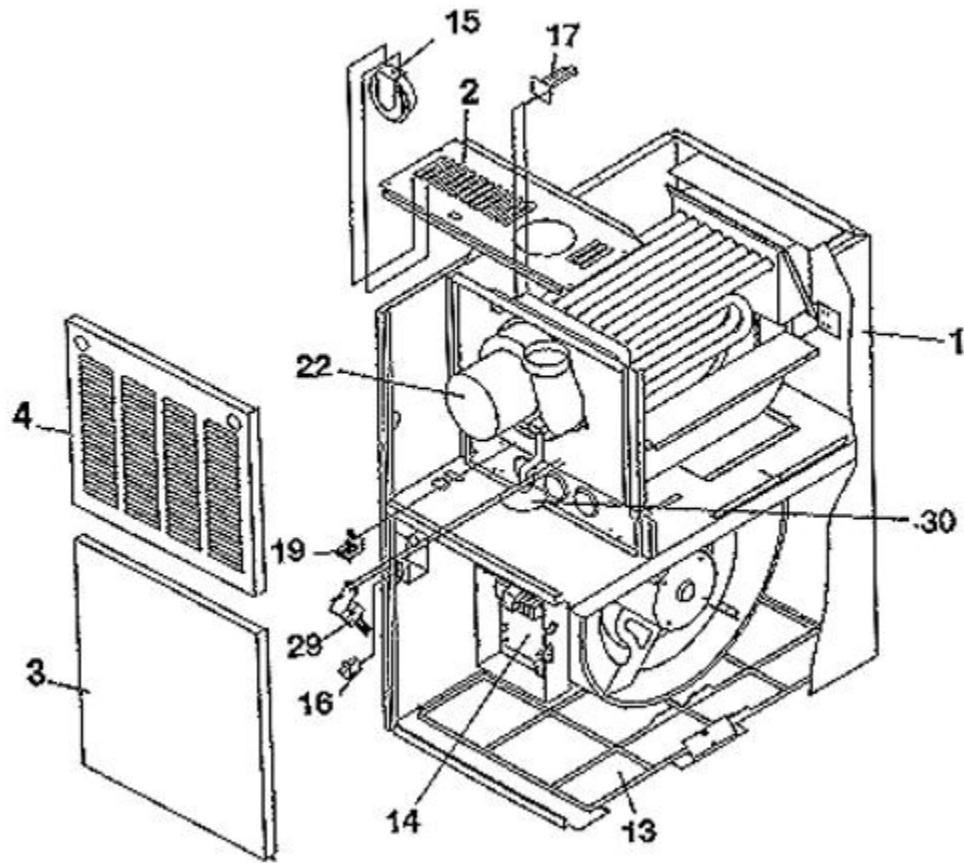


Exploded View

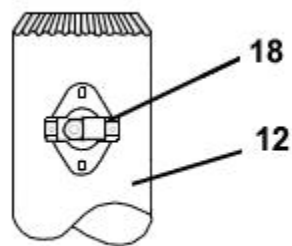

Vent Pressure Detector

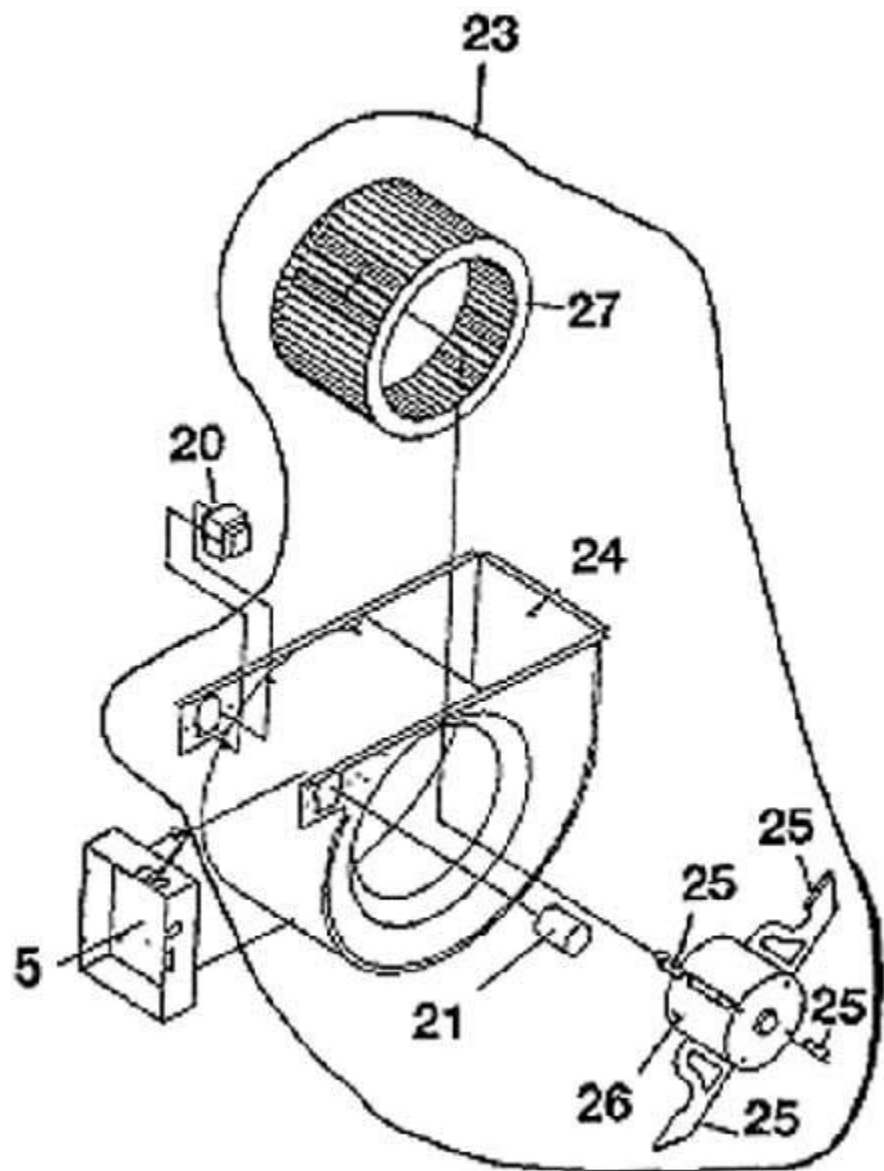

Blower Assembly

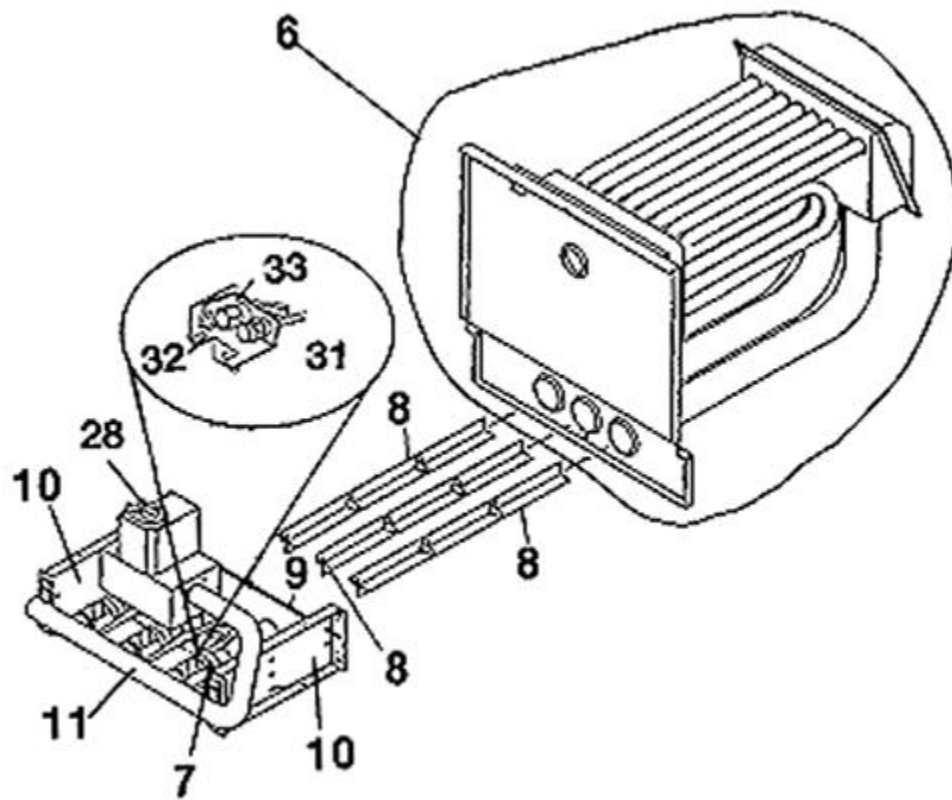

Heat Exchanger Assembly

NOTES

Stk It is recommended that stock be maintained for this part.

N/A Not Applicable

- 1 In February 1993, Production discontinued the use of the Vent Pressure Detector on the Canadian models. This change eliminated the Vent Pressure Detector Collar, Control and Jumper Plug. At this time, production stopped using the Canadian Model Top Plate which included a hole for the Jumper Plug, and went to the standard U.S. Model Top Plate.
- 2 Induced Draft Blowers were re-designed after Date Code F2192 to no longer include the mounting molding for the Vent Safety Switch. The Vent Safety Switch is not required on replacement induced draft blower motors. Remove the wiring flag connectors and connect the wires together.
- 3 Order Gas Valve for Natural Gas along with LP Conversion Kit.
- 4 62-22864-82 is a Robertshaw Pilot Assembly Field Service Kit and is designed for use in replacing the Honeywell pilot assembly 62-22834-01. This kit includes: Robertshaw Pilot (with NG Orifice installed), Pilot Bracket And Shield, Pilot Tubing, Thermocouple, Ferrule, LP Gas Pilot Orifice. Verify pilot vendor before using the parts list to order replacement parts.
- 5 Production utilized either Honeywell or Robertshaw pilots, this kit includes both orifices.
- 6 For Adjusting the blower control function "ON-OFF".
- 7 Order Gas Valve for Natural Gas along with Spring Conversion Assembly.

DISCLAIMER: This document is intended to provide general replacement parts information to aid qualified service personnel in the repair of these models. The complete Model and Serial Number of the unit under repair should be specified when selecting and ordering replacement parts. Specifications and illustrations are subject to change without notice. Document 92-42800-RGDG supersedes all previous parts lists for these models. See <http://www.rheempartslists.net/92-42800-RGDG> for the latest revision of this document. The manufacturer assumes no obligation for errors or omissions. Service personnel must verify the proper and safe operation of equipment after the replacement of any original components.