



Users Manual

Safety Turtle 2.0 Users Manual

Thank you for purchasing **Safety Turtle 2.0** for your children and/or pets. RJE Technologies, Inc is proud to provide you with an additional layer of protection. Be aware, nothing replaces supervision and Safety.

This is not a life saving device.


Set up instructions:

The **Safety Turtle 2.0** base should be placed in a window or area (indoors) that has full view of the pool. The base must be within 200 feet (60 meters) of the furthest point of the pool.

Plug the power cord into the side of the **Safety Turtle 2.0** base (see diagram). Plug the power cord into the power adapter. The power adapter can be plugged into any AC wall outlet. The green light will indicate the system is on (see diagram).

To test the system, dip the **Turtle** sensor into water, standing at least ten (10) feet away from the base. The **Turtle** can be wiped off to stop the signal being sent to the base. Press the reset button (see diagram) on the base to silence the alarm. It will alarm for three (3) minutes unless the reset button is pushed. The **Turtle** must be dry or the alarm will start again. **TEST TURTLES BEFORE EVERY USE.**

The base will show a red light (see diagram) when the alarm is sounding.

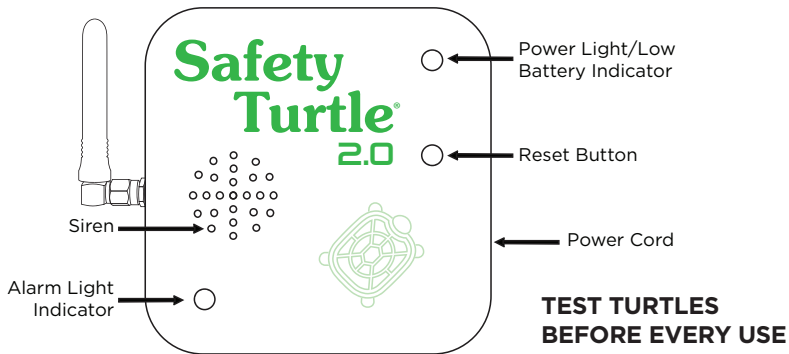

A **Turtle** will last 3-5 years depending on use. Test **Turtle** before every use. The low battery indicator will activate **ONLY** when testing. Test weekly for a pet.

To secure the wristband on a child's wrist, thread the band through the latch and pull to desired tightness. Insert the key and turn to secure the band. The key must be used to remove the band.

RJE Technologies, Inc. does not recommend placing the band on a child's ankle. Use the Velcro strap on the **Pet Turtle** to secure it to the pet's collar.

You are now ready and **Safety Turtle 2.0** is watching for you!
Enjoy a safe swimming season.

Federal Communications Commission (FCC) Notice

Model: Safety Turtle 2.0 Wristband T501

FCC ID: T5P-T501



This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by RJE Technologies, Inc. could void the users authority to operate the equipment.



15375 Barranca Parkway I-112 • Irvine, CA 92618 • Phone 949-943-3349
www.safetyturtle.com • safetyturtle@rjeint.com