

PULL HERE TO OPEN



PREMISE[®] 2

Insecticide

ACTIVE INGREDIENT:

Imidacloprid, 1-[(6-Chloro-3-pyridinyl)methyl]-N-nitro-2-imidazolidinimine..... 21.4%

INERT INGREDIENTS:..... 78.6%

TOTAL: 100.0%

Contains 2 pounds of imidacloprid per gallon.

Shake well before using.

EPA Reg. No. 432-1331 EPA Est. No. 432-TX-1

**STOP - READ THE LABEL BEFORE USE.
KEEP OUT OF REACH OF CHILDREN.**

CAUTION

See inside leaflet for complete First Aid Instructions, Precautionary Statements, Directions for Use and Storage and Disposal Instructions.


Net Contents: 8.12 fl. oz. (240 mL)

02584607

03549368F 140108AV1

BACKED

by BAYER.

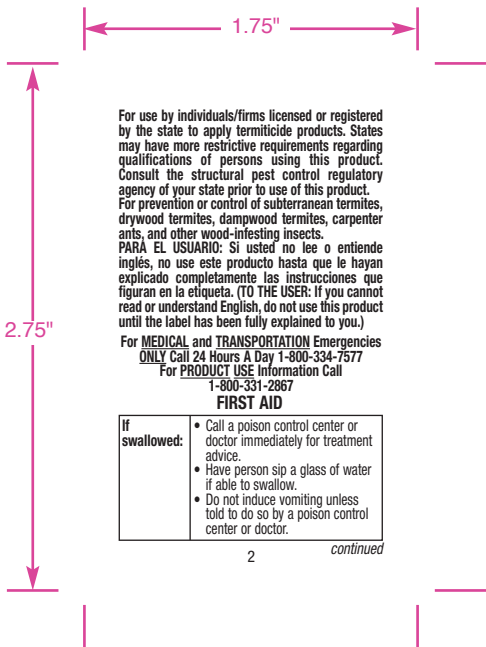

For use by individuals/firms licensed or registered by the state to apply termiticide products. States may have more restrictive requirements regarding qualifications of persons using this product. Consult the structural pest control regulatory agency of your state prior to use of this product. For prevention or control of subterranean termites, drywood termites, dampwood termites, carpenter ants, and other wood-infesting insects.

PARA EL USUARIO: Si usted no lee o entiende inglés, no use este producto hasta que le hayan explicado completamente las instrucciones que figuran en la etiqueta. (TO THE USER: If you cannot read or understand English, do not use this product until the label has been fully explained to you.)


For **MEDICAL** and **TRANSPORTATION** Emergencies
ONLY Call 24 Hours A Day 1-800-334-7577
 For **PRODUCT USE** Information Call
 1-800-331-2867

FIRST AID

<p>If swallowed:</p>	<ul style="list-style-type: none"> • Call a poison control center or doctor immediately for treatment advice. • Have person sip a glass of water if able to swallow. • Do not induce vomiting unless told to do so by a poison control center or doctor.
-----------------------------	---

FIRST AID (cont)	
	<ul style="list-style-type: none">• Do not give anything by mouth to an unconscious person.
If on skin or clothing:	<ul style="list-style-type: none">• Take off contaminated clothing.• Rinse skin immediately with plenty of soap and water for 15 to 20 minutes.• Call a poison control center or doctor for treatment advice.
If in eyes:	<ul style="list-style-type: none">• Hold eyelids open and rinse slowly and gently with water for 15 to 20 minutes.• Remove contact lenses, if present, after the first 5 minutes, then continue rinsing eye.• Call a poison control center or doctor for treatment advice.
HOT LINE NUMBER	
Have the product container or label with you when calling a poison control center or doctor, or going for treatment. You may also contact 1-800-334-7577 for emergency medical treatment.	
NOTE TO PHYSICIAN: No specific antidote is available. Treat patient symptomatically.	

3

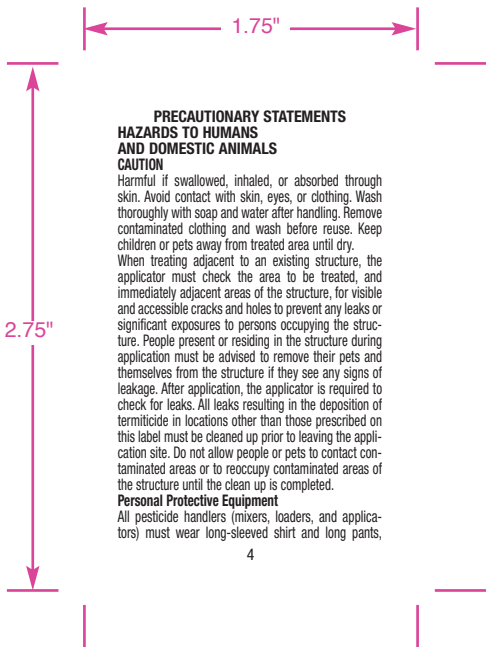
**PRECAUTIONARY STATEMENTS****HAZARDS TO HUMANS
AND DOMESTIC ANIMALS****CAUTION**


Harmful if swallowed, inhaled, or absorbed through skin. Avoid contact with skin, eyes, or clothing. Wash thoroughly with soap and water after handling. Remove contaminated clothing and wash before reuse. Keep children or pets away from treated area until dry.

When treating adjacent to an existing structure, the applicator must check the area to be treated, and immediately adjacent areas of the structure, for visible and accessible cracks and holes to prevent any leaks or significant exposures to persons occupying the structure. People present or residing in the structure during application must be advised to remove their pets and themselves from the structure if they see any signs of leakage. After application, the applicator is required to check for leaks. All leaks resulting in the deposition of termiticide in locations other than those prescribed on this label must be cleaned up prior to leaving the application site. Do not allow people or pets to contact contaminated areas or to reoccupy contaminated areas of the structure until the clean up is completed.

Personal Protective Equipment

All pesticide handlers (mixers, loaders, and applicators) must wear long-sleeved shirt and long pants,

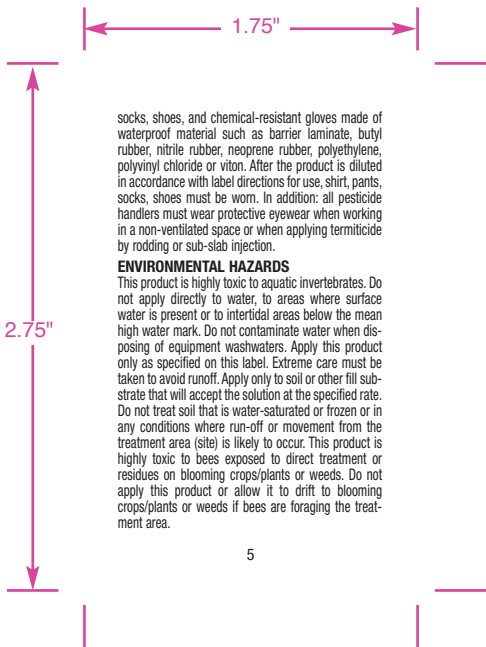

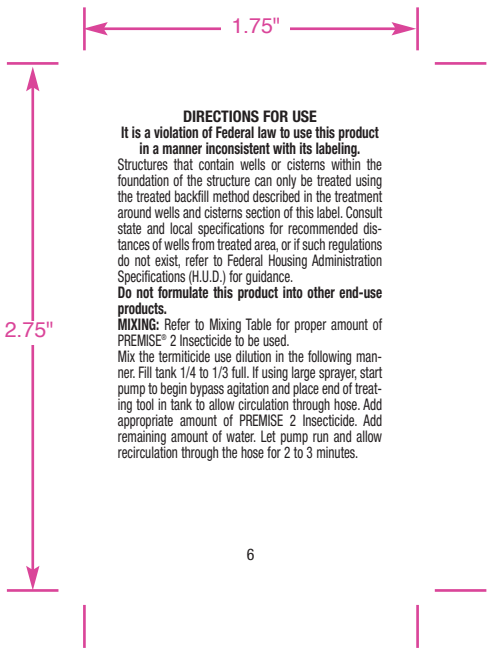

1.75"

2.75"

MIXING TABLE FOR PREMISE 2 INSECTICIDE			
GALLONS WATER	PLUS	0.05%	0.1%
10		80 mL	160 mL
5		40 mL	80 mL
2		16 mL	32 mL
1		8 mL	16 mL


PROPORTIONAL INJECTOR MIXING TABLE FOR PREMISE 2 INSECTICIDE	
INJECTOR VOLUME (fl oz/gal)	CONCENTRATION (%)
0.3	0.05
0.6	0.10

IN-LINE-INJECTION: For the desired application rate, use the proportional injector mixing table to determine the amount of PREMISE 2 Insecticide for a given injection volume of finished emulsion.

CONVERSION KEY: 128 fl oz = 1 gal, 16 fl oz = 1 pint, 8 pints = 1 gal, 1 fl oz = 29.5 mL

APPLICATION VOLUME


Whenever possible, use the application volumes described in the PREMISE 2 Insecticide "DIRECTIONS FOR USE". However, where soil conditions will not

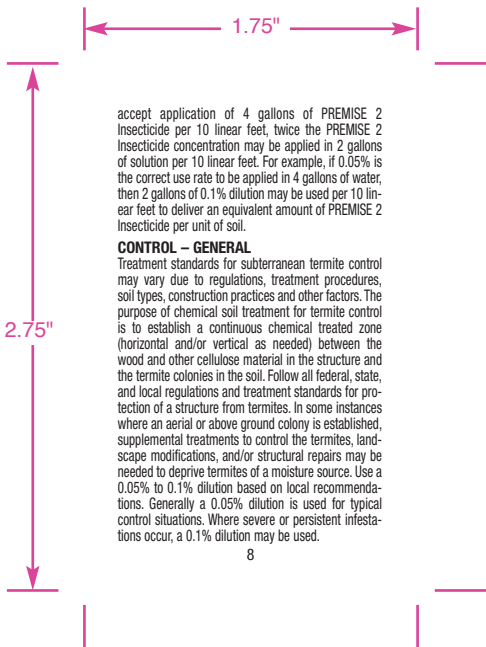

accept application of 4 gallons of PREMISE 2 Insecticide per 10 linear feet, twice the PREMISE 2 Insecticide concentration may be applied in 2 gallons of solution per 10 linear feet. For example, if 0.05% is the correct use rate to be applied in 4 gallons of water, then 2 gallons of 0.1% dilution may be used per 10 linear feet to deliver an equivalent amount of PREMISE 2 Insecticide per unit of soil.

CONTROL – GENERAL

Treatment standards for subterranean termite control may vary due to regulations, treatment procedures, soil types, construction practices and other factors. The purpose of chemical soil treatment for termite control is to establish a continuous chemical treated zone (horizontal and/or vertical as needed) between the wood and other cellulose material in the structure and the termite colonies in the soil. Follow all federal, state, and local regulations and treatment standards for protection of a structure from termites. In some instances where an aerial or above ground colony is established, supplemental treatments to control the termites, landscape modifications, and/or structural repairs may be needed to deprive termites of a moisture source. Use a 0.05% to 0.1% dilution based on local recommendations. Generally a 0.05% dilution is used for typical control situations. Where severe or persistent infestations occur, a 0.1% dilution may be used.

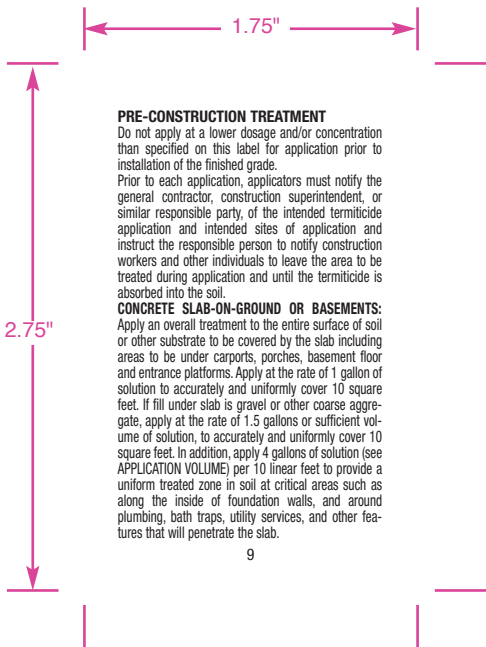
**PRE-CONSTRUCTION TREATMENT**

Do not apply at a lower dosage and/or concentration than specified on this label for application prior to installation of the finished grade.

Prior to each application, applicators must notify the general contractor, construction superintendent, or similar responsible party, of the intended termiticide application and intended sites of application and instruct the responsible person to notify construction workers and other individuals to leave the area to be treated during application and until the termiticide is absorbed into the soil.


CONCRETE SLAB-ON-GROUND OR BASEMENTS:


Apply an overall treatment to the entire surface of soil or other substrate to be covered by the slab including areas to be under carports, porches, basement floor and entrance platforms. Apply at the rate of 1 gallon of solution to accurately and uniformly cover 10 square feet. If fill under slab is gravel or other coarse aggregate, apply at the rate of 1.5 gallons or sufficient volume of solution, to accurately and uniformly cover 10 square feet. In addition, apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet to provide a uniform treated zone in soil at critical areas such as along the inside of foundation walls, and around plumbing, bath traps, utility services, and other features that will penetrate the slab.

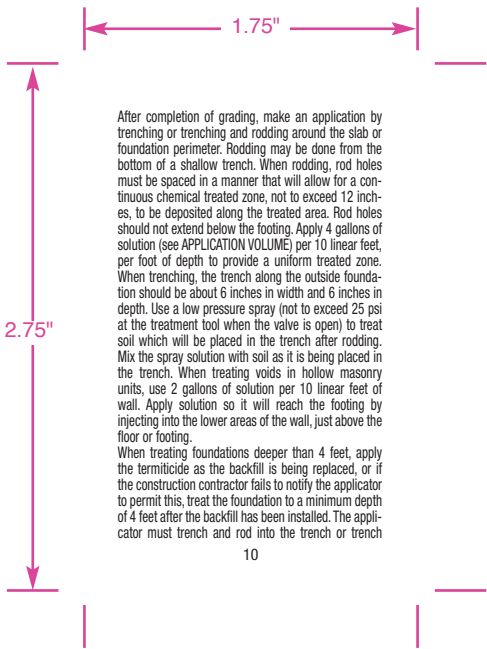

After completion of grading, make an application by trenching or trenching and rodding around the slab or foundation perimeter. Rodding may be done from the bottom of a shallow trench. When rodding, rod holes must be spaced in a manner that will allow for a continuous chemical treated zone, not to exceed 12 inches, to be deposited along the treated area. Rod holes should not extend below the footing. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet, per foot of depth to provide a uniform treated zone. When trenching, the trench along the outside foundation should be about 6 inches in width and 6 inches in depth. Use a low pressure spray (not to exceed 25 psi at the treatment tool when the valve is open) to treat soil which will be placed in the trench after rodding. Mix the spray solution with soil as it is being placed in the trench. When treating voids in hollow masonry units, use 2 gallons of solution per 10 linear feet of wall. Apply solution so it will reach the footing by injecting into the lower areas of the wall, just above the floor or footing.

When treating foundations deeper than 4 feet, apply the termiticide as the backfill is being replaced, or if the construction contractor fails to notify the applicator to permit this, treat the foundation to a minimum depth of 4 feet after the backfill has been installed. The applicator must trench and rod into the trench or trench

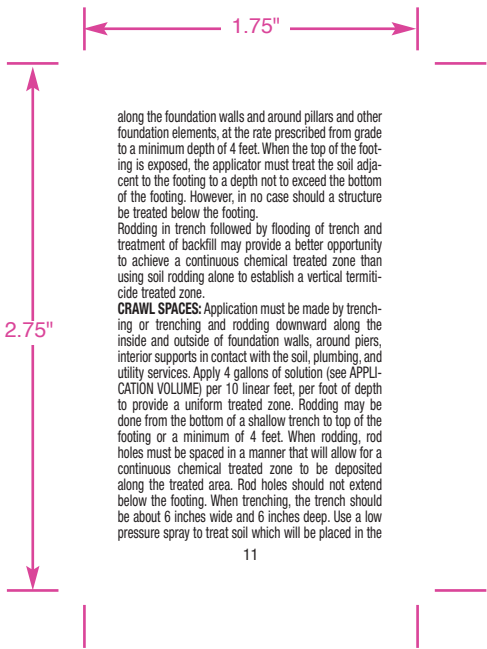

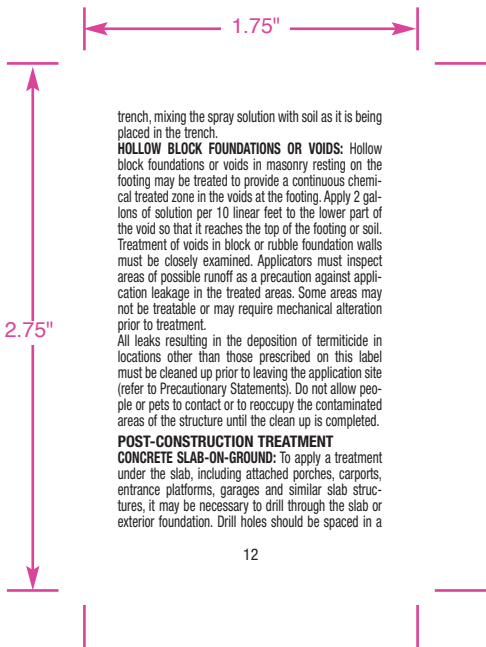


trench, mixing the spray solution with soil as it is being placed in the trench.

HOLLOW BLOCK FOUNDATIONS OR VOIDS: Hollow block foundations or voids in masonry resting on the footing may be treated to provide a continuous chemical treated zone in the voids at the footing. Apply 2 gallons of solution per 10 linear feet to the lower part of the void so that it reaches the top of the footing or soil. Treatment of voids in block or rubble foundation walls must be closely examined. Applicators must inspect areas of possible runoff as a precaution against application leakage in the treated areas. Some areas may not be treatable or may require mechanical alteration prior to treatment.

All leaks resulting in the deposition of termiticide in locations other than those prescribed on this label must be cleaned up prior to leaving the application site (refer to Precautionary Statements). Do not allow people or pets to contact or to reoccupy the contaminated areas of the structure until the clean up is completed.

POST-CONSTRUCTION TREATMENT


CONCRETE SLAB-ON-GROUND: To apply a treatment under the slab, including attached porches, carports, entrance platforms, garages and similar slab structures, it may be necessary to drill through the slab or exterior foundation. Drill holes should be spaced in a

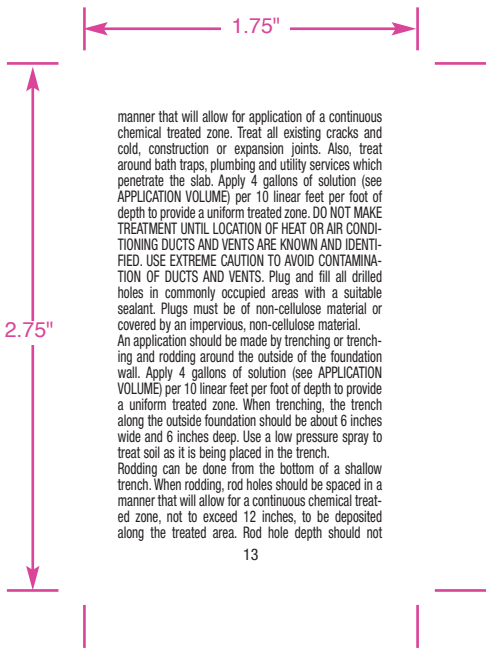


manner that will allow for application of a continuous chemical treated zone. Treat all existing cracks and cold, construction or expansion joints. Also, treat around bath traps, plumbing and utility services which penetrate the slab. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet per foot of depth to provide a uniform treated zone. DO NOT MAKE TREATMENT UNTIL LOCATION OF HEAT OR AIR CONDITIONING DUCTS AND VENTS ARE KNOWN AND IDENTIFIED. USE EXTREME CAUTION TO AVOID CONTAMINATION OF DUCTS AND VENTS. Plug and fill all drilled holes in commonly occupied areas with a suitable sealant. Plugs must be of non-cellulose material or covered by an impervious, non-cellulose material.

An application should be made by trenching or trenching and rodding around the outside of the foundation wall. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet per foot of depth to provide a uniform treated zone. When trenching, the trench along the outside foundation should be about 6 inches wide and 6 inches deep. Use a low pressure spray to treat soil as it is being placed in the trench.

Rodding can be done from the bottom of a shallow trench. When rodding, rod holes should be spaced in a manner that will allow for a continuous chemical treated zone, not to exceed 12 inches, to be deposited along the treated area. Rod hole depth should not

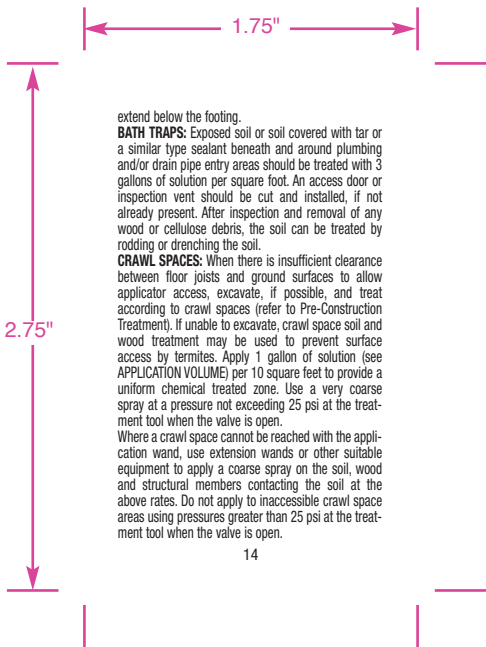

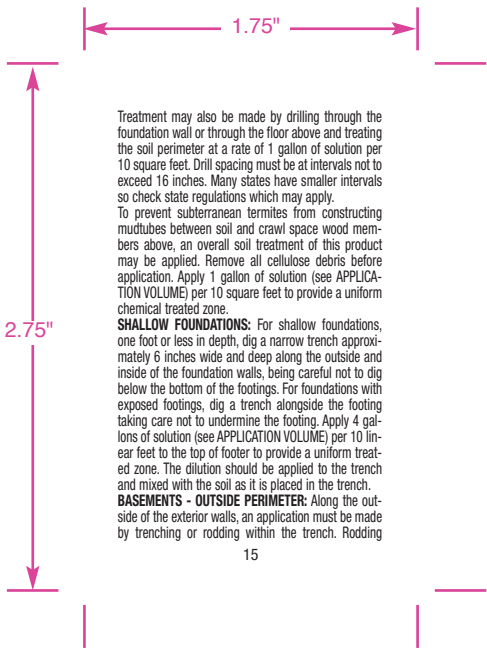


Treatment may also be made by drilling through the foundation wall or through the floor above and treating the soil perimeter at a rate of 1 gallon of solution per 10 square feet. Drill spacing must be at intervals not to exceed 16 inches. Many states have smaller intervals so check state regulations which may apply.

To prevent subterranean termites from constructing mudtubes between soil and crawl space wood members above, an overall soil treatment of this product may be applied. Remove all cellulose debris before application. Apply 1 gallon of solution (see APPLICATION VOLUME) per 10 square feet to provide a uniform chemical treated zone.

SHALLOW FOUNDATIONS: For shallow foundations, one foot or less in depth, dig a narrow trench approximately 6 inches wide and deep along the outside and inside of the foundation walls, being careful not to dig below the bottom of the footings. For foundations with exposed footings, dig a trench alongside the footing taking care not to undermine the footing. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet to the top of footer to provide a uniform treated zone. The dilution should be applied to the trench and mixed with the soil as it is placed in the trench.

BASEMENTS - OUTSIDE PERIMETER: Along the outside of the exterior walls, an application must be made by trenching or rodding within the trench. Rodding

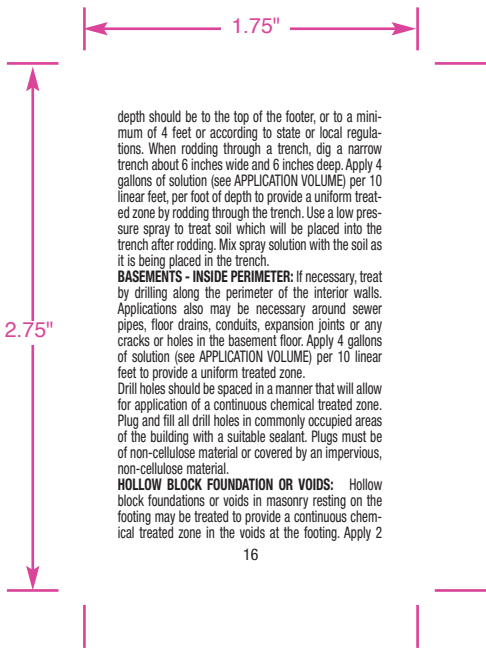


depth should be to the top of the footer, or to a minimum of 4 feet or according to state or local regulations. When rodding through a trench, dig a narrow trench about 6 inches wide and 6 inches deep. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet, per foot of depth to provide a uniform treated zone by rodding through the trench. Use a low pressure spray to treat soil which will be placed into the trench after rodding. Mix spray solution with the soil as it is being placed in the trench.

BASEMENTS - INSIDE PERIMETER: If necessary, treat by drilling along the perimeter of the interior walls. Applications also may be necessary around sewer pipes, floor drains, conduits, expansion joints or any cracks or holes in the basement floor. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet to provide a uniform treated zone.

Drill holes should be spaced in a manner that will allow for application of a continuous chemical treated zone. Plug and fill all drill holes in commonly occupied areas of the building with a suitable sealant. Plugs must be of non-cellulose material or covered by an impervious, non-cellulose material.

HOLLOW BLOCK FOUNDATION OR VOIDS: Hollow block foundations or voids in masonry resting on the footing may be treated to provide a continuous chemical treated zone in the voids at the footing. Apply 2

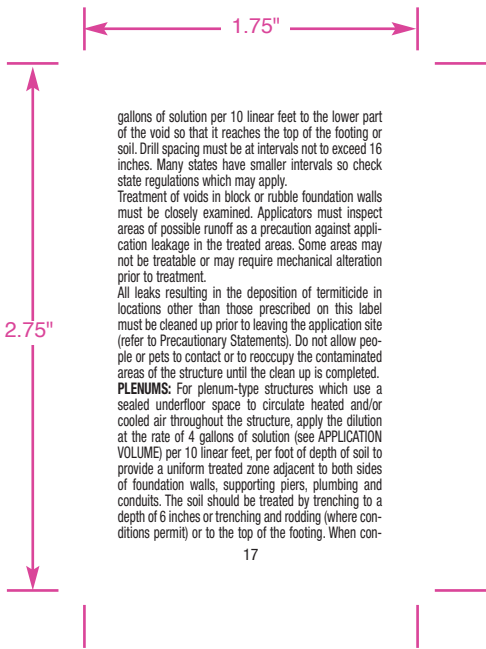



gallons of solution per 10 linear feet to the lower part of the void so that it reaches the top of the footing or soil. Drill spacing must be at intervals not to exceed 16 inches. Many states have smaller intervals so check state regulations which may apply.

Treatment of voids in block or rubble foundation walls must be closely examined. Applicators must inspect areas of possible runoff as a precaution against application leakage in the treated areas. Some areas may not be treatable or may require mechanical alteration prior to treatment.

All leaks resulting in the deposition of termiticide in locations other than those prescribed on this label must be cleaned up prior to leaving the application site (refer to Precautionary Statements). Do not allow people or pets to contact or to reoccupy the contaminated areas of the structure until the clean up is completed.

PLENUMS: For plenum-type structures which use a sealed underfloor space to circulate heated and/or cooled air throughout the structure, apply the dilution at the rate of 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet, per foot of depth of soil to provide a uniform treated zone adjacent to both sides of foundation walls, supporting piers, plumbing and conduits. The soil should be treated by trenching to a depth of 6 inches or trenching and rodding (where conditions permit) or to the top of the footing. When con-

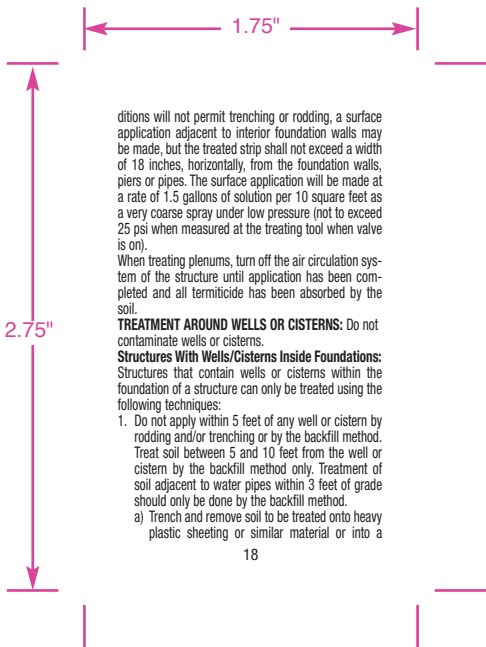

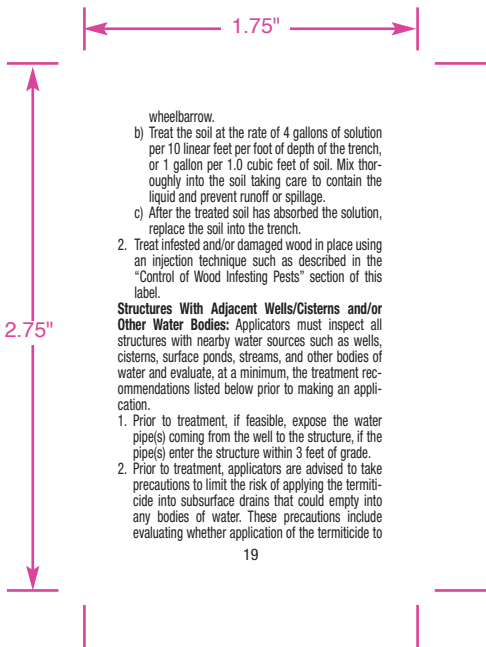



wheelbarrow.

- b) Treat the soil at the rate of 4 gallons of solution per 10 linear feet per foot of depth of the trench, or 1 gallon per 1.0 cubic feet of soil. Mix thoroughly into the soil taking care to contain the liquid and prevent runoff or spillage.
 - c) After the treated soil has absorbed the solution, replace the soil into the trench.
2. Treat infested and/or damaged wood in place using an injection technique such as described in the "Control of Wood Infesting Pests" section of this label.

Structures With Adjacent Wells/Cisterns and/or Other Water Bodies: Applicators must inspect all structures with nearby water sources such as wells, cisterns, surface ponds, streams, and other bodies of water and evaluate, at a minimum, the treatment recommendations listed below prior to making an application.

1. Prior to treatment, if feasible, expose the water pipe(s) coming from the well to the structure, if the pipe(s) enter the structure within 3 feet of grade.
2. Prior to treatment, applicators are advised to take precautions to limit the risk of applying the termiticide into subsurface drains that could empty into any bodies of water. These precautions include evaluating whether application of the termiticide to

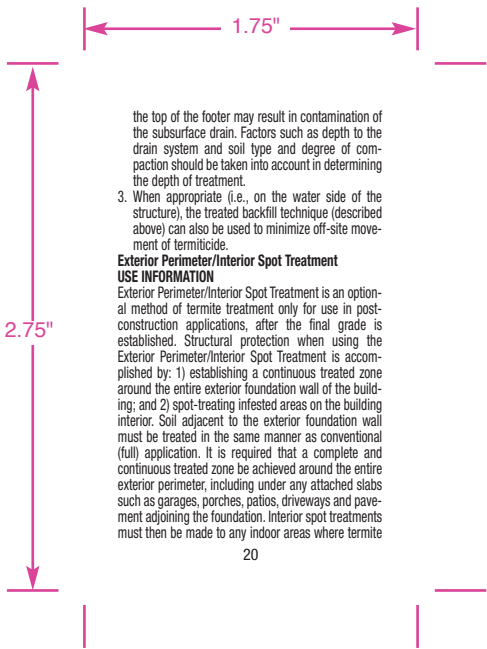

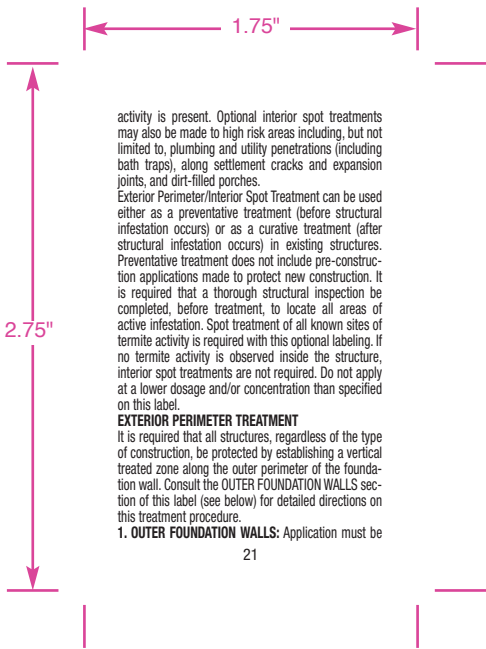


activity is present. Optional interior spot treatments may also be made to high risk areas including, but not limited to, plumbing and utility penetrations (including bath traps), along settlement cracks and expansion joints, and dirt-filled porches.

Exterior Perimeter/Interior Spot Treatment can be used either as a preventative treatment (before structural infestation occurs) or as a curative treatment (after structural infestation occurs) in existing structures. Preventative treatment does not include pre-construction applications made to protect new construction. It is required that a thorough structural inspection be completed, before treatment, to locate all areas of active infestation. Spot treatment of all known sites of termite activity is required with this optional labeling. If no termite activity is observed inside the structure, interior spot treatments are not required. Do not apply at a lower dosage and/or concentration than specified on this label.

EXTERIOR PERIMETER TREATMENT

It is required that all structures, regardless of the type of construction, be protected by establishing a vertical treated zone along the outer perimeter of the foundation wall. Consult the OUTER FOUNDATION WALLS section of this label (see below) for detailed directions on this treatment procedure.


1. OUTER FOUNDATION WALLS: Application must be

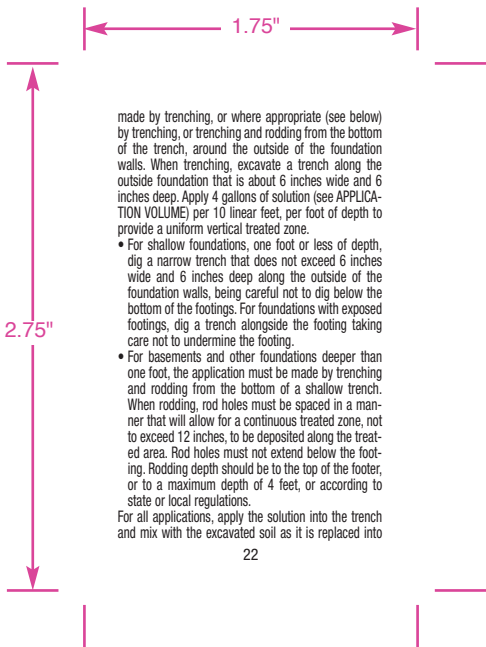

made by trenching, or where appropriate (see below) by trenching, or trenching and rodding from the bottom of the trench, around the outside of the foundation walls. When trenching, excavate a trench along the outside foundation that is about 6 inches wide and 6 inches deep. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet, per foot of depth to provide a uniform vertical treated zone.

- For shallow foundations, one foot or less of depth, dig a narrow trench that does not exceed 6 inches wide and 6 inches deep along the outside of the foundation walls, being careful not to dig below the bottom of the footings. For foundations with exposed footings, dig a trench alongside the footing taking care not to undermine the footing.
- For basements and other foundations deeper than one foot, the application must be made by trenching and rodding from the bottom of a shallow trench. When rodding, rod holes must be spaced in a manner that will allow for a continuous treated zone, not to exceed 12 inches, to be deposited along the treated area. Rod holes must not extend below the footing. Rodding depth should be to the top of the footer, or to a maximum depth of 4 feet, or according to state or local regulations.


For all applications, apply the solution into the trench and mix with the excavated soil as it is replaced into

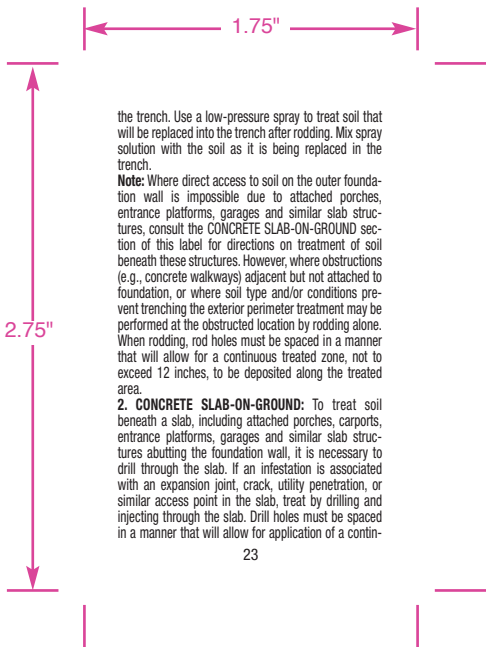

the trench. Use a low-pressure spray to treat soil that will be replaced into the trench after rodding. Mix spray solution with the soil as it is being replaced in the trench.

Note: Where direct access to soil on the outer foundation wall is impossible due to attached porches, entrance platforms, garages and similar slab structures, consult the CONCRETE SLAB-ON-GROUND section of this label for directions on treatment of soil beneath these structures. However, where obstructions (e.g., concrete walkways) adjacent but not attached to foundation, or where soil type and/or conditions prevent trenching the exterior perimeter treatment may be performed at the obstructed location by rodding alone. When rodding, rod holes must be spaced in a manner that will allow for a continuous treated zone, not to exceed 12 inches, to be deposited along the treated area.

2. CONCRETE SLAB-ON-GROUND: To treat soil beneath a slab, including attached porches, carports, entrance platforms, garages and similar slab structures abutting the foundation wall, it is necessary to drill through the slab. If an infestation is associated with an expansion joint, crack, utility penetration, or similar access point in the slab, treat by drilling and injecting through the slab. Drill holes must be spaced in a manner that will allow for application of a contin-

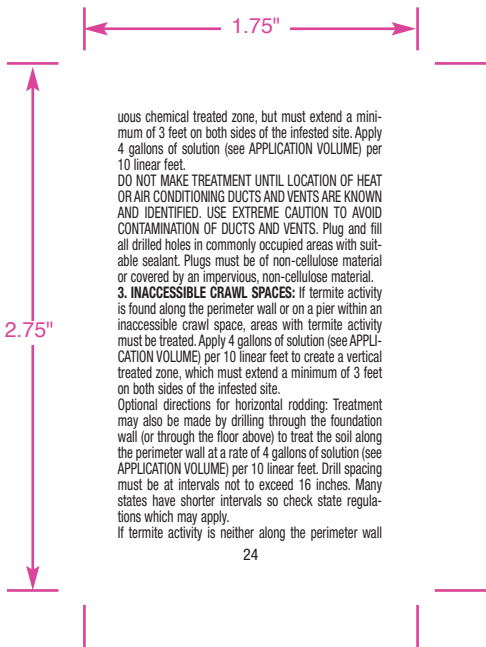


uous chemical treated zone, but must extend a minimum of 3 feet on both sides of the infested site. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet.

DO NOT MAKE TREATMENT UNTIL LOCATION OF HEAT OR AIR CONDITIONING DUCTS AND VENTS ARE KNOWN AND IDENTIFIED. USE EXTREME CAUTION TO AVOID CONTAMINATION OF DUCTS AND VENTS. Plug and fill all drilled holes in commonly occupied areas with suitable sealant. Plugs must be of non-cellulose material or covered by an impervious, non-cellulose material.

3. INACCESSIBLE CRAWL SPACES: If termite activity is found along the perimeter wall or on a pier within an inaccessible crawl space, areas with termite activity must be treated. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet to create a vertical treated zone, which must extend a minimum of 3 feet on both sides of the infested site.


Optional directions for horizontal rodding: Treatment may also be made by drilling through the foundation wall (or through the floor above) to treat the soil along the perimeter wall at a rate of 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet. Drill spacing must be at intervals not to exceed 16 inches. Many states have shorter intervals so check state regulations which may apply.


If termite activity is neither along the perimeter wall

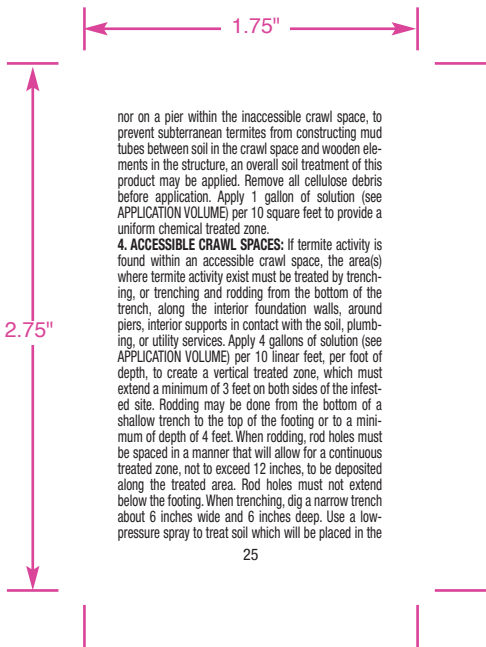



nor on a pier within the inaccessible crawl space, to prevent subterranean termites from constructing mud tubes between soil in the crawl space and wooden elements in the structure, an overall soil treatment of this product may be applied. Remove all cellulose debris before application. Apply 1 gallon of solution (see APPLICATION VOLUME) per 10 square feet to provide a uniform chemical treated zone.


4. ACCESSIBLE CRAWL SPACES: If termite activity is found within an accessible crawl space, the area(s) where termite activity exist must be treated by trenching, or trenching and rodding from the bottom of the trench, along the interior foundation walls, around piers, interior supports in contact with the soil, plumbing, or utility services. Apply 4 gallons of solution (see APPLICATION VOLUME) per 10 linear feet, per foot of depth, to create a vertical treated zone, which must extend a minimum of 3 feet on both sides of the infested site. Rodding may be done from the bottom of a shallow trench to the top of the footing or to a minimum of depth of 4 feet. When rodding, rod holes must be spaced in a manner that will allow for a continuous treated zone, not to exceed 12 inches, to be deposited along the treated area. Rod holes must not extend below the footing. When trenching, dig a narrow trench about 6 inches wide and 6 inches deep. Use a low-pressure spray to treat soil which will be placed in the

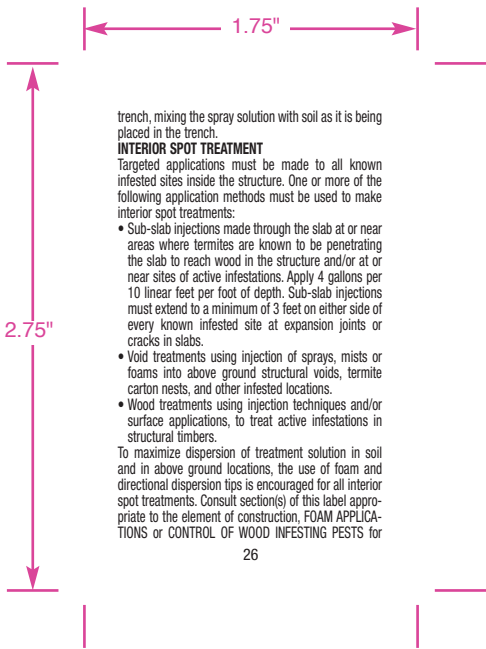

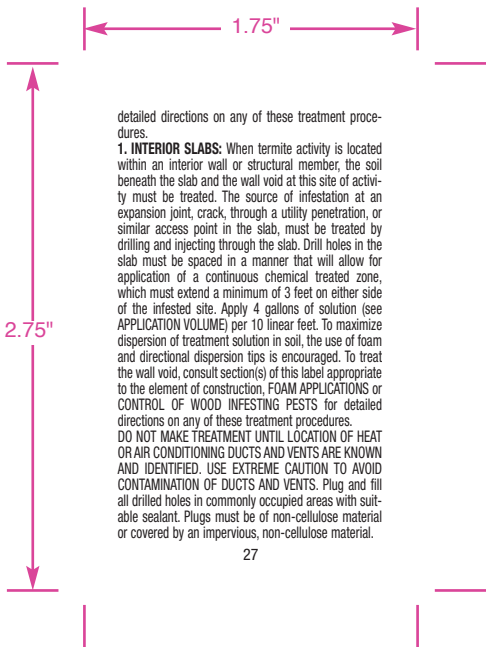

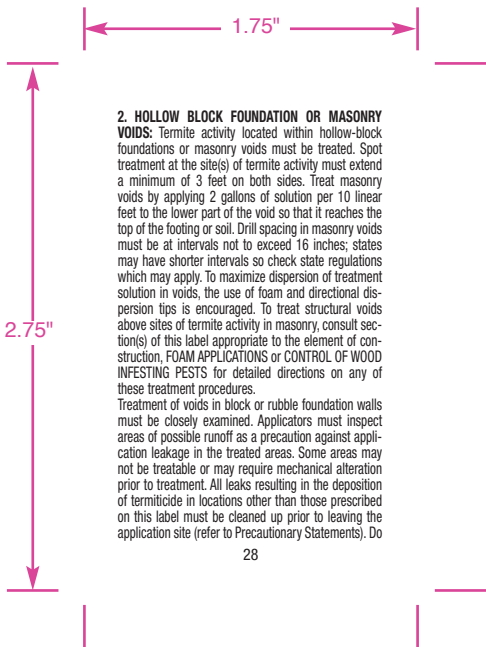

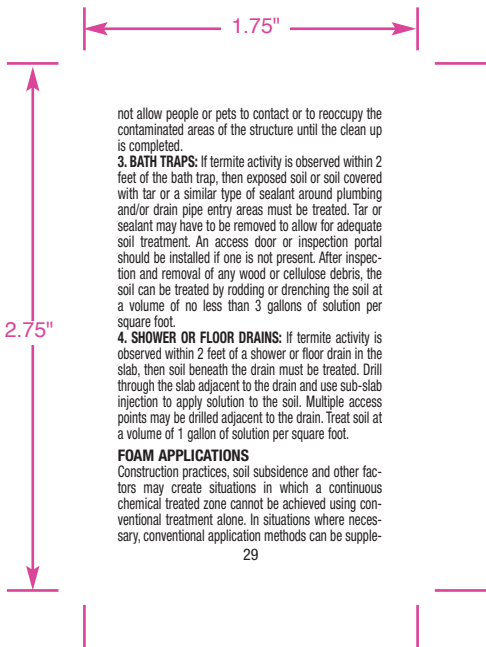


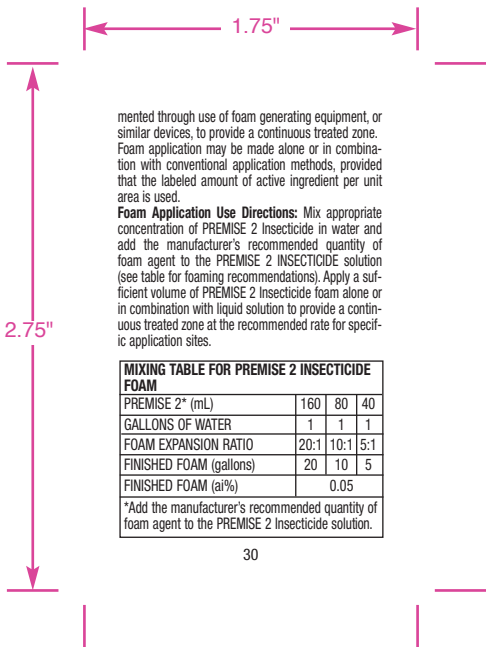


mented through use of foam generating equipment, or similar devices, to provide a continuous treated zone. Foam application may be made alone or in combination with conventional application methods, provided that the labeled amount of active ingredient per unit area is used.

Foam Application Use Directions: Mix appropriate concentration of PREMISE 2 Insecticide in water and add the manufacturer's recommended quantity of foam agent to the PREMISE 2 INSECTICIDE solution (see table for foaming recommendations). Apply a sufficient volume of PREMISE 2 Insecticide foam alone or in combination with liquid solution to provide a continuous treated zone at the recommended rate for specific application sites.

MIXING TABLE FOR PREMISE 2 INSECTICIDE FOAM			
PREMISE 2* (mL)	160	80	40
GALLONS OF WATER	1	1	1
FOAM EXPANSION RATIO	20:1	10:1	5:1
FINISHED FOAM (gallons)	20	10	5
FINISHED FOAM (ai%)	0.05		
*Add the manufacturer's recommended quantity of foam agent to the PREMISE 2 Insecticide solution.			

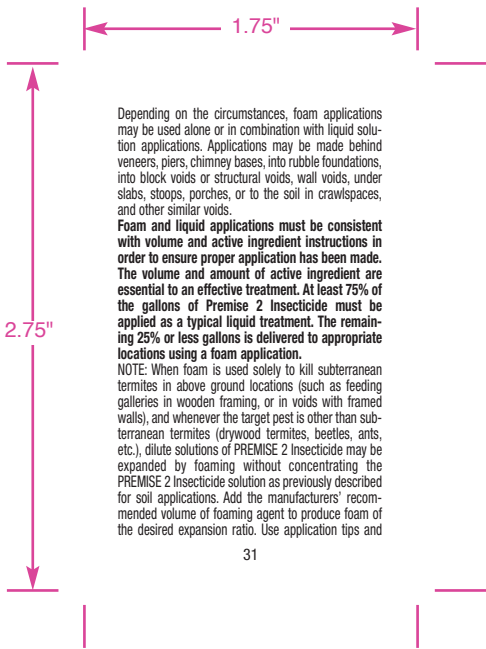

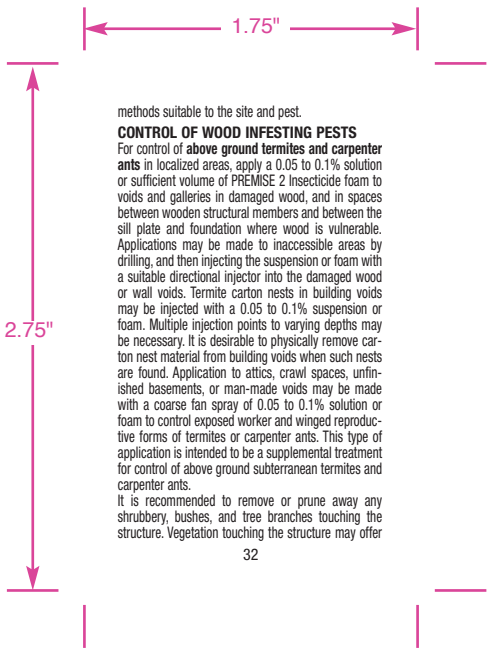



methods suitable to the site and pest.

CONTROL OF WOOD INFESTING PESTS

For control of **above ground termites and carpenter ants** in localized areas, apply a 0.05 to 0.1% solution or sufficient volume of PREMISE 2 Insecticide foam to voids and galleries in damaged wood, and in spaces between wooden structural members and between the sill plate and foundation where wood is vulnerable. Applications may be made to inaccessible areas by drilling, and then injecting the suspension or foam with a suitable directional injector into the damaged wood or wall voids. Termite carton nests in building voids may be injected with a 0.05 to 0.1% suspension or foam. Multiple injection points to varying depths may be necessary. It is desirable to physically remove carton nest material from building voids when such nests are found. Application to attics, crawl spaces, unfinished basements, or man-made voids may be made with a coarse fan spray of 0.05 to 0.1% solution or foam to control exposed worker and winged reproductive forms of termites or carpenter ants. This type of application is intended to be a supplemental treatment for control of above ground subterranean termites and carpenter ants.

It is recommended to remove or prune away any shrubbery, bushes, and tree branches touching the structure. Vegetation touching the structure may offer

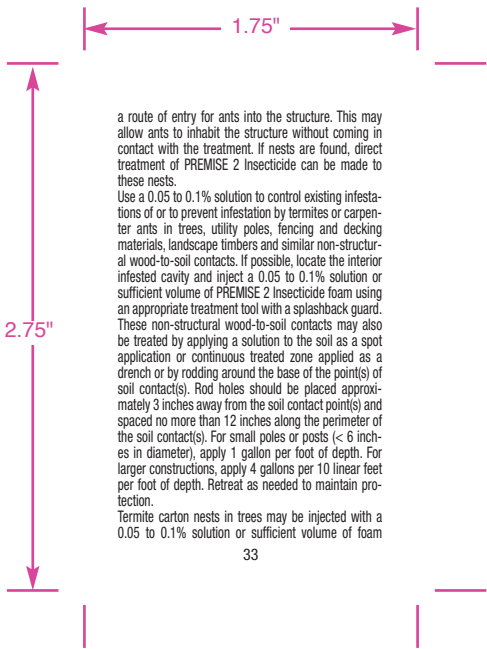


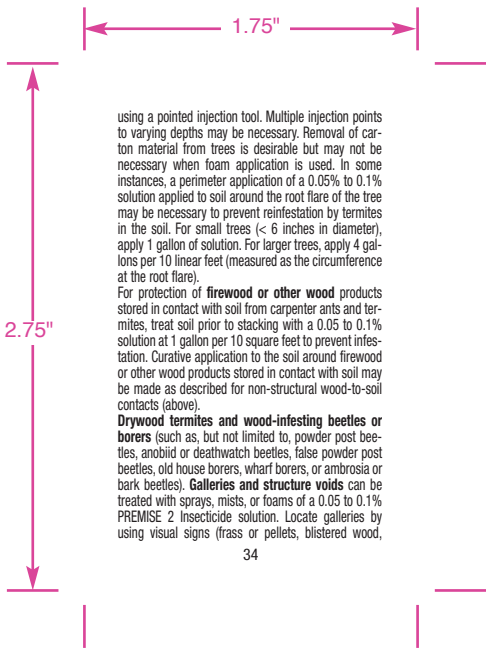


using a pointed injection tool. Multiple injection points to varying depths may be necessary. Removal of carton material from trees is desirable but may not be necessary when foam application is used. In some instances, a perimeter application of a 0.05% to 0.1% solution applied to soil around the root flare of the tree may be necessary to prevent reinfestation by termites in the soil. For small trees (< 6 inches in diameter), apply 1 gallon of solution. For larger trees, apply 4 gallons per 10 linear feet (measured as the circumference at the root flare).


For protection of **firewood or other wood** products stored in contact with soil from carpenter ants and termites, treat soil prior to stacking with a 0.05 to 0.1% solution at 1 gallon per 10 square feet to prevent infestation. Curative application to the soil around firewood or other wood products stored in contact with soil may be made as described for non-structural wood-to-soil contacts (above).

Drywood termites and wood-infesting beetles or borers (such as, but not limited to, powder post beetles, anobiid or deathwatch beetles, false powder post beetles, old house borers, wharf borers, or ambrosia or bark beetles). **Galleries and structure voids** can be treated with sprays, mists, or foams of a 0.05 to 0.1% PREMISE 2 Insecticide solution. Locate galleries by using visual signs (frass or pellets, blistered wood,

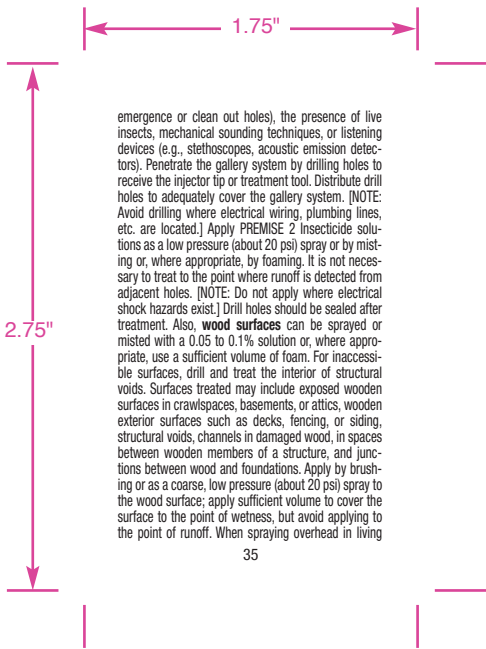

emergence or clean out holes), the presence of live insects, mechanical sounding techniques, or listening devices (e.g., stethoscopes, acoustic emission detectors). Penetrate the gallery system by drilling holes to receive the injector tip or treatment tool. Distribute drill holes to adequately cover the gallery system. [NOTE: Avoid drilling where electrical wiring, plumbing lines, etc. are located.] Apply PREMISE 2 Insecticide solutions as a low pressure (about 20 psi) spray or by misting or, where appropriate, by foaming. It is not necessary to treat to the point where runoff is detected from adjacent holes. [NOTE: Do not apply where electrical shock hazards exist.] Drill holes should be sealed after treatment. Also, **wood surfaces** can be sprayed or misted with a 0.05 to 0.1% solution or, where appropriate, use a sufficient volume of foam. For inaccessible surfaces, drill and treat the interior of structural voids. Surfaces treated may include exposed wooden surfaces in crawlspaces, basements, or attics, wooden exterior surfaces such as decks, fencing, or siding, structural voids, channels in damaged wood, in spaces between wooden members of a structure, and junctions between wood and foundations. Apply by brushing or as a coarse, low pressure (about 20 psi) spray to the wood surface; apply sufficient volume to cover the surface to the point of wetness, but avoid applying to the point of runoff. When spraying overhead in living

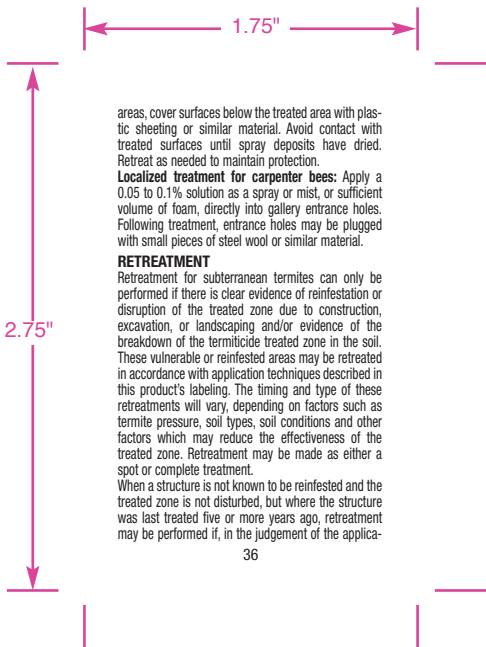

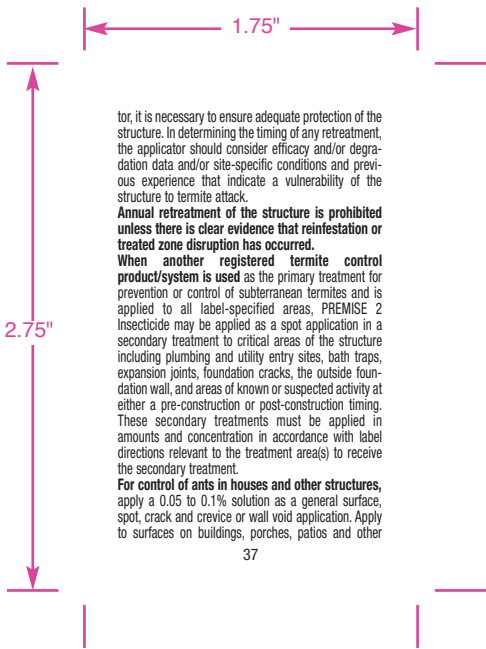


tor, it is necessary to ensure adequate protection of the structure. In determining the timing of any retreatment, the applicator should consider efficacy and/or degradation data and/or site-specific conditions and previous experience that indicate a vulnerability of the structure to termite attack.

Annual retreatment of the structure is prohibited unless there is clear evidence that reinfestation or treated zone disruption has occurred.

When another registered termite control product/system is used as the primary treatment for prevention or control of subterranean termites and is applied to all label-specified areas, PREMISE 2 Insecticide may be applied as a spot application in a secondary treatment to critical areas of the structure including plumbing and utility entry sites, bath traps, expansion joints, foundation cracks, the outside foundation wall, and areas of known or suspected activity at either a pre-construction or post-construction timing. These secondary treatments must be applied in amounts and concentration in accordance with label directions relevant to the treatment area(s) to receive the secondary treatment.

For control of ants in houses and other structures, apply a 0.05 to 0.1% solution as a general surface, spot, crack and crevice or wall void application. Apply to surfaces on buildings, porches, patios and other

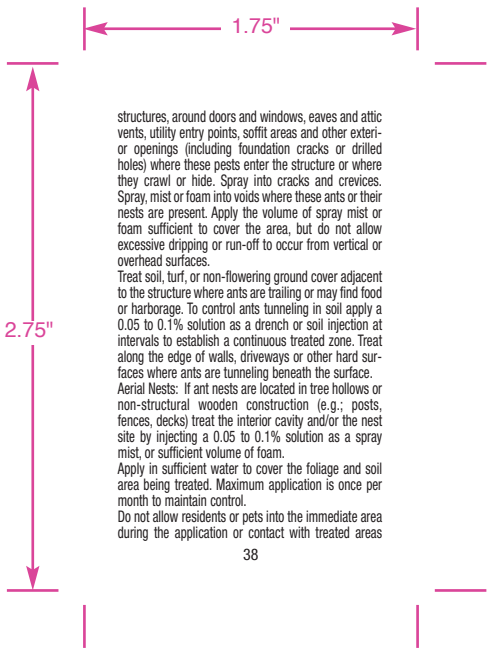


structures, around doors and windows, eaves and attic vents, utility entry points, soffit areas and other exterior openings (including foundation cracks or drilled holes) where these pests enter the structure or where they crawl or hide. Spray into cracks and crevices. Spray, mist or foam into voids where these ants or their nests are present. Apply the volume of spray mist or foam sufficient to cover the area, but do not allow excessive dripping or run-off to occur from vertical or overhead surfaces.

Treat soil, turf, or non-flowering ground cover adjacent to the structure where ants are trailing or may find food or harborage. To control ants tunneling in soil apply a 0.05 to 0.1% solution as a drench or soil injection at intervals to establish a continuous treated zone. Treat along the edge of walls, driveways or other hard surfaces where ants are tunneling beneath the surface.

Aerial Nests: If ant nests are located in tree hollows or non-structural wooden construction (e.g.; posts, fences, decks) treat the interior cavity and/or the nest site by injecting a 0.05 to 0.1% solution as a spray mist, or sufficient volume of foam.

Apply in sufficient water to cover the foliage and soil area being treated. Maximum application is once per month to maintain control.

Do not allow residents or pets into the immediate area during the application or contact with treated areas

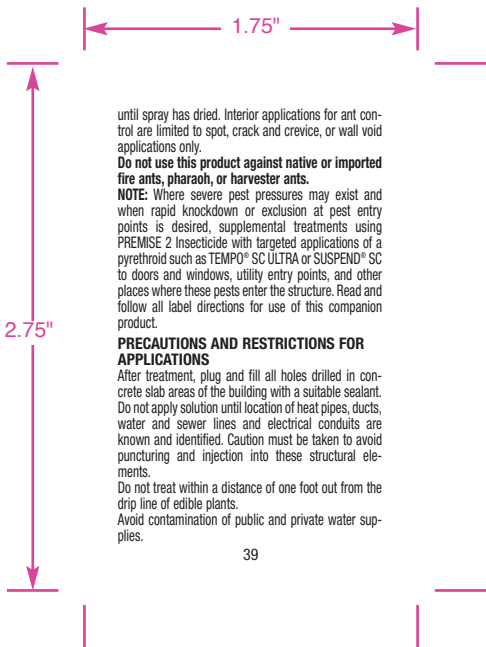

until spray has dried. Interior applications for ant control are limited to spot, crack and crevice, or wall void applications only.

Do not use this product against native or imported fire ants, pharaoh, or harvester ants.


NOTE: Where severe pest pressures may exist and when rapid knockdown or exclusion at pest entry points is desired, supplemental treatments using PREMISE 2 Insecticide with targeted applications of a pyrethroid such as TEMPO® SC ULTRA or SUSPEND® SC to doors and windows, utility entry points, and other places where these pests enter the structure. Read and follow all label directions for use of this companion product.


PRECAUTIONS AND RESTRICTIONS FOR APPLICATIONS


After treatment, plug and fill all holes drilled in concrete slab areas of the building with a suitable sealant. Do not apply solution until location of heat pipes, ducts, water and sewer lines and electrical conduits are known and identified. Caution must be taken to avoid puncturing and injection into these structural elements.


Do not treat within a distance of one foot out from the drip line of edible plants.

Avoid contamination of public and private water supplies.

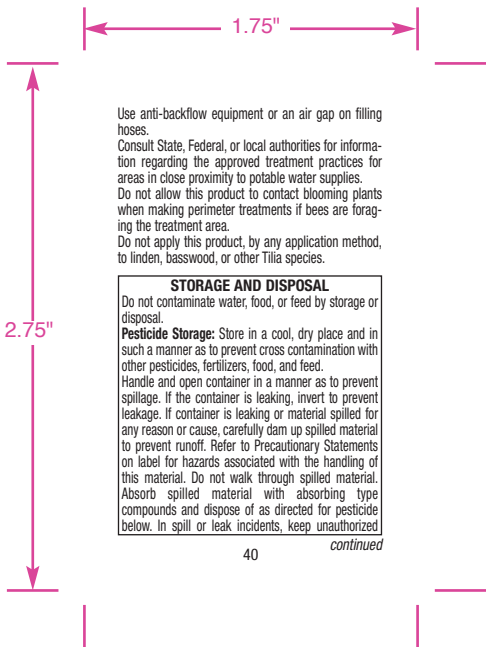

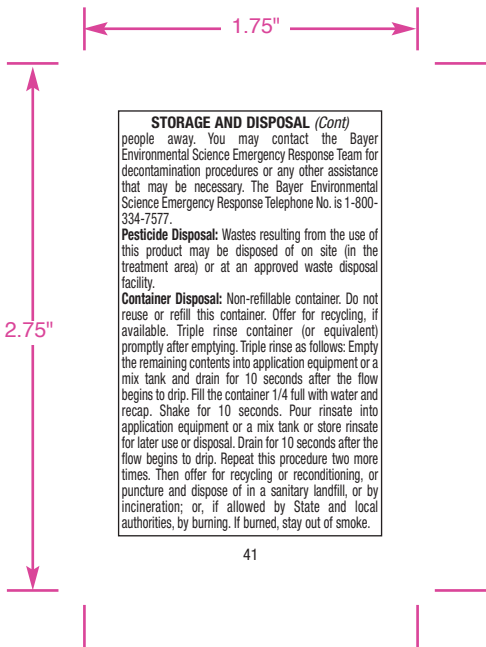

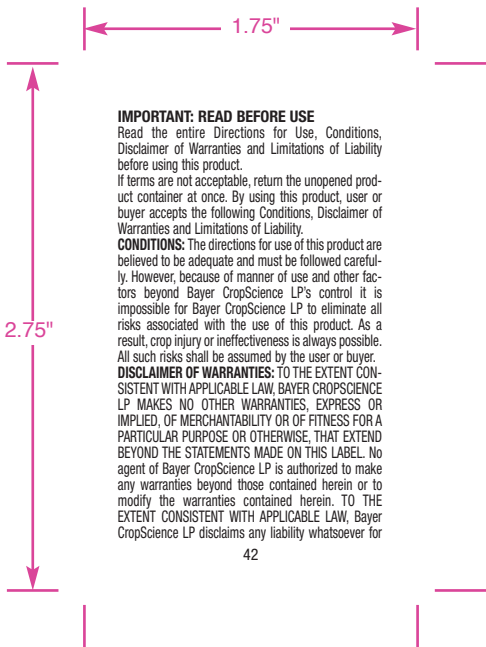

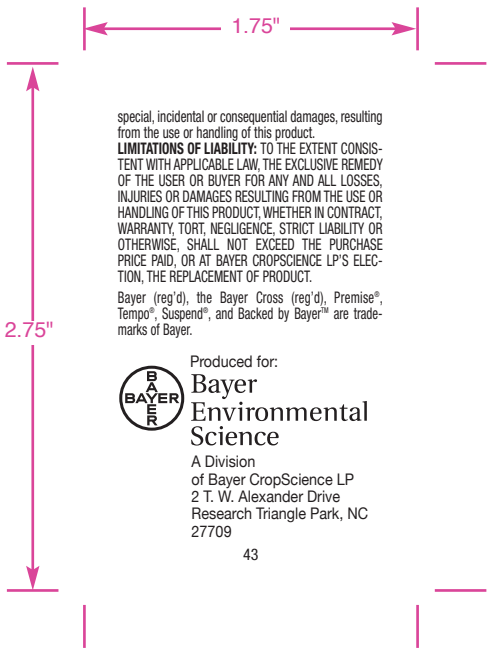

special, incidental or consequential damages, resulting from the use or handling of this product.

LIMITATIONS OF LIABILITY: TO THE EXTENT CONSISTENT WITH APPLICABLE LAW, THE EXCLUSIVE REMEDY OF THE USER OR BUYER FOR ANY AND ALL LOSSES, INJURIES OR DAMAGES RESULTING FROM THE USE OR HANDLING OF THIS PRODUCT, WHETHER IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, SHALL NOT EXCEED THE PURCHASE PRICE PAID, OR AT BAYER CROPSCIENCE LP'S ELECTION, THE REPLACEMENT OF PRODUCT.


Bayer (reg'd), the Bayer Cross (reg'd), Premise®, Tempo®, Suspend®, and Backed by Bayer™ are trademarks of Bayer.




Produced for:

Bayer Environmental Science

A Division
of Bayer CropScience LP
2 T. W. Alexander Drive
Research Triangle Park, NC
27709

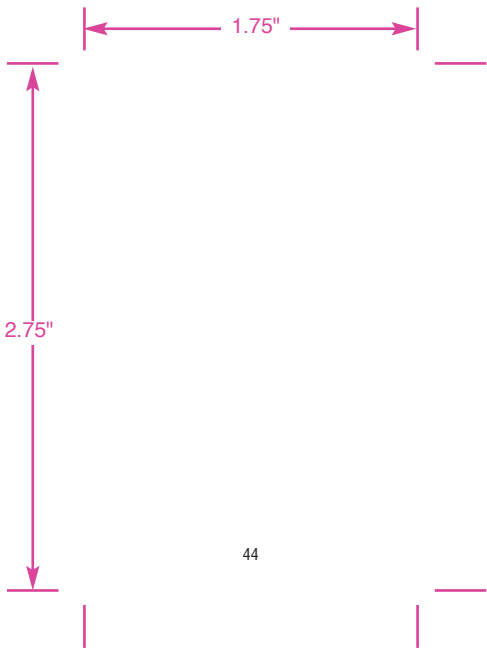

44

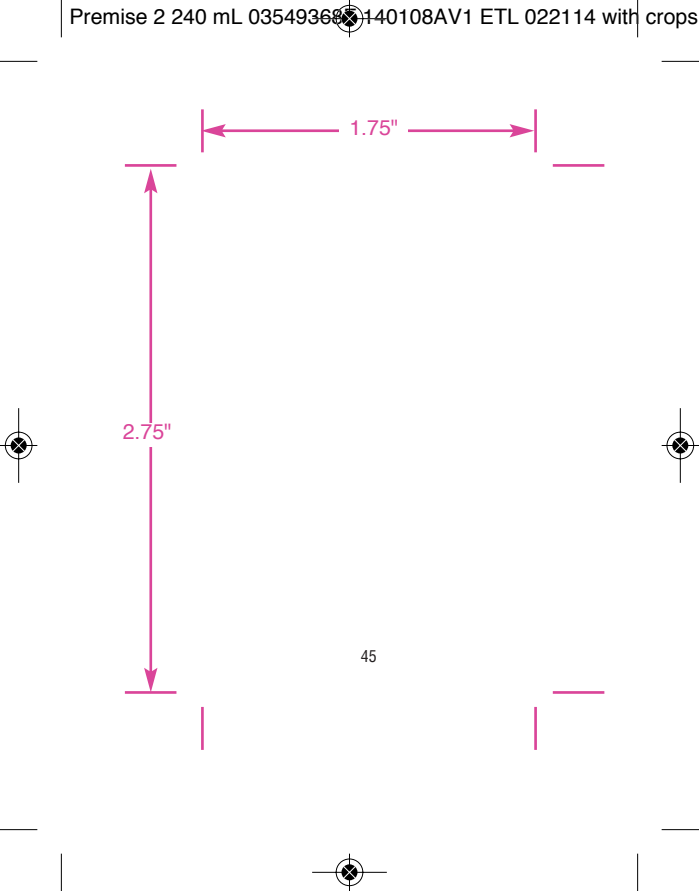

2.75"

1.75"

45

2.5"

3"

PREMISE® 2

Insecticide

For use by individuals/firms licensed or registered by the state to apply termiticide products. States may have more restrictive requirements regarding qualifications of persons using this product. Consult the structural pest control regulatory agency of your state prior to use of this product.

ACTIVE INGREDIENT:

Imidacloprid, 1-[(6-Chloro-3-pyridinyl)methyl]-N-nitro-2-imidazolidinimine..... 21.4%

INERT INGREDIENTS:..... 78.6%

Total: 100.0%

Contains 2 pounds of imidacloprid per gallon.

Shake well before using.

EPA Reg. No. 432-1331

EPA Est. No. 432-TX-1

**STOP - READ THE LABEL
BEFORE USE.**

**KEEP OUT OF REACH OF
CHILDREN.**

CAUTION

Net Contents:

8.12 fl. oz. (240 mL)

02584607

03549368F 140108AV1