Lotus. Sametime Unified Telephony 8

Session Initiation Protocol (SIP)

This chapter provides information on the following topics:

- SIP Overview
- Using SIP in the Media Server.

SIP Overview


The SIP communication protocol was developed by the IETF as application layer protocol. It originally realized the signaling of IP-based voice transmission, but has in the meantime been expanded for applications in the areas video and instant messaging. Since SIP within this scope only realizes the signaling of connections, it uses various other protocols for the actual transmission of usable information. This includes e. g. the RTP protocol used for transmitting real-time data.

In the voice area, SIP enables all basic call functions such as connection set-up and shutdown, call notification or dial tone. Beyond that, further features are already implemented in SIP. Among these are the features parking, call transfer or conference switch. Considering the supported features, SIP can by now be compared with H.323.

Contrary to H.323, the SIP communication model realizes a big part of the functions in the terminal device. This significantly differentiates it from the traditional communication concepts in which the actual intelligence lies in the network nodes.

SIP Network Components

An SIP network consists of different SIP-specific logic components. These intercommunicate in a defined way.

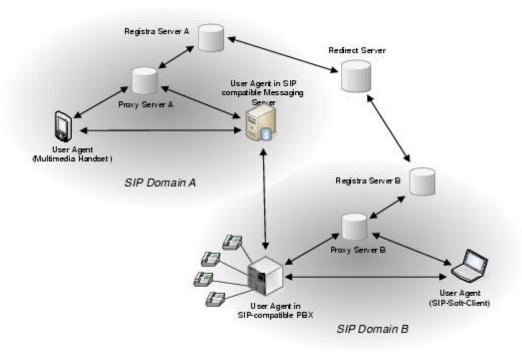

The logic components of an SIP network are:

• User Agent (UA)

The user agent represents the terminal device in an SIP network. It signals and manages SIP connections that it initiates with other user agents or proxy servers. Upon logging in at an SIP network a user agent registers with the registrar server in charge.

The user agent is logically divided into the user agent client and the user agent server. The user agent

client is in charge of initiating SIP connections. The user agent server replies to connection requests. User agents are e.g. SIP telephones or an SIP client software.

Registrar Server

Registrar servers are responsible for registering user agents. The information collected during the logging of the single user agents are transferred to the location server that administer these data for future requests.

Registrar servers often operate on the same platform as the associated location server (see below).

Location Server

Each SIP domain has a location server. This server administers e.g. information on the bindings of logical and physical SIP addresses (cf. <u>Section "Addressing an SIP subscriber"</u>). Location servers often operate on the same platform as the associated registrar server (see below).

Proxy Server

Each SIP domain has a proxy server. This server receives the connection requests by user agents or other proxy servers. The proxy server is logically divided into a client and a server component, which perform individual connection requests on behalf of user agents.

With handling a connection request, two cases must be differentiated:

- The communication participants are in the same SIP domain
 In this case only the proxy server of the domain concerned is involved in the connection establishment.
- The communication participant is in different SIP domains
 In this case the two proxy servers of the domains concerned are involved in the connection establishment.

For the resolution of SIP addresses the proxy server communicates with the associating location and redirect server.

Redirect Server

A redirect server processes proxy server requests as regards configured call reroutings for user agents. It operates domain-spanning.

For the resolution of SIP addresses the redirect server communicates with the associated location server.

Addressing an SIP subscriber

SIP addressing is based on a logical and a physical² SIP address. The logical address is assigned to the person "user", the physical address is allocated for the device, with which the user registers with the registrar server. The actual routing within an SIP network occurs based on the physical address.

Example:







Martin Martin@MyDomain.com

Laptop31@OtherDomain.com

Logical Address

'Physical' Address

User Martin has in our example the logical address *Martin @MyDomain.com*. Under this address he is to be addressed in the entire SIP network. His physical address, according to which messages are routed for him in the network, depends on the terminal device with which he registers in the SIP network. In our example Martin registers with a laptop. This laptop has the physical address*Laptop31@OtherDomain.com*.

If another SIP subscriber wants to establish a communication relation to Martin, he/she addresses the connection setup with the logical destination address *Martin@MyDomain.com*. This makes sense since the SIP users do not know via which terminal device a subscriber registers. In the course of the connection setup this logical address is resolved by the location server into the current physical address.

Interaction between logical SIP Components

The interactions between the logical SIP components are based on various transactions. These consist in each case

of


- a request sent by an SIP client to an SIP server
- an associated reply sent by an SIP server to an SIP client

Let's take a look at two simple examples to describe the general interactions between the SIP components to establish a connection between two user agents. For reasons of simplification we discount the registrar and redirect server function.

The first example describes the connection establishment between two agents that are in the same SIP domain. In the second case the user agents involved are in different SIP domains.

Connection between two Subscribers in one SIP Domain


Let us see how a SIP connection is established between two SIP clients that are in the same SIP domain.

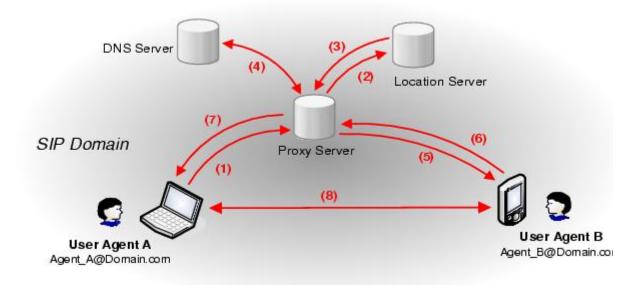

- User-agent A initiates a connection to user-agent B. For this purpose he/she sends a corresponding connection request to the proxy server of the domain. The connection request contains the logical SIP address of the destination party - Agent_B@Domain.com.
- The proxy server requests the registered address information of the destination subscriber from the location server.
- The location server replies to the proxy server with the physical SIP address of the destination subscriber.
- Subsequently, the proxy server resolves the received SIP address into an IP address via the DNS server in charge.
- 5. The proxy server sends an individual connection request to the IP address of user-agent B.
- 6. User-agent B replies to this request and informs the proxy server that he/she accepts the requested connection.
- 7. The proxy server correspondingly accepts the original connection request of user-agent A (see 1).
- 8. User-agent A then establishes a direct RTP connection to user-agent B.

Connection between two Subscribers in different SIP Domains

The following example shows the general structure of an SIP connection between two subscribers in different domains.

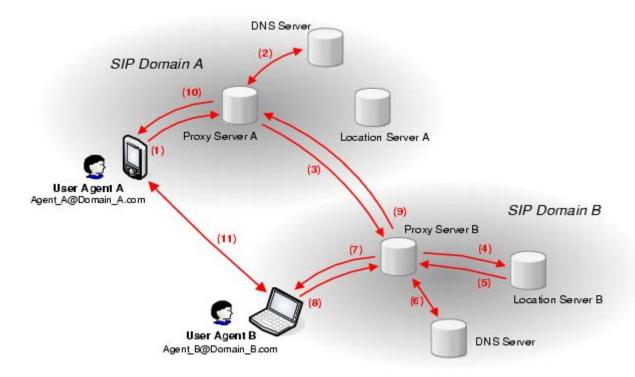

- 1. User-agent A initiates a connection to user-agent B. For this purpose he/she sends a corresponding connection request to proxy server A of his/her own domain. The connection requests contains the logical SIP address of the destination party Agent_B@Domain_B.com.
- 2. By the domain name of the destination address *Domain_B.com*, proxy server A recognizes that user agent B does not belong to the own domain A. Subsequently, it queries the IP address of the proxy server responsible for domain B at the DNS server in charge. Thus the IP address of proxy server B.
- 3. Proxy server A sends an individual connection request to proxy server B³.
- 4. Proxy server B then requests the SIP address under which the destination subscriber is registered in the SIP network from the location server in charge.
- 5. The location server replies with the physical address of the destination subscriber.
- 6. Subsequently, the proxy server resolves the received address into an IP address via the DNS server in charge.
- 7. Proxy server B now sends an individual connection request to user-agent B.
- 8. User-agent B replies to this request and informs proxy server B that he/she accepts the requested connection.
- 9. Proxy server B accepts the connection request by proxy server A (see 4).
- 10. Afterwards, proxy server A accepts the connection request by user-agent A (see 1).
- 11. User-agent A then establishes a direct RTP connection to user-agent B.

You find further information on SIP in the appropriate literature or in the relevant RFC standards of the IETF (www.ietf.org).

IBM® Lotus® Sametime® Unified Telephony 8

Top <u></u>
♣

Trademarks | Submit Feedback

A communication connection between two user agents is directly established via RTP.

²The physical SIP address is not to be confused with an address of the physical OSI layer.

³Consequently, proxy server A becomes the *Outbound*, proxy server B the *Inbound* proxy server.