

Part number 400 includes 1 each of part numbers 037, 465 and 2 each of part numbers 125, 468 and 4 each of part numbers 074, 452.

The equipped pipe in the water heater may differ from pipe set 469, however the pipe set 469 can utilize for service part.

| Part No. | Part Names | Order Nos. | Qty/Unit |
|----------|--------------------------------------------|------------|--------------|
| 001 | Front Cover - G0-C3260WX-FF US | SKJ72N9 | 1<EZ Series> |
| | Front Cover - G0-C3260WX-FF PB US | SKJ72Z5 | 1<UT Series> |
| 002 | Gasket - Front Cover Top | FABL011 | 1 |
| 003 | Gasket - Front Cover Sides | CVAL004 | 2 |
| 004 | Gasket - Front Cover Top and Bottom | AMPJ015 | 1 |
| 005 | Label - Outside Front Cover Caution Label | ELVR003 | 1 |
| 006 | Label - Inside Front Cover Caution Label | EYSK006 | 1 |
| 008 | Label - Name Plate DV/00 | FDAX151 | 1 |
| 009 | Parts List/Technical sheet | FDAX251 | 1 |
| 011 | Wiring Diagram | FDBK002 | 1 |
| 021 | Wire Grommet - Rubber | CXPA025 | 2 |
| 022 | External Remote Terminal Block | EBJA017 | 1 |
| 031 | Intake Flue w/ O-Ring and Gasket (SET) | SKJ71W1 | 1 |
| 032 | Exhaust Flue w/ O-Ring and Gasket (SET) | SKJ71W2 | 1 |
| 033 | Filter - Intake Air | FABF101 | 1 |
| 034 | Clamp - Exhaust Pipe | FABF108 | 2 |
| 035 | Gasket - Exhaust Flue | FABL101 | 2 |
| 036 | O-Ring - Exhaust Pipe | FABL102 | 2 |
| 037 | O-Ring - Exhaust Flue | FABL103 | 1 |
| 041 | Thermistor - Air | EZWMA101 | 1 |
| 048 | Wiring Through Way | GBLA025 | 1 |
| 071 | Screw - Front Cover with washer MAX12 S410 | | |
| 074 | Screw - Pre-Coated Washed MAX12 S410 | | |
| 075 | Screw - Long Mounting Machine MAX12 S430 | | |
| 076 | Screw - Remote Terminal MAX10 S430 | | |

This diagram illustrates the exploded view of a microscope system, showing the relationship between various components. The components are numbered as follows:

- Top Section (Microscope Head):** Includes the eyepiece (433), eyepiece holder (434), objective lens (438), objective lens holder (437), objective lens (436), objective lens holder (435), objective lens (434), objective lens holder (433), objective lens (432), objective lens holder (431), objective lens (430), objective lens holder (429), objective lens (428), objective lens holder (427), objective lens (426), objective lens holder (425), objective lens (424), objective lens holder (423), objective lens (422), objective lens holder (421), objective lens (420), objective lens holder (419), objective lens (418), objective lens holder (417), objective lens (416), objective lens holder (415), objective lens (414), objective lens holder (413), objective lens (412), objective lens holder (411), objective lens (410), objective lens holder (409), objective lens (408), objective lens holder (407), objective lens (406), objective lens holder (405), objective lens (404), objective lens holder (403), objective lens (402), objective lens holder (401).
- Body Section:** Includes the body tube (431), body tube holder (430), body tube (429), body tube holder (428), body tube (427), body tube holder (426), body tube (425), body tube holder (424), body tube (423), body tube holder (422), body tube (421), body tube holder (420), body tube (419), body tube holder (418), body tube (417), body tube holder (416), body tube (415), body tube holder (414), body tube (413), body tube holder (412), body tube (411), body tube holder (410), body tube (409), body tube holder (408), body tube (407), body tube holder (406), body tube (405), body tube holder (404), body tube (403), body tube holder (402), body tube (401).
- Base Section:** Includes the base (436), base holder (435), base (434), base holder (433), base (432), base holder (431), base (430), base holder (429), base (428), base holder (427), base (426), base holder (425), base (424), base holder (423), base (422), base holder (421), base (420), base holder (419), base (418), base holder (417), base (416), base holder (415), base (414), base holder (413), base (412), base holder (411), base (410), base holder (409), base (408), base holder (407), base (406), base holder (405), base (404), base holder (403), base (402), base holder (401).

[illegible]

| Part Nos | Part Names | Order Nos | Q'ty/unit |
|----------|-------------------------------------------------|-----------|-----------|
| 400 | Heat Exchanger Kit (SET) | SKJ7260 | 1 |
| 401 | Mounting Plate - Ignition Plug | FDA0655 | 1 |
| 402 | Ignition Plug w/ Gasket | SKJ72MT | 1 |
| 403 | Gasket - Ignition Plug (HEX) | FDA0109 | 1 |
| 408 | Silicon Sleeve | FDA0252 | 1 |
| 411 | Water Flow Sensor (SET) | EDG0101 | 1 |
| 412 | Magnetic Sensor | DAND0019 | 1 |
| 413 | Water Servo - Bypass (SET) | ETFD050 | 1 |
| 414 | Water Servo - Main (SET) | FMB011 | 1 |
| 415 | Thermistor Holding Plate | ALS0088 | 1 |
| 416 | Thermistor - Red | EZM0002 | 1 |
| 417 | Inlet Water Connection (SET) | SKJ72M7 | 1 |
| 418 | Water Filter Cap | OTJ0006 | 1 |
| 419 | Water Filter | EGBD032 | 1 |
| 420 | Outlet Water Connection (SET) | SKJ72M2 | 1 |
| 421 | Mounting Plate - Igniter | FDA0415 | 1 |
| 422 | Thermistor - Pink | EZM0003 | 1 |
| 423 | Thermistor - Blue | EZM0001 | 1 |
| 425 | Wire Cover - Servo | EBTD023 | 2 |
| 426 | Water Connector - T-Elbow | FDA0017 | 1 |
| 427 | Thermistor - Yellow | EZM0004 | 1 |
| 428 | Water Connector - Elbow | FDA0116 | 2 |
| 429 | Pipe - Primary SS HEX to T-Elbow | FDA0005 | 1 |
| 430 | Pipe - Secondary SS HEX to Primary SS HEX | FDA0023 | 1 |
| 431 | Pipe - T-Elbow to Outlet Water Connection | FDA003 | 1 |
| 433 | Drain Cook | ORU0003 | 2 |
| 434 | O-Ring - High Temp P3 | SAD6833 | 2 |
| 436 | Pipe - Elbow to Water Flow Sensor | FDA0031 | 1 |
| 437 | Freeze Prevention Heater - Rectangle | ERN0002 | 4 |
| 438 | Freeze Prevention Heater - Round Short | ERN0003 | 2 |
| 439 | Wiring Harness - Bypass Water Servo | ETVJ033 | 1 |
| 440 | High Limit Switch - 194 | FAB0001 | 1 |
| 441 | Wiring Harness - Main Water Servo | BBJ024 | 1 |
| 442 | High Voltage Igniter Wire L175 | ALSJ078 | 2 |
| 444 | Igniter (SET) | SKJ7279 | 1 |
| 449 | Pipe - Secondary SS HEX to Primary SS HEX | FDA0025 | 1 |
| 450 | Drain Connection | SNB011 | 1 |
| 451 | "C" Clamp - Water Pipe 16-25 | SAD6593 | 6 |
| 452 | O-Ring - High Temp P16 | 3223302 | 17 |
| 453 | "C" Clamp - Water Pipe 16A | 6340300 | 10 |
| 454 | O-Ring - Thermistor High Temp P4 | 1323700 | 4 |
| 455 | "C" Clamp - Thermistor | ORU0055 | 3 |
| 456 | Water Connection Elbow | JBG0001 | 1 |
| 457 | O-Ring - High Temp P6 | 3264408 | 1 |
| 458 | Cover - Pipe-Inlet Water | FDA0113 | 1 |
| 460 | "C" Clamp - 1/4" tube 6-13 | SAD6594 | 1 |
| 461 | Clamp - Freeze Prevention | MMUJ001 | 3 |
| 462 | Clamp - Freeze Prevention | ELVJ011 | 1 |
| 463 | Gasket - Connection | FDAJ008 | 2 |
| 465 | Gasket - Exhaust Duct | FDAJ003 | 1 |
| 468 | Freeze Prevention Heater - Condensate Container | ETHH004 | 3 |
| 469 | Pipe SET - Secondary SS HEX to Primary SS HEX | SKJ733C | 1 |

| Part Nos | Part Names | Order Qty | Q' ty/unit |
|----------|-------------------------------------------------------------|-----------|------------|
| 101 | Venturi 199kbtuh - LP (SET) | SKJ7262 | 1<LP> |
| | Venturi 199kbtuh - NG (SET) | SKJ7263 | 1<NG> |
| 103 | Mounting Plate - Gas Valve | FDAA101 | 1 |
| 104 | Mounting Plate - Chamber | FAB0031 | 2 |
| 105 | Burner Chamber (SET) | SKJ7294 | 1 |
| 106 | Mounting Plate - Flame Lifting Detection | FDA0014 | 1 |
| 107 | Flame Lifting Detection w/ Gasket | SKJ7260 | 1 |
| 108 | Inlet Gas Connection w/ Screw (SET) | SKJ711X | 1 |
| 109 | Gas Valve (SET) | SKJ71W8 | 1 |
| 110 | Cover - Offset Adjustment | FABE011 | 1 |
| 111 | Gas Valve Outlet Connector (SET) | SKJ72MR | 1 |
| 112 | Gas Valve Inlet Connector (SET) | SKJ71VX | 1 |
| 113 | Gas Pipe (SET) | SKJ7285 | 1 |
| 114 | Fan Motor w/ Housing | SKJ72N5 | 1 |
| 117 | Cover - Gas Valve Connector | FAB0032 | 1 |
| 118 | Gasket - Flame Lifting Detection | FDA0020 | 1 |
| 121 | O-Ring - P20 | 1292004 | 2 |
| 122 | "C" Clamp -16B | 6340407 | 3 |
| 123 | O-Ring - P18 | 2110903 | 3 |
| 125 | Gasket - Burner | FDA0002 | 2 |
| 126 | Gasket - Chamber Inlet | FDA0004 | 1 |
| 130 | O-Ring - Venturi φ60 | FAB0107 | 1 |
| 131 | Non-return valve (SET) | SKJ72T1 | 1 |
| 132 | Non-return valve cap | FDA0042 | 1 |
| 133 | O-ring - Non-return valve | FDA0005 | 1 |
| 172 | Screw - Long Mounting Machine with Spring Washer MAX12 S430 | | |
| 173 | Screw - Long Machine MAX12 S410 | | |
| 175 | Screw - Medium Machine 4X10 S410 | | |
| 176 | Screw - Mounting Machine M5X12 S430 | | |
| 177 | Screw - Long Mounting Machine M5X25 S430 Scoat | | |
| 178 | Screw - Medium Machine MAX10 S410 for Aluminum | | |
| 179 | Screw - Short Machine M3X5 S410 for Aluminum | | |
| 180 | Screw - Truss Head Self Drilling Tapping MAX18 S410 | | |
| 181 | Screw - Inlet and Manifold Gas M4X8 | | |

[illegible]

Part number 601 includes 1 each of part numbers 037, 465 and 4 of part number 074.

The diagram shows the following components and their assembly sequence:

- 601**: The main upper assembly, which includes parts 037, 465, and 074.
- 607**: A base plate with a grid of holes.
- 571**: Two screws used to secure the base plate.
- 602**: A small circular component.
- 603**: A small rectangular component.
- 572**: Two screws used to secure the main assembly to the base plate.
- 616**: A small circular component.
- 612**: A curved component.
- 611**: A small circular component.
- 616**: A small circular component.
- 606**: A small circular component.
- 468**: A small rectangular component.
- 173**: A small circular component.

[illegible]

The diagram illustrates the electronic control unit. On the left, a tree-like structure shows the unit's connections, with labels 481, 703, and 702. A label 'WX FDA' is visible at the bottom. On the right, a detailed view of the unit shows its internal components, including a main body (700), a control panel (704), and various connectors (481, 731, 572, 702). The unit is shown in a perspective view, highlighting its modular design.

Included Accessories

801
802
803
804

※ To request a French version of the Owner's guide or Installation manual, Reach out to our customer care. Contact details are available on the rating plate of the appliance.

| <Special part> | |
|---------------------|------------------|
| Special part | Special part no. |
| Owner's guide | 888 |
| Installation manual | 889 |

Quick-Connect Cord QC-2

961

481 x4

963 x2

| part | part no. |
|---------------------|----------|
| Installation manual | 964 |

It is required for replacing one of two models that are connected by Quick-Connect using QC-1 with this model. (It is used for connecting QC-1, which has been constructed, with this model.)

962

0-ring Kit

981

074 x10 075 x5 175 x10 176 x5 177 x5 178 x5 179 x3 180 x5 486 x5 490 x5 571 x5 572 x10 989 x3 990 x3

982


123 x3 452 x5 454 x3 457 x3 987 x3 988 x3

| Part Nos | Part Names | Order Nos | Q' ty/unit |
|----------|-------------------------------------------------------------|-----------|--------------|
| 700 | Circuit Board | SKJ72M0 | 1 |
| 702 | Power Supply Cord | PSL0001 | 1 |
| 703 | Wiring Harness - G0-C3260WX-FF US | SKJ72N6 | 1 |
| 704 | Wire Clamp - Nylon #4 | 7287909 | 1 |
| 731 | Screw - Remote Terminal Cover M4X12 S410 | | |
| 750 | Remote Controller - RC-7651M-A US (SET) | SHC71HM | 1<EZ Series> |
| | Remote Controller - RC-7651M-A NB (SET) | SHC71LG | 1<UT Series> |
| 751 | Cover - Remote | QHIA013 | |
| 752 | Mounting Gasket - Remote | QHIA115 | 1 |
| 760 | Screw Package - Remote (SET) | QQUA100 | 1 |
| 761 | Screw - Round Head Wood M4.1X25 S305 | | |
| 762 | Dry Wall Anchors 6X25 | | |
| 800 | Box - G0-C3260WX-FF US | SKJ72M0 | 1<EZ Series> |
| | Box - G0-C3260WX-FF PB US | SKJ72Z7 | 1<UT Series> |
| 801 | Remote Cord - 6ft | ETHM001 | 1 |
| 802 | Wall Mounting Plate | FDMA103 | 1 |
| 803 | Wood Screw Set1 | SDA028 | 1 |
| 804 | Screw - Round Head Wood 4.8X38 S305 | | |
| 888 | Owner's Guide - G0-C3260WX-FF US | S888163 | 1<EZ Series> |
| | Owner's Guide - G0-C3260WX-FF PB US | S888190 | 1<UT Series> |
| 889 | Installation Manual - G0-C3260WX-FF US | S888164 | 1<EZ Series> |
| | Installation Manual - G0-C3260WX-FF PB US | S88819E | 1<UT Series> |
| 961 | Quick Connect Cord - 0C-2 | 0706377 | 1 |
| 962 | Adaptor - 0C-1 to 0C-2 | SA64672 | 1 |
| 963 | Wire Clamp - Nylon #3 | 7223901 | 2 |
| 964 | Installation Manual - 0C-2 | SA08992 | 1 |
| 981 | Screw Kit | SKJ72N0 | 1 |
| 982 | 0-Ring Kit | SKJ72N1 | 1 |
| 987 | 0-Ring - High Temp P22 | 7573308 | 3 |
| 988 | 0-Ring - High Temp P12.5 | 3359606 | 3 |
| 989 | Screw - Short Mounting Machine with Spring Washer M3X8 S430 | | |
| 990 | Screw - Round Head Short Tapping M5X8 S410 | | |

This procedure is only intended for use by a qualified service professional or authorized Service Representative. Any unauthorized use of this procedure may result in voiding the warranty. Reach out to our customer care for additional support. Contact details are available on the rating plate of the appliance.

** Connect the blue connector marked "FLUSH" for flushing near the Circuit Board when flushing the Heat Exchanger.

1. Close the gas supply valve.
2. Close the water inlet valve (V1) and the water outlet valve (V2).
3. Connect the one drain hose (H1) to the drain valve (V3), and then the other to the circulating pump.
4. Connect the drain hose (H2) to the circulating pump.
5. Connect the drain hose (H3) to the drain valve (V4).
6. Pour 1 gallon of "Calcium, Lime and Rust Removal Product" and 1 gallon water into the bucket. Recommend "Calcium, Lime and Rust Removal Product" for flushing.
7. Place the both drain hoses (H2 and H3) into the bucket filled with the flushing solution.
8. Open the both drain valves (V3 and V4).

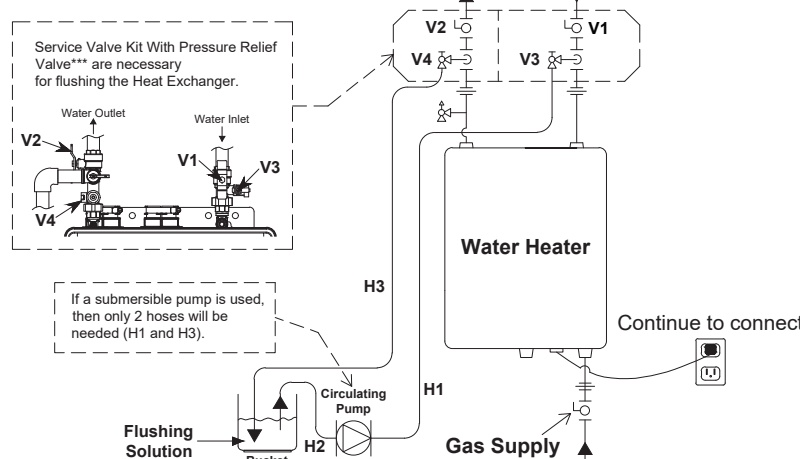


Water Drain Plug

NOTE : The unit has the "Water Drain Plug" from the bottom of the water heater. Place a bucket under the water heater to drain water from the "Water Drain Plug". Carefully unscrew the "Water Drain Plug" to rinse flushing solution out of the water heater for about 10 seconds. Then close the "Water Drain Plug".

4. Close the drain valve (V4) and then remove the drain hose (H3) from the drain valve (V4).
5. Remove the drain hose (H1) from the drain valve (V3).
6. Disconnect the blue connector marked "FLUSH" for flushing.
The code "C00" goes out on the Remote Controller.
7. Close the Front Cover.
8. Open the gas supply valve and water outlet valve (V2).
9. Check for correct operation of the water heater.

1. Connect the blue connector marked "FLUSH" for unit needing to be flushed.
(The water heater is isolated from Quick Connect Multi System when the blue connector marked "FLUSH" for flushing is connected. Not need to disconnect the Quick Connect Cord.)


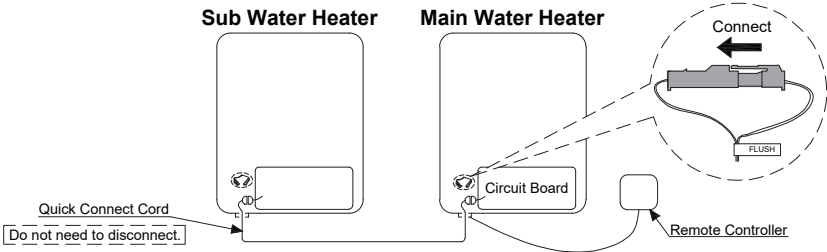


- CCC** is displayed when the Main Water Heater's blue connector is connected

FCC is displayed when the Sub Water Heater's blue connector is connected.


3. Turn on the circulating pump to circulate the flushing solution through the water heaters for 1 hour at a rate of 1.5 gallons per minute or more.

4. When 1 hour passes, the code "C00" is flashing on the Remote Controller. Do not disconnect the blue connector marked "FLUSH" for flushing.

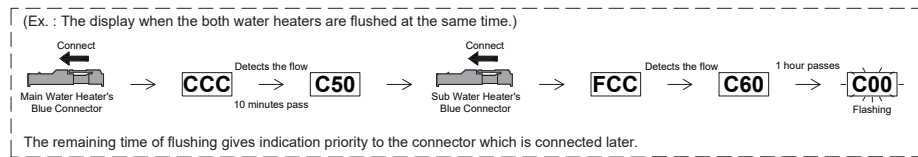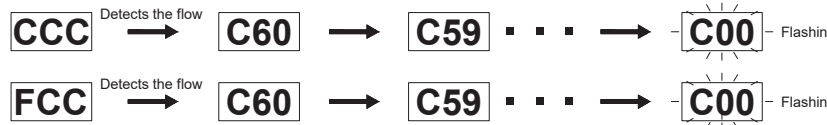

5. Turn off the circulation pump.
6. Rinse and clean the flushing solution out of the water heaters in accordance with "Procedure 3". (See the "Procedure 3.1-3.5".)
- Water

NOTE: Place a bucket under the water heater to

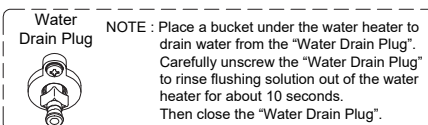

7. Disconnect the "blue connector for flushing". The Code "C00" goes out on the Remote Controller.
8. Close the Front Covers.
9. Open the gas supply valves and water outlet valves.
10. Check for correct operation of the water heaters.

Refer to appliance's installation manual or reach out to our customer care, if more information is needed for flushing. Contact details are available on the rating plate of the appliance.